
OS-9 Technical Reference



Contents

Chapter 1 System Organization	
I/O System Modules	
Color Computer OS-9 Modules	
Kernel, Clock Module, and INIT	
Input/Output Modules	
I/O Manager	
File Managers	
Device Drivers	
Device Descriptors	
Shell	
Chapter 2 The Kernel	2-1
System Initialization	2-1
System Call Processing	
OS9Defs and Symbolic Names	
Types of System Calls	2-4
Memory Management	
Memory Use	
Color Computer OS-9 Typical Memory Map	
Memory Management Hardware	2-7
Multiprogramming	2-12
Process Creation	
Process States	
Execution Scheduling	
Signals	
Interrupt Processing	
Logical Interrupt Polling System	
Virtual Interrupt Processing	2-10
virtual interrupt riocessing	. 2-13
Chapter 3 Memory Modules	3-1
Module Types	
Module Format	
Module Header	
Module Body	
CRC Value	
Module Headers: Standard Information	
Sync Bytes	
Module Size	
Offset to Module Name	
Type/Language Byte	
Attributes/Revision Level Byte	
Header Check	

Module Headers: Type-Dependent Information	3-5
Executable Memory Module Format	
Chapter 4 OS-9's Unified Input/Output System	4-1
I/O System Modules	
The I/O Manager	
File Managers	
File Manager Structure	
Create, Open	
Makdir	
ChgDir	
Delete	
Seek	
Read	
Write	
ReadLn	
WriteLn	
GetStat, PutStat	
Close	
Interfacing with Device Drivers	
Device Driver Modules	
Device Driver Module Format	
OS-9 Interaction With Devices	
Suspend State (Level Two Only)	
Device Descriptor Modules	
Path Descriptors	4-18
Chapter 5 Random Block File Manager	5-1
Logical and Physical Disk Organization	5-1
Identification Sector (LSN 0)	
Disk Allocation Map Sector (LSN 1)	5-3
ROOT Directory	
File Descriptor Sector	
Directories	
The RBF Manager Definitions of the Path Descriptor	
RBF-Type Device Descriptor Modules	
RBF Record Locking	
Record Locking and Unlocking	
Non-Shareable Files	
End-of-File Lock	
Deadlock Detection	
RBF-Type Device Driver Modules	
The RBF Device Memory Area Definitions	
RBF Device Driver Subroutines	
TUDE DEVICE DELIVER DUDI GUILLED	0 10

Chapter 6 Sequential Character File Manager6-1SCF Line Editing Functions6-1Read and Write6-1Read Line and Write Line6-2SCF Definitions of the Path Descriptor6-2SCF-Type Device Descriptor Modules6-6SCF-Type Device Driver Modules6-9SCF Device Driver Subroutines6-10
Chapter 7 The Pipe File Manager (PIPEMAN)7-1
Chapter 8 System Calls8-1Calling Procedure8-1I/O System Calls8-2System Call Descriptions8-2User Mode System Calls Quick Reference8-3System Mode Calls Quick Reference8-5User System Calls8-7I/O User System Calls8-44Privileged System Mode Calls8-66Get Status System Calls8-112Set Status System Calls8-130
AppendicesA-1A Memory Module DiagramsA-1B Standard Floppy Disk FormatB-1C System Error CodesC-1


Index

. .

System Organization

OS-9 is composed of a group of modules, each of which has a specific function. The following illustration shows the major modules. Actual module names are capitalized.

I/O System Modules

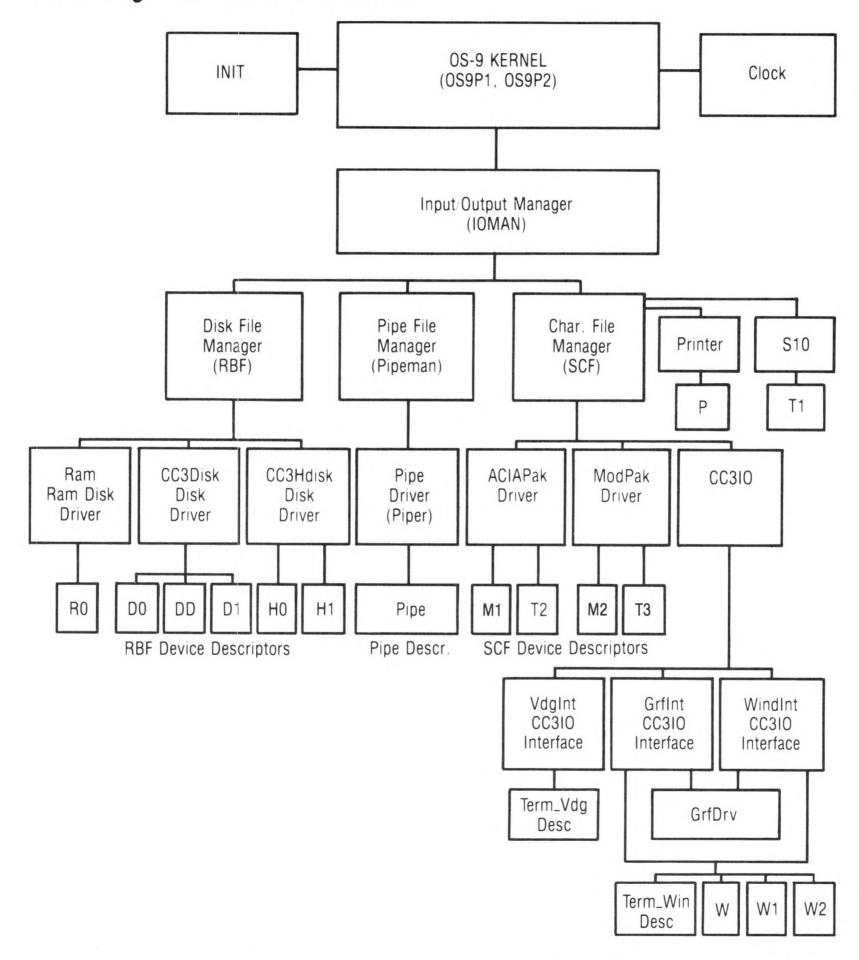

OS-9 COMPONENT MODULE ORGANIZATION

Color Computer OS-9 Modules

IOMAN Input/output management System initialization table

CLOCK Software routine time management RBF Random block file management

SCF Sequential character file management

PIPEMAN Pipe file management

CC3DISK Color Computer disk driver

CC3IO Color Computer input/output driver

The VDGINT (video display generator) provides both interface functions and low-level routines for Color Computer 2 VDG compatibility.

The GRFINT interface provides high-level graphics code interpretation and interface functions.

The WINDINT interface contains all the functions of GRFINT, along with additional support for Multiview functions. If you are using Multiview, exclude GRFINT from the system.

Both WINDINT and GRFINT use the low-level driver GRFDRV to perform the actual drawing on bitmap screens.

Term_VDG uses CC3IO and VDGINT. TERM_WIN and all window descriptors (W, W1, W2, and so on) use CC3IO, WIN-DINT, GRFINT, and GRFDRV modules.

Kernel, Clock Module, and INIT

The system's first level contains the *kernel*, *clock module*, and *INIT*.

The kernel provides basic system services, such as multitasking and memory management. It links all other OS-9 modules into the system.

The clock module is a software handler for the real-time clock hardware.

INIT is an initialization table used by the kernel during system startup. This table loads initial tasks and specifies initial table sizes and initial system device names. It is loaded into RAM (random access memory) by the OS-9 bootstrap module Boot. Boot also loads the OS9P2 and INIT modules during system startup.

There are two ways to run boot:

- Using the DOS command with Color Disk BASIC, Version 1.1, or later.
- Pressing the reset button after OS-9 is running.

Input/Output Modules

The remaining modules make up the OS-9 I/O system. They are defined briefly here and are discussed in detail in Chapter 4.

I/O Manager

The system's second level (the level below the kernel) contains the input/output manager, IOMAN. The I/O manager provides common processing for all input/output operations. It is required for performing any input/output supported by OS-9.

File Managers

The system's third level contains the *file managers*. File managers perform I/O request processing for similar classes of I/O devices. There are three file managers:

RBF manager The random block file manager processes

all disk I/O operations.

SCF manager The sequential character file manager han-

dles all non-disk I/O operations that operate one character at a time. These operations

include terminal and printer I/O.

PIPEMAN The pipe file manager handles pipes. Pipes

are memory buffers that act as files. Pipes are used for data transfers between

processes.

Device Drivers

The system's fourth level contains the *device drivers*. Device drivers handle basic I/O functions for specific I/O controller hardware. You can use pre-written drivers, or you can write your own.

Device Descriptors

The system's fifth level contains the *device descriptors*. Device descriptors are small tables that define the logical name, device driver, and file manager for each I/O port. They also contain port initialization and port address information. Device descriptors require only one copy of each I/O controller driver used.

Shell

The shell is the command interpreter. It is a program and not a part of the operating system. The shell is fully described in the *OS-9 Commands* manual.

The Kernel

The kernel is the core of OS-9. The kernel supervises the system and manages system resources. Half of the kernel (called OS9P1) resides in the boot module. The other half of the kernel (called OS9P2) is loaded into RAM with the other OS-9 modules.

The kernel's main functions are:

- System initialization after reset
- Service request processing
- Memory management
- Multiprogramming management
- Interrupt processing

I/O functions are not included in the list because the kernel does not directly process them. Instead, it passes I/O system calls to the I/O Manager for processing.

System Initialization

After a hardware reset, the kernel initializes the system. This involves:

- 1. Locating modules loaded in memory from the OS-9 Boot file.
- 2. Determining the amount of available RAM.
- 3. Loading any required modules that were not loaded from the OS-9 Boot file.

OS-9 Level Two cannot install new system calls using the OS-9 Level One system call F\$SSvc. F\$SSvc does not work with a Level Two user program because of the separation of system and user address space.

OS9P3 can be used to tailor the system to fit specific needs. The following listing is an example of how to use the OS9P3 module.

```
16:06:01
                                                 Page 001
Microware DS-9 Assembler 2.1 11/18/83
OS-9 Level TWO V1.2, part 2 - OS-9 System Symbol Definitions
00001
00002
00003
00011
00012
                        Module Header
00013
00014
                                   set Systm+Objct
                        Type
00015
       ØØC1
                                   set ReEnt+1
                        Revs
00016
       0081
                                         OS9End, OS9Name, Type, Revs, Cold, 256
              87CD005E
                                   mod
00017
        0000
                                    fcs "OS9p3"
              4F533970 DS9Name
00018
        000D
00019
                                    fcb 1 edition number
00029 0012
              01
                                   use defsfile
00030
                                   equ 2
                       level
        0002
00031
                                    opt -c
00032
                                   opt f
0033
00041
00042
00043
                         Routine Cold
00044
 00045
 00046
 00047
                                    leay SvcTbl,pcr get service routine
              318D0004
                          Cold
 00048
        0013
                                    OS9 F$SSvc install new service
              103F32
        0017
 00049
                                    rts
        001A
 00050
 00051
 00052
 00053
 00054
                          Service Routines Initialization Table
 00055 *
 00056 *
 00057
                         F$SAYHI equ $25 set up new call
 00058
        0025
              Add this to the user os9defs file.
 00059 *
 00060
```

```
00061
       001B
                        SvcTbl
                                  equ *
00062
       001B
                                  fcb F$SAYHI
00063 0010
            0001
                                  fdb
                                       SayHi-*-2
00064
       001E
                                  fcb
                                       $80
Microware DS-9 Assembler 2.1 11/18/83 16:06:01 Page 002
OS-9 Level TWO V1.2, part 2 - OS-9 System Symbol Definitions
00068
00069
             *Service call Say Hello to user
00070
00071
             *Input: U = Registers ptr
00072
                         R$X,u = Message ptr (if 0 send default)
00073
                         Max message length = 40 bytes.
00074
00075
             *Output: Message sent to standard error path of user.
00076
00077
             *Data:
                      D.Proc
00078
00079
00080
       001F
             AE44
                      SayHi
                                      R$Х,ц
                               ldx
                                                get mess. address
                                bne
             2619
                                      SayHi6
00081
       0021
                                                bra if not default
                               ldy D.Proc
00082
       0023 109E50
                                                get proc descr ptr
                                    P$SP,y get caller's stack
             EE24
00083
       0026
                                ldu
00084
                                      -40,u room for message
       0028
            33C8D8
                               leau
       002B 96D0
00085
                                      D.SysTsk system's task num
                               lda
00086
       ØØ2D
             E626
                                      P$TASK,y caller's task num
                               ldb
00087
       002F
            108E0028
                               ldy
                                      #40
                                                set byte count
                                      Hello,pcr destination ptr
00088
       0033
             308D0012
                               leax
00089
       0037 103F38
                                      F$Move
                                                mess into user mem
00090 003A 30C4
                               leax
                                       Ø,u
       003C
00091
           108E0028
                       SayHi6
                                      #40
                              ldy
                                                get max byte count
                               ldu D.Proc get proc desc ptr
00092
       0040
             DE50
00093 0042 A6C832
                                    P$PATH+2,u path num of stderr
                               lda
00094 0045 103F8C
                               059
                                    I$WritLn write mess line
00095
       0048
             39
                               rts
00096
                      Hello fcc "Hello there user."
00097
      0049 48656060
00098
       005A
                              fcb
             ØD
                                     $D
00099
00100
      005B
             5104B6
                             emod
                                    module CRC
```

00101

System Call Processing

System calls are used to communicate between OS-9 and assembly-language programs for such functions as memory allocation and process creation. In addition to I/O and memory management functions, system calls have other functions. These include interprocess control and timekeeping.

System calls use the SWI2 instruction followed by a constant byte representing the code. You usually pass parameters for system calls in the 6809 registers.

OS9Defs and Symbolic Names

A system-wide assembly-language *equate file*, called OS9Defs, defines symbolic names for all system calls. This file is included when assembling hand-written or compiler-generated code. The OS-9 assembler has a built-in *macro* to generate system calls. For example:

OS9 I\$Read

is recognized and assembled as equivalent to:

SWI2 FCB I\$Read

The OS-9 assembly macro OS9 generates an SWI2 function. The label I\$Read is the label for the code \$89.

Types of System Calls

System calls are divided into two categories, *I/O calls* and *function calls*.

I/O calls perform various input/output functions. The kernel passes calls of this type to the I/O manager for processing. The symbolic names for I/O calls begin with I\$. For example, the Read system call is called I\$Read.

Function calls perform memory management, multi-programming, and other functions. Most are processed by the kernel. The symbolic names for function calls begin with F\$. For example, the Link function call is called F\$Link.

The function calls include *user calls* and privileged *system mode* calls. (See Chapter 8, "System Calls", for more information.)

Memory Management

Memory management is an important operating system function. Using memory modules, OS-9 manages the logical contents of memory and the physical assignment of memory to programs.

All programs that are loaded must be in the memory module format. This format allows OS-9 to maintain a module directory of all the programs in memory. The directory contains information about each module, including its name and address and the number of processes using it. The number of processes using a module is called the module's *link count*.

When a module's link count is zero, OS-9 deallocates its part of memory and removes its name from the module directory.

Memory modules are the foundation of OS-9's modular software environment. Advantages of memory management are:

- Automatic runtime linking of programs to libraries of utility modules
- Automatic sharing of re-entrant programs
- Replacement of small sections of large programs into memory for update or correction

Memory Use

OS-9 reserves some space at the top and bottom of RAM for its own use. The amount depends on the sizes of system tables that are specified in the INIT module.

OS-9 pools all other RAM into a free memory space. As the system allocates or deallocates memory, it dynamically takes it from or returns it to this pool. RAM does not need to be contiguous because the memory management unit can dynamically rearrange memory addresses.

The basic unit of memory allocation is the 256-byte page. OS-9 always allocates memory in whole numbers of pages.

The data structure that OS-9 Level Two uses to keep track of memory allocation is a 256-byte *bit map*. Each bit in this table is associated with a specific page of memory. A cleared bit indicates that the page is free and available for assignment. A set bit indicates that the page is in use (that no RAM is free at that address). OS-9 Level Two always allocates memory in 8192-byte increments. This is the smallest memory block that the memory management hardware supports.

OS-9 automatically allocates memory when any of the following occurs:

- Program modules are loaded into RAM
- Processes are created
- Processes execute system calls to request additional RAM
- OS-9 needs I/O buffers or larger tables

OS-9 also has inverse functions to deallocate memory allocated to program modules, new processes, buffers, and tables.

In general, memory for program modules and buffers is allocated from high addresses downward. Memory for process data areas is allocated from low addresses upward.

Following, is a memory map of a typical system. Actual memory sizes and addresses can vary depending on the exact system configuration.

Color Computer OS-9 Typical Memory Map

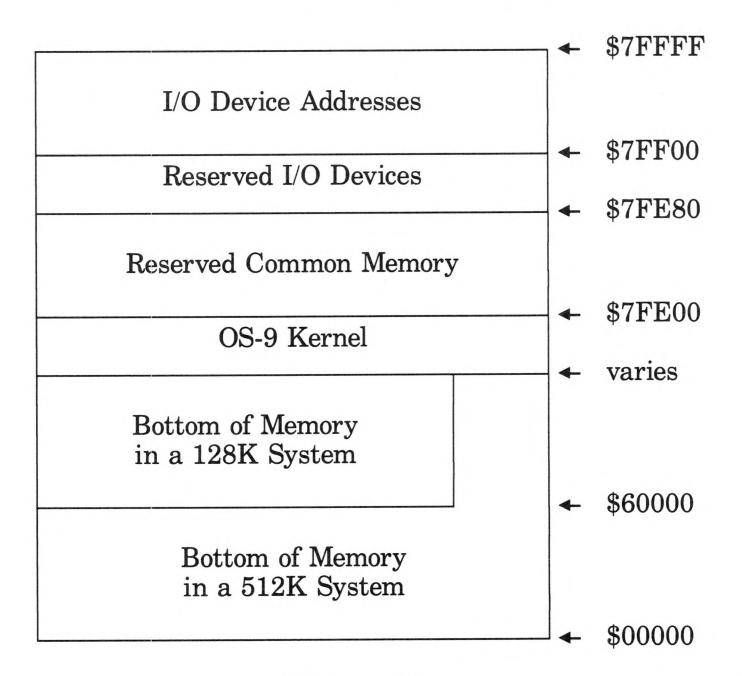


Figure 2.1

Note: The high two pages of every logical address space contain the defined areas I/O Device Addresses, Reserved I/O Devices, and Reserved Common Memory.

Memory Management Hardware

The 8-bit CPU in the Color Computer 3 can directly address only 64 kilobytes of memory using its 16 address lines (A0-A15). The Color Computer 3's Memory Management Unit (MMU) extends the addressing capability of the computer by increasing the address lines to 19 (A0-A18). This lets the computer address up to 512 kilobytes of memory (\$0-\$7FFFF).

The 512K address space is called the *physical address space*. The physical address space is subdivided into 8K *blocks*. The six high order address bits (A13-A18) define a *block number*.

OS-9 creates a *logical address space* of up to 64K for each task by using the FORK system call. Even though the memory within a logical address space appears to be contiguous, it might not be—the MMU translates the physical addresses to access available memory. Address spaces can also contain blocks of memory that are common to more than one map.

The MMU consists of a multiplexer and a 16 by 6-bit RAM array. Each of the 6-bit elements in this array is an MMU task register. The computer uses these task registers to determine the proper 8-kilobyte memory segment to address.

The MMU task registers are loaded with addressing data by the CPU. This data indicates the actual location of each 8-kilobyte segment of the current system memory. The task registers are divided into two sets consisting of eight registers each. Whether the task register select bit (TR bit) is set or reset, determines which of the two sets is to be used.

The relation between the data in the task register and the generated addresses is as follows:

Bit	D5	D4	D3	D2	D1	D0
Corresponding Memory Address	A18	A17	A16	A15	A14	A13

Figure 2.2

When the CPU accesses any memory outside the I/O and control range (XFF00 = XFFFF), the CPU address lines (A13-A15) and the TR bit determine what segment of memory to address. This is done through the multiplexer when SELECT is low. (See the following table.)

When the CPU writes data to the MMU, A0-A3 determine the location of the MMU register to receive the incoming data when SELECT is high. The following diagram illustrates the operation of the Color Computer 3's memory management:

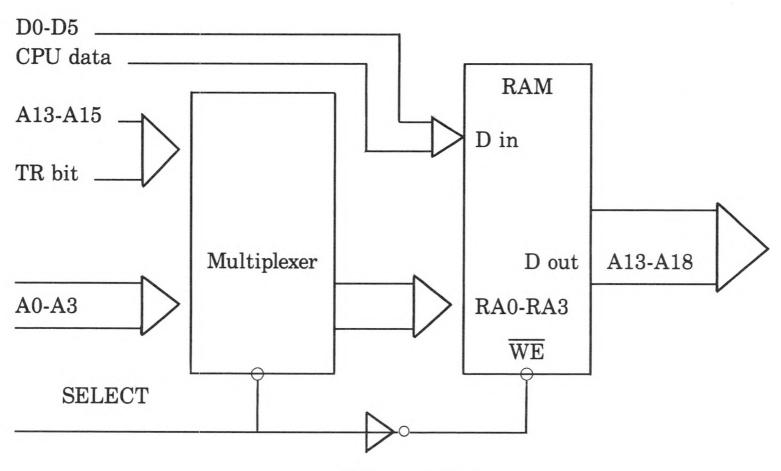


Figure 2.3

The system uses the data from the MMU registers to determine the block of memory to be accessed, according to the following table:

TR Bit	A15	A14	A13	AddressRange	MMU Address
0	0	0	0	X0000-X1FFF	FFA0
0	0	0	1	X2000-X3FFF	FFA1
0	0	1	0	X4000-X5FFF	FFA2
0	0	1	1	X6000-X7FFF	FFA3
0	1	0	0	X8000-X9FFF	FFA4
0	1	0	1	XA000-XBFFF	FFA5
0	1	1	0	XC000-XDFFF	FFA6
0	1	1	1	XE000-XFFFF	FFA7
1	0	0	0	X0000-X1FFF	FFA8
1	0	0	1	X2000-X3FFF	FFA9
1	0	1	0	X4000-X5FFF	FFAA
1	0	1	1	X6000-X7FFF	FFAB
1	1	0	0	X8000-X9FFF	FFAC
1	1	0	1	XA000-XBFFF	FFAD
1	1	1	0	XC000-XDFFF	FFAE
1	1	1	1	XE000-XFFFF	FFAF

Figure 2.4

The translation of physical address to 8K-blocks is as follows:

Ra	nge	Block	Rai	nge	Block
From	To	Number	From	То	Number
00000	01FFF	00	40000	41FFF	20
02000	03FFF	01	42000	43FFF	21
04000	05FFF	02	44000	45FFF	22
06000	07FFF	03	46000	47FFF	23
08000	09FFF	04	48000	49FFF	24
0A000	0BFFF	05	4A000	4BFFF	25
0C000	0DFFF	06	4C000	4DFFF	26
0E000	0FFFF	07	4E000	4FFFF	27
10000	11FFF	08	50000	51FFF	28
12000	13FFF	09	52000	53FFF	29
14000	15FFF	0A	54000	55FFF	2A
16000	17FFF	0B	56000	57FFF	2B
18000	19FFF	0C	58000	59FFF	2C
1A000	1BFFF	0D	5A000	5BFFF	2D
1C000	1DFFF	$0\mathrm{E}$	5C000	5DFFF	$2\mathrm{E}$
1E000	1FFFF	0F	5E000	5FFFF	$2\mathrm{F}$
20000	21FFF	10	60000	61FFF	30
22000	23FFF	11	62000	63FFF	31
24000	25FFF	12	64000	65FFF	32
26000	27FFF	13	66000	67FFF	33
28000	29FFF	14	68000	69FFF	34
2A000	2BFFF	15	6A000	6BFFF	35
2C000	2DFFF	16	6C000	6DFFF	36
2E000	2FFFF	17	6E000	6FFFF	37
30000	31FFF	18	70000	71FFF	38
32000	33FFF	19	72000	73FFF	39
34000	35FFF	1A	74000	75FFF	3A
36000	37FFF	1B	76000	77FFF	3B
38000	39FFF	1C	78000	79FFF	3C
3A000	3BFFF	1D	7A000	7BFFF	3D
3C000		1E		7DFFF	3E
3E000	3FFFF	1F	7E000	7FFFF	3F

Figure 2.5

In order for the MMU to function, the TR bit at \$FF90 must be cleared and the MMU must be enabled. However, before doing this, the address data for each memory segment must be loaded into the designated set of task registers. For example, to select a standard 64K map in the top range of the Color Computer 3's 512K RAM, with the TR bit set to 0, the following values must be preloaded into the MMU's registers:

MMU Location Address	Data (Hex)	Data (Bin)	Address Range
FFA0	38	111000	70000-71FFF
FFA1	39	111001	72000-73FFF
FFA2	3A	111010	74000-75FFF
FFA3	3B	111011	76000-77FFF
FFA4	3C	111100	78000-79FFF
FFA5	3D	111101	7A000-7BFFF
FFA6	3E	111110	7C000-7DFFF
FFA7	3F	111111	7E000-7FFFF

Figure 2.6

Although this table shows MMU data in the range \$38 to 3F, any data between \$0 and \$3F can be loaded into the MMU registers to select memory addresses in the range 0 to \$7FFFF, as illustrated by Figure 2.5.

Normally, the blocks containing I/O devices are kept in the system map, but not in the user maps. This is appropriate for timesharing applications, but not for process control. To directly access I/O devices, use the F\$MspBlk system call. This call takes a starting block number and block count, and maps them into *unallocated* spaces of the process's address space. The system call returns the logical address at which the blocks were inserted.

For example, suppose a display screen in your system is allocated at extended addresses \$7A000-\$7DFFF (blocks 3D and 3E). The following system call maps them into your address space:

ldb	#2	number of blocks
ldx	#3D	starting block number
059	F\$MapBlk	call MapBlk
stu	IOPorts	save address where mapped

On return, the U register contains the starting address at which the blocks were switched. For example, suppose that the call returned \$4000. To access extended address \$7A020, write to \$4020.

Other system calls that copy data to or from one task's map to another are available, such as F\$STABX and F\$Move. Some of these calls are system mode privileged. You can unprotect them by changing the appropriate bit in the corresponding entry of the system service request table and then making a new system boot with the patched table.

Multiprogramming

OS-9 is a multiprogramming operating system. This means that several independent programs called *processes* can be executed at the same time. By issuing the appropriate system call to OS-9, each process can have access to any system resource.

Multiprogramming functions use a hardware real-time clock. The clock generates interrupts 60 times per second, or one every 16.67 milliseconds. These interrupts are called ticks.

Processes that are not waiting for some event are called *active* processes. OS-9 runs active processes for a specific systemassigned period called a time slice. The number of time slices per minute during which a process is allowed to execute depends on a process's priority relative to all other active processes. Many OS-9 system calls are available to create, terminate, and control processes.

Process Creation

A process is created when an existing process executes a Fork system call (F\$Fork). This call's main argument is the name of the program module that the new process is to execute first (the *primary module*).

Finding the Module. OS-9 first attempts to find the module in the module directory. If it does not find the module, OS-9 usually attempts to load into memory a mass-storage file in the execution directory, with the requested module name as a filename.

Assigning a Process Descriptor. Once OS-9 finds the module, it assigns the process a data structure called a *process descriptor*. This is a 64-byte package that contains information about the process, its state (see the following section "Process States"), memory allocations, priority, queue pointers, and so on. OS-9 automatically initializes and maintains the process descriptor. The process itself cannot access the descriptor; it has no need to do so.

Allocate RAM. The next step is to allocate RAM for the process. The primary module's header contains a storage size. OS-9 uses this size unless the Fork system call requests a larger area. OS-9 then attempts to allocate a memory area of the specified size from the free memory space. The memory space does not need to be contiguous.

Proceed or Terminate. If OS-9 can perform all of the previous steps, it adds the new process to the active process queue for execution scheduling. If it cannot, it terminates the creation; the process that originated the Fork is informed of the error.

Assign Process ID and User ID. OS-9 assigns the new process a unique number called a *process ID*. Other processes can communicate with the process by referring to its ID in various system calls.

The process also has a *user ID*, which is used to identify all processes and files belonging to a particular user. The user ID is inherited from the parent process.

Process Termination. A process terminates when it executes an Exit system call (F\$Exit) or when it receives a *fatal* signal. The termination closes any open paths, deallocates memory used by the process, and unlinks its primary module.

Process States

At any instant a process can be in one of three states:

- Active—The process is ready for execution.
- Waiting—The process is suspended until a *child process* terminates or until it receives a signal. A child process is a process that is started (execution is begun by) another process—a *parent process*.

• Sleeping—The process is suspended for a specific period of time or until it receives a signal.

Each state has its own queue, a linked list of *descriptors* of processes in that state. To change a process's state, move its descriptor to another queue.

The Active State. Each active process is given a time slice for execution, according to its priority. The scheduler in the kernel ensures that all active processes, even those of low priority, get some CPU time.

The Wait State. This state is entered when a process executes a Wait system call (F\$Wait). The process remains suspended until one of its *child* processes terminates or until it receives a *signal*. (See the "Signals" section later in this chapter.)

The Sleeping State. This state is entered when a process executes a Sleep system call (F\$Sleep), which specifies the number of ticks for which the process is to remain suspended. The process remains asleep until the specified time has elapsed or until it receives a wakeup signal.

Execution Scheduling

The OS-9 scheduler uses an algorithm that ensures that all active processes get some execution time.

All active processes are members of the *active process queue*, which is kept sorted by process *age*. Age is the number of process switches that have occurred since the process's last time slice. When a process is moved to the active process queue from another queue, its age is set according to its priority—the higher the priority, the higher the age.

Whenever a new process becomes active, the ages of all other active processes increase by one time slice count. When the executing process's time slice has elapsed, the scheduler selects the next process to be executed (the one with the next highest age, the first one in the queue). At this time, the ages of all other active processes increase by one. Ages never go beyond 255.

A new active process that was terminated while in the system state is an exception. This process is given high priority because it is usually executing critical routines that affect shared system resources.

When there are no active processes, the kernel handles the next interrupt and then executes a CWA1 instruction. This procedure decreases interrupt latency time (the time it takes the system to process an interrupt).

Signals

A *signal* is an asynchronous control mechanism used for interprocess communication and control. It behaves like a software interrupt. It can cause a process to suspend a program, execute a specific routine, and then return to the interrupted program.

Signals can be sent from one process to another process by the Send system call (F\$Send). Or, they can be sent from OS-9 service routines to a process.

A signal can convey status information in the form of a 1-byte numeric value. Some *signal codes* (values) are predefined, but you can define most. The signal codes are:

- 0 = Kill (terminates the process, is noninterceptable)
- 1 = Wakeup (wakes up a sleeping process)
- 2 = Keyboard terminate
- 3 = Keyboard interrupt
- 4 = Window change

128-255 = User defined

When a signal is sent to a process, the signal is saved in the process descriptor. If the process is in the sleeping or waiting state, it is changed to the active state. When the process gets its next time slice, the signal is processed.

What happens next depends on whether or not the process has set up a *signal intercept trap* (signal service routine) by executing an Intercept system call (F\$Icpt).

If the process has set up a signal intercept trap, the process resumes execution at the address given in the Intercept call. The signal code passes to this routine. Terminate the routine with an RTI instruction to resume normal execution of the process. **Note:** A wakeup signal activates a sleeping process. It sets a flag but ignores the call to branch to the intercept routine.

If it has not set up a signal intercept trap, the process is terminated immediately. It is also terminated if the signal code is zero. If the process is in the system mode, OS-9 defers the termination. The process dies upon return to the user state.

A process can have a signal pending (usually because the process has not been assigned a time slice since receiving the signal). If it does, and another process tries to send it another signal, the new signal is terminated, and the Send system call returns an error. To give the destination process time to process the pending signal, the sender needs to execute a Sleep system call for a few ticks before trying to send the signal again.

Interrupt Processing

Interrupt processing is another important function of the kernel. OS-9 sends each hardware interrupt to a specific address. This address, in turn, specifies the address of the device service routine to be executed. This is called *vectoring* the interrupt. The address that points to the routine is called the *vector*. It has the same name as the interrupt.

The SWI, SWI2, and SWI3 vectors point to routines that read the corresponding pseudo vector from the process's descriptor and dispatch to it. This is why the Set SWI system call (F\$SSWI) is local to a process; it only changes a pseudo vector in the process descriptor.

Hardware Vector Table

Vector	Address
CILITO	ФРРРО
SWI3	\$FFF2
SWI2	\$FFF4
FIRQ	\$FFF6
IRQ	\$FFF8
SWI	\$FFFA
NMI	\$FFFC
RESTART	\$FFFE

FIRQ Interrupt. The system uses the FIRQ interrupt. The FIRQ vector is not available to you. The FIRQ vector is reserved for future use. Only one FIRQ generating device can be in the system at a time.

Logical Interrupt Polling System

Because most OS-9 I/O devices use IRQ interrupts, OS-9 includes a sophisticated polling system. The IRQ polling system automatically identifies the source of the interrupt, and then executes its associated user- or system-defined service routine.

IRQ Interrupt. Most OS-9 I/O devices generate IRQ interrupts. The IRQ vector points to the real-time clock and the keyboard scanner routines. These routines, in turn, jump to a special IRQ polling system that determines the source of the interrupt. The polling system is discussed in the next section, "Logical Interrupt Polling System."

NMI Interrupt. The system uses the NMI interrupt. The NMI vector, which points to the disk driver interrupt service routine, is not available to you.

The Polling Table. The information required for IRQ polling is maintained in a data structure called the *IRQ polling table*. The table has a 9-byte entry for each device that might generate an IRQ interrupt. The table size is permanent and is defined by an initialization constant in the INIT module. Each entry in the polling table is given a number from 0 (lowest priority) to 255 (highest priority). In this way, the more important devices (those that have a higher interrupt frequency) can be polled before the less important ones.

Each entry has six variables:

Polling Address

Points to the status register of the device. The register must have a bit or bits that indicate if it is the source of an interrupt.

Flip Byte

Selects whether the bits in the device status register indicate active when set or active when cleared. If a bit in the flip byte is set, it indicates that the task is active whenever the corresponding bit in the status register is clear.

Storage Address

Mask Byte Selects one or more interrupt request flag

bits within the device status register. The

bits identify the active task or device.

Service Points to the interrupt service routine for

Routine Address the device. You supply this address.

Static Points to the permanent storage area

required by the device service routine. You

supply this address.

Priority Sets the order in which the devices are

polled (a number from 0 to 255).

Polling the Entries. When an IRQ interrupt occurs, OS-9 enters the polling system via the corresponding RAM interrupt vector. It starts polling the devices in order of priority. OS-9 loads the status register address of each entry into Accumulator A, using the device address from the table.

OS-9 performs an exclusive-OR operation using the flip byte, followed by a logical-AND operation using the mask byte. If the result is non-zero, OS-9 assumes that the device is the source of the interrupt.

OS-9 reads the device memory address and service routine address from the table, and performs the interrupt service routine.

Note: If you are writing your own device driver, terminate the interrupt service routine with an RTS instruction, **not** an RTI instruction.

Adding Entries to the Table. You can make entries to the IRQ (interrupt request) polling table by using the Set IRQ system call (F\$IRQ). Set IRQ is a *privileged system call*, OS-9 can execute it only in the system mode. OS-9 is in system mode whenever it is running a device driver.

Note: The code for the interrupt polling system is located in the I/O Manager module. The OS9P1 and OS9P2 modules contain the physical interrupt processing routines.

Virtual Interrupt Processing

A virtual IRQ, or VIRQ, is useful with devices in Multi-Pak expansion slots. Because of the absence of an IRQ line from the Multi-Pak interface, these devices cannot initiate physical interrupts. VIRQ enables these devices to act as if they were interrupt driven. Use VIRQ only with device driver and pseudo device driver modules. VIRQ is handled in the Clock module, which handles the VIRQ polling table and installs the F\$VIRQ system call. Since the F\$VIRQ system call is dependent on clock initialization, the CC3GO module forces the clock to start.

The virtual interrupt is set up so that a device can be interrupted at a given number of clock ticks. The interrupt can occur one time, or can be repeated as long as the device is used.

The F\$VIRQ system call installs VIRQ in a table. This call requires specification of a 5-byte packet for use in the VIRQ table. This packet contains:

- Bytes for an actual counter
- A reset value for the counter
- A status byte that indicates whether a virtual interrupt has occurred and whether the VIRQ is to be re-installed in the table after being issued

F\$VIRQ also specifies an initial tick count for the interrupt. The actual call is summarized here and is described in detail in Chapter 8.

Call:	OS9 F\$VIRQ
Input:	(Y) = address of 5-byte packet
	$(X) = 0$ to delete entry, 1 to install entry $(D) = initial \ count \ value$
Output:	none (CC) carry set on error (IS) appropriate error code

The 5-byte packet is defined as follows:

Name	Offset	Function
Vi.Cnt	\$0	Actual counter
Vi.Rst	\$2	Reset value for counter
Vi.Stat	\$4	Status byte

Two of the bits in the status byte are used. These are:

Bit 0 - set if VIRQ occurs

Bit 7 - set if a count reset is required

When making an F\$VIRQ call, the packet might require initialization with a reset value. Bit 7 of the status byte must be either set or cleared to signify a reset of the counter or a one-time VIRQ call. The reset value does not need to be the same as the initial counter value. When OS-9 processes the call, it writes the packet address into the VIRQ table.

At each clock tick, OS-9 scans the VIRQ table and subtracts one from each timer value. When a timer count reaches zero, OS-9 performs the following actions:

- 1. Sets Bit 0 in the status byte. This specifies a Virtual IRQ.
- 2. Checks Bit 7 of the status byte for a count reset request.
- 3. If bit 7 is set, resets the count using the reset value. If bit 7 is reset, deletes the packet address from the VIRQ table.

When a counter reaches zero and makes a virtual interrupt request, OS-9 runs the standard interrupt polling routine and services the interrupt. Because of this, you must install entries on both the VIRQ and DIRQ polling tables whenever you are using a VIRQ.

Unless the device has an actual physical interrupt, install the device on the IRQ polling table via the F\$IRQ system call before placing it on the VIRQ table.

If the device has a physical interrupt, use the interrupt's hard-ware register address as the polling address for the F\$IRQ call. After setting the polling address, set the flip and mask bytes for the device, and make the F\$IRQ call.

If the device is totally VIRQ-driven, and has no interrupts, use the status byte from the VIRQ packet as the status byte. Use a mask byte of %00000001, defined as Vi.IFlag in the defs file. Use a flip byte value of 0. The following examples show how to set up both types of VIRQ calls. The first example is taken from an ACIA-type driver that has a physical interrupt found in a status register, but that cannot be accessed by the processor if used in the Multi-Pak. The second example is for a device with no physical interrupt handling, all interrupts are handled through the VIRQ.

- * VIRQ Example #1 Device Driver possessing real IRQ's
 - * Copyright 1985,1986 by Microware Systems
 - * Corporation. Reproduced Under License

use defsfile

- * actual mask byte for hardware interrupt IRQReq set $\Box 10000000$ Interrupt Request
- * offset to the actual hardware status register Status equ 1
- * VIRQ countdown value VIRQCNT equ 1 do the VIRQ on every tick

* * * * * * * * * * * * * * * * *

- * Static storage offsets
- org V.SCF room for scf variables

VIRQBUF rmb 5 buffer for fake interrupt from clock

MEM equ . Total static storage requirement

* Module Header mod MEND, NAM, DRIVR+OBJCT, REENT+1, ENT, MEM fcb UPDAT.

fcb Edition Current Revision

* Driver entry jump table ENT lbra INIT lbra READ lbra WRITE lbra GETSTA

```
1bra PUTSTA
 bra TRMNAT
* Actual mask information for F$IRQ call for the
* hardware interrupt MASK fcb 0 no flip bits
* fcb IRQReg Irq polling mask
* fcb 10 (higher) priority
* * * * * * * * * * * * * * *
* Init
* Initialize the device
* Includes setting up the IRQ and VIRQ entries
INIT
* Install IRQ polling Table Entry first
* Use the hardware status register and the hardware
* mask
 1dd V.PORT, U get port address in D
 add #Status point to hardware status byte
 leax MASK, PCR get the hardware interrupt mask
 leay MIRQ, PCR address of interrupt service routine
 OS9 F$IRQ Add to IRQ polling table
 bcs INIT9 error - return it
* Install VIRQ in Clock Module second
 leay VIRQBUF, U get the 5 byte VIRQ buffer pointer
 1da #$80 get reset flag for repeated VIRQ's
 sta Vi.Stat, y put it into buffer
 1dd #VIRQCNT get count for number of ticks for the VIRQ
 std Vi.Rst,y put in initial reset value
 ldx #1 put onto table
 os9 F$VIRQ make the service request
 bcs INIT9 Error - return it
INIT9 rts
READ
```

```
WRITE
     GETSTA
     PUTSTA
     * * * * * * * * * * * * * *
     * Subroutine TRMNAT
          Terminate device, including removal from tables
     TRMNAT
     * remove from VIRQ table first
      ldx #0 remove from VIRQ table
      leay VIRQBUF, U get address
      os9 F$VIRQ remove modem from VIRQ table
     * next remove from IRQ table
     ldx #0
      OS9 F$IRQ remove modem from polling tbl
      rts
     *******
     * MIRQ
       process Interrupt
     MDIRQ
     < actual interrupt service routine >
      rts
     emod Module Crc
    MEND equ *
* VIRQ Example #2 - Device Driver without hardware interrupts
     ***********
    * STATIC STORAGE DEFINITION
```

```
VIRQBF rmb 5 buffer for VIRQ
DMEM equ .
*************
* Module Header
 mod DEND, DNAM, DRIVR+OBJCT, REENT+REV, DENT, DMEM
 fcb UPDAT. mode byte
 fcb 3 EDITION BYTE
* Driver entry table
DENT Ibra INIT initialize
 lbra READ
 1bra WRITE
 1bra GETSTAT get status
 Ibra SETSTAT set status
 lbra TERM terminate
* Mask information packet for F$IRQ call
* NOTE: uses the virtual interrupt flag, Vi.IFlag, for
* the maskbyte
DMSK fcb Ø no flip bits
 fcb Vi. IFlag polling mask for VIRQ
 fcb 10 priority
*******
* INITIALIZE STORAGE AND CONTROLLER
* Includes setting up the IRQ and VIRQ table entries
INIT
* set up IRQ table entry first
* NOTE: uses the status register of the VIRQ buffer for
* the interrupt status register since no hardware status
* register is available
 leay VIRQBF+Vi.Stat, U get address of status byte
```

```
tfr y,d put it into D reg
 leay DIRQ, PCR get address of interrupt routine
 leax DMSK,PCR get VIRQ mask info
 os9 F$IRQ install onto table
 bcs INIT9 exit on error
* now set up the VIRQ table entry
 leay VIRQBF, U point to the 5-byte packet
 Ida #$80 get the reset flag to repeat VIRQ's
 sta Vi.Stat, y save it in the buffer
 1dd #VIRQCNT get the VIRQ counter value
 std Vi.Rst,y save it in the reset area of buffer
 ldx #1 code to install the VIRQ
 os9 F$VIRQ install on the table
 bcs INIT9 exit on error
INIT9 rts
 READ
 WRITE
 GETSTAT
 PUTSTAT
* TERM - terminate the device and remove entries from
* tables
TERM
* remove from VIRQ table first
ldx #0 get zero to remove from table
leay VIRQBF, U get address of packet
 059 F$VIRQ
* then remove from IRQ table
 ldx #0 get zero to remove from table
 059 F$IRQ
  rts
```

Memory Modules

In Chapter 2, you learned that OS-9 is based on the concept that memory is modular. This means that each program is considered to be an individually named *object*.

You also learned that each program loaded into memory must be in the module format. This format lets OS-9 manage the logical contents of memory, as well as the physical contents. Module types and formats are discussed in detail in this chapter.

Module Types

There are several types of modules. Each has a different use and function. These are the main requirements of a module:

- It cannot modify itself.
- It must be position-independent so that OS-9 can load or relocate it wherever space is available. In this respect, the module format is the OS-9 equivalent of *load records* used in older operating systems.

A module need not be a complete program or even 6809 machine language. It can contain BASIC09 I-code, constants, single subroutines, and subroutine packages.

Module Format

Each module has three parts: a module header, a module body, and a cyclic-redundancy-check value (CRC value).

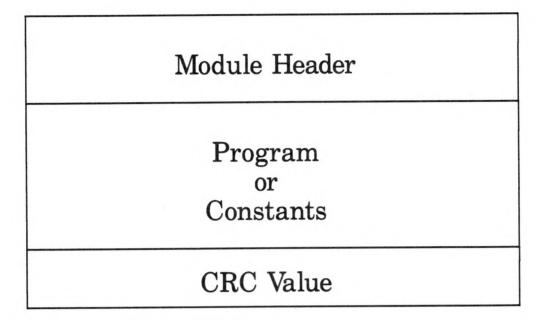


Figure 3.1

Module Header

At the beginning of the module (the lowest address) is the module header. Its form depends upon the module's use.

The header contains information about the module and its use. This information includes the following:

- Size
- Type (machine code, BASIC09 compiled code, and so on)
- Attributes (executable, re-entrant, and so on)
- Data storage memory requirements
- Execution starting address

Usually, you do not need to write routines to generate the modules and headers. All OS-9 programming languages automatically create modules and headers.

Module Body

The module body contains the program or constants. It usually is pure code. The module name string is included in this area. Figure 3.2 provides the offset values for calculating the location of a module's name. (See "Offset to Module Name".)

CRC Value

The last three bytes of the module are the Cyclic Redundancy Check (CRC) value. The CRC value is used to verify the integrity of a module.

When the system first loads the module into memory, it performs a 25-bit CRC over the entire module, from the first byte of the module header to the byte immediately before the CRC. The CRC polynomial used is \$800FE3.

As with the header, you usually don't need to write routines to generate the CRC value. Most OS-9 programs do this automatically.

Module Headers: Standard Information

The first nine bytes of all module headers are defined as follows:

Relative Address	Use	
\$00,\$01	Sync bytes (\$87,\$CD)	
\$02,\$03	Module size	
\$04,\$05	Offset to module name	
\$06	Module type/Language	
\$07	Attributes/Revision level	
\$08	Header check	
	T ! 0.0	

Figure 3.2

Sync Bytes

The sync bytes specify the location of the module. (The first sync byte is the start of the module.) These two bytes are constant.

Module Size

The module size specifies the size of the module in bytes (includes CRC).

Offset to Module Name

The offset to module name specifies the address of the module name string relative to the start of the module. The name string can be located anywhere in the module. It consists of a string of ASCII characters with the most significant bit set on the last character.

Type/Language Byte

The type/language byte specifies the type and language of the module.

The four most significant bits of this byte indicate the type. Eight types are pre-defined. Some of these are for OS-9's internal use only. The type codes are given here (0 is not a legal type code):

Code	Module Type	Name
\$1x	Program module	Prgrm
\$2x	Subroutine module	Sbrtn
\$3x	Multi-module (for future use)	Multi
\$4x	Data module	Data
\$5x-\$Bx	User-definable module	
\$Cx	OS-9 system module	Systm
\$Dx	OS-9 file manager module	FlMgr
\$Ex	OS-9 device driver module	Drivr
\$Fx	OS-9 device descriptor module	Devic

Figure 3.3

The four least significant bits of Byte 6 indicate the language (denoted by x in the previous Figure). The language codes are given here:

Code	Language	
\$x0	Data (non-executable)	
\$x1	6809 object code	
\$x2	BASIC09 I-code	
\$x3	PASCAL P-code	
x4-xF	Reserved for future use	

Figure 3.4

By checking the language type, high-level language runtime systems can verify that a module is the correct type before attempting execution. BASIC09, for example, can run either I-code or 6809 machine language procedures arbitrarily by checking the language type code.

Attributes/Revision Level Byte

The attributes/revision level byte defines the attributes and revision level of the module.

The four most significant bits of this byte are reserved for module attributes. Currently, only Bit 7 is defined. When set, it indicates the module is re-entrant and, therefore, shareable.

The four least significant bits of this byte are a revision level in the range 0 to 15. If two or more modules have the same name, type, language, and so on, OS-9 keeps in the module directory only the module having the highest revision level. Therefore, you can replace or patch a ROM module, simply by loading a new, equivalent module that has a higher revision level.

Note: A previously linked module cannot be replaced until its link count goes to zero.

Header Check

The header check byte contains the one's complement of the Exclusive-OR of the previous eight bytes.

Module Headers: Type-Dependent Information

More information usually follows the first nine bytes of a module header. The layout and meaning vary, depending on the module type.

Module types \$Cx-\$Fx (system module, file manager module, device driver module, and device descriptor module) are used only by OS-9. Their formats are given later in the manual.

Module types \$1x through \$Bx have a general-purpose executable format. This format is often used in programs called by F\$Fork or F\$Chain. Here is the format used by these module types:

Executable Memory Module Format

Relative Address		Check Range					
\$00	Sync Byte						
\$01	Sylle By to	ου (φοι,φου)					
\$02	Modulo	Sizo (bytos)					
\$03	— Wodule	Size (bytes)					
\$04	N/L 11. 1	NI Officet	header				
\$05	— Module	Name Offset	parity				
\$06	Type	Language					
\$07	Attributes	Revision	module				
\$08	Header I	Parity Check	CRC				
\$09	T	Execution Offset —					
\$0A	— Execu						
\$0B	D						
\$0C	— Permanen						
\$0D	(Additional ext						
	Mod object cod an						
	CRC C						

Figure 3.5

As you can see from the preceding chart, the executable memory has four extra bytes in its header. They are:

\$09,\$0A Execution offset

\$0B,\$0C Permanent storage size

Execution Offset. The program or subroutine's offset starting address, relative to the first byte of the sync code. A module that has multiple entry points (such as cold start and warm start) might have a branch table starting at this address.


Permanent Storage Size. The minimum number of bytes of data storage required to run. Fork and Chain use this number to allocate a process's data area.

If the module is not directly executed by a Fork or Chain system call (for instance a subroutine package), this entry is not used by OS-9. It is commonly used to specify the maximum stack size required by re-entrant subroutine modules. The calling program can check this value to determine if the subroutine has enough stack space.

When OS-9 starts after a single system reset, it searches the entire memory space for ROM modules. It finds them by looking for the module header sync code (\$87,\$CD).

When OS-9 detects the header sync code, it checks to see if the header is correct. If it is, the system obtains the module size from the header and performs a 24-bit CRC over the entire module. If the CRC matches, OS-9 considers the module to be valid and enters it into the module directory. All ROM modules that are present in the system at startup are automatically included in the system module directory.


After the module search, OS-9 links to the component modules it found. This is the secret to OS-9's ability to adapt to almost any 6809 computer. It automatically locates its required and optional component modules and rebuilds the system each time it is started.



OS-9's Unified Input/Output System

Chapter 1 mentioned that OS-9 has a unified I/O system, consisting of all modules except those on the kernel level. This chapter discusses the I/O modules in detail.

I/O System Modules

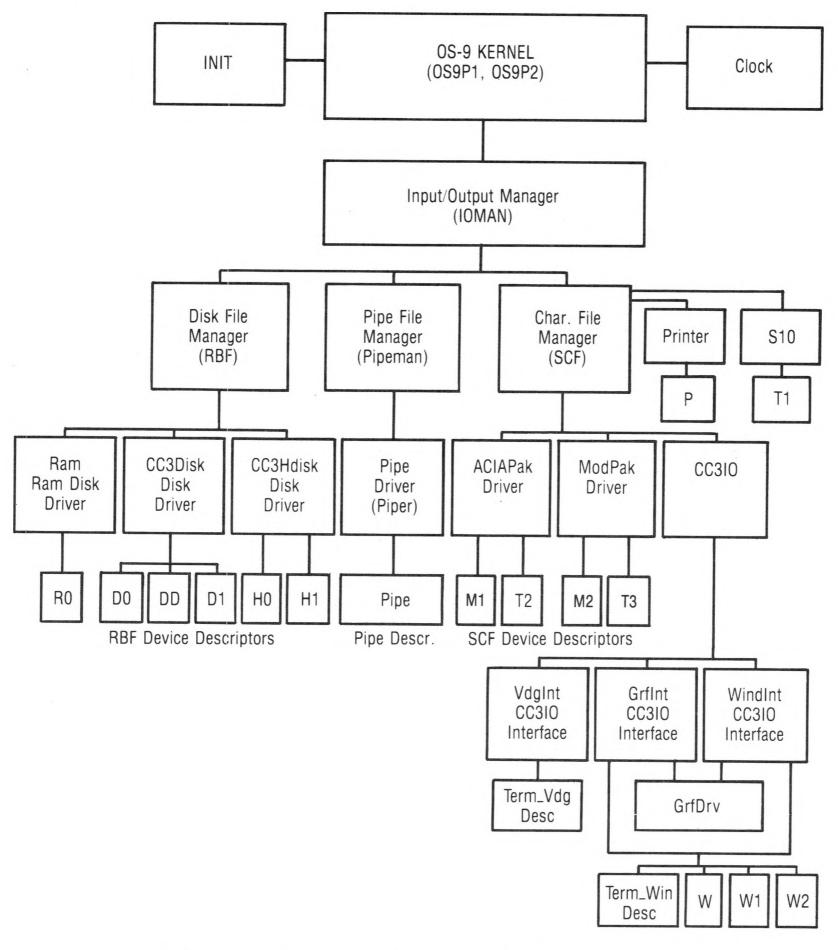

OS-9 COMPONENT MODULE ORGANIZATION

The VDG Interface performs both interface and low level routines for VDG Color Computer 2 compatible modes and has limited support for high res screen allocation.

The GrfInt Interface provides the standard code interpretations and interface functions.

The WindInt Interface, available in the Multi-view package, contains all the functionality of GrfInt, along with additional support features. If you use WindInt, do not include GrfInt.

Both WindInt and GrfInt use the low-level driver GrfDrv to perform drawing on the bit-map screens.

Term_VDG uses CC3IO/VdgInt while Term_win and all window descriptors use CC3IO/(WindInt/GrfInt)/GrfDrv modules.

The I/O system provides system-wide, hardware-independent I/O services for user programs and OS-9 itself. All I/O system calls are received by the kernel and passed to the I/O manager for processing.

The I/O manager performs some processing, such as the allocation of data structures for the I/O path. Then, it calls the file managers and device drivers to do most of the work. Additional file manager, device driver, and device descriptor modules can be loaded into memory from files and used while the system is running.

The I/O Manager

The I/O manager provides the first level of service of I/O system calls. It routes data on I/O process paths to and from the appropriate file managers and device drivers.

The I/O Manager also maintains two important internal OS-9 data structures—the *device table* and the *path table*. Never modify the I/O manager.

When a path is opened, the I/O manager tries to link to a memory module that has the device name given or implied in the pathlist. This module is the *device descriptor*. It contains the names of the device driver and file manager for the device. The I/O manager saves the names so later system calls can be routed to these modules.

File Managers

OS-9 can have any number of *file manager modules*. Each of these modules processes the raw data stream to or from a class of device drivers that have similar operational characteristics. It removes as many unique characteristics as possible from I/O operations. Thus, it assures that similar devices conform to the OS-9 standard I/O and file structure.

The file manager also is responsible for mass storage allocation and directory processing, if these are applicable to the class of devices it serves.

File managers usually buffer the data stream and issue requests to the kernel for dynamic allocation of buffer memory. They can also monitor and process the data stream, for example, adding line-feed characters after carriage-return characters.

The file managers are re-entrant. The three standard OS-9 file managers are:

- Random block file manager: The RBF manager supports random-access, block-structured devices such as disk systems and bubble memories. (Chapter 5 discusses the RBF manager in detail.)
- Sequential Character File Manager: The SCF manager supports single-character-oriented devices, such as CRTs or hardcopy terminals, printers, and modems. (Chapter 6 discusses SCF in detail.)
- Pipe File Manager (PIPEMAN): The pipe manager supports interprocess communication via *pipes*.

File Manager Structure

Every file manager must have a branch table in exactly the following format. Routines that are not used by the file manager must branch to an error routine, that sets the carry and loads Register B with an appropriate error code before returning. Routines returning without error must ensure that the carry bit is clear.

```
* All routines are entered with:
* (Y) = Path Descriptor pointer
* (U) = Caller's register stack pointer
EntryPt equ *
 lbra Create
 lbra Open
 lbra MakDir
 lbra ChqDir
 lbra Delete
 1bra Seek
 1bra Read
 lbra Write
 lbra ReadLn
 lbra WriteLn
 lbra GetStat
 lbra PutStat
 lbra Close
```

Create, Open

Create and Open handle file creating and opening for devices. Typically, the process involves allocating any required buffers, initializing path descriptor variables, and establishing the path name. If the file manager controls multi-file devices (RBF), directory searching is performed to find or create the specified file.

Makdir

Makdir creates a directory file on multi-file devices. Makdir is neither preceded by a Create nor followed by a Close. File managers that are incapable of supporting directories need to return carry set with an appropriate error code in Register B.

ChgDir

On multi-file devices, ChgDir searches for a directory file. If ChgDir finds the directory, it saves the address of the directory (up to four bytes) in the caller's process descriptor. The descriptor is located at P\$DIO+2 (for a data directory) or P\$DIO+8 (for an execution directory).

In the case of the RBF manager, the address of the directory's file descriptor is saved. Open/Create begins searching in the current directory when the caller's pathlist does not begin with a slash (/). File managers that do not support directories should return the carry set and an appropriate error code in Register B.

Delete

Multi-file device managers handle file delete requests by initiating a directory search that is similar to Open. Once a device manager finds the file, it removes the file from the directory. Any media in use by the file are returned to unused status. In the case of the RBF manager, space is returned for system use and is marked as available in the free cluster bit map on the disk. File managers that do not support multi- file devices return an error.

Seek

File managers that support random access devices use Seek to position file pointers of an already open path to the byte specified. Typically, the positioning is a logical movement. No error is produced at the time of the seek if the position is beyond the current "end of file".

Normally, file managers that do not support random access ignore Seek. However, an SCF-type manager can use Seek to perform cursor positioning.

Read

Read returns the number of bytes requested to the user's data buffer. Make sure Read returns an EOF error if there is no data available. Read must be capable of copying pure binary data, and generally performs no editing on the data. Generally, the file manager calls the device driver to actually read the data into the buffer. Then, the file manager copies the data from the buffer into the user's data area to keep file managers deviceindependent.

Write

The Write request, like Read, must be capable of recording pure binary data without alteration. The routines for Read and Write are almost identical with the exception that Write uses the device driver's output routine instead of the input routine. The RBF manager and similar random access devices that use fixed-length records (sectors) must often preread a sector before writing it, unless they are writing the entire sector. In OS-9, writing past the end of file on a device expands the file with new data.

ReadLn

ReadLn differs from Read in two respects. First, ReadLn terminates when the first end-of-line (carriage return) is encountered. ReadLn performs any input editing that is appropriate for the device. In the case of SCF, editing involves handling functions such as backspace, line deletion, and the removal of the high-order bit from characters.

WriteLn

WriteLn is the counterpart of ReadLn. It calls the device driver to transfer data up to and including the first (if any) carriage return encountered. Appropriate output editing can also be performed. For example, SCF outputs a line feed, a carriage return character, and nulls (if appropriate for the device). It also pauses at the end of a screen page.

GetStat, PutStat

The GetStat (get status) and PutStat (put status) system calls are wildcard calls designed to provide a method of accessing features of a device (or file manager) that are not generally device independent. The file manager can perform specific functions such as setting the size of a file to a given value. Pass *unknown* status calls to the driver to provide further means of device independence. For example, a PutStat call to format a disk track might behave differently on different types of disk controllers.

Close

Close is responsible for ensuring that any output to a device is completed. (If necessary, Close writes out the last buffer.) It releases any buffer space allocated in an Open or Create. Close does not execute the device driver's terminate routine, but can do specific end-of-file processing if you want it to, such as writing end-of-file records on disks, or form feeds on printers.

Interfacing with Device Drivers

Strictly speaking, device drivers must conform to the general format presented in this manual. The I/O Manager is slightly different because it only uses the Init and Terminate entry points. Other entry points need only be compatible with the file manager for which the driver is written. For example, the Read entry point of an SCF driver is expected to return one byte from the device. The Read entry point of an RBF driver, on the other hand, expects Read to return an entire sector.

The following code is part of an SCF file manager. The code shows how a file manager might call a driver.

```
IDEXEC
     Execute Device's Read/Write Routine
             (A) = Output character (write)
  Passed:
             (X) = Device Table entry ptr
             (Y) = Path Descriptor pointer
             (U) = Offset of routine (D$Read,
                   D$Write)
             (A) = Input char (read)
  Returns:
             (B) = Error code, CC set if error
  Destroys B,CC
IDEXEC pshs a,x,y,u save registers
 ldu V$STAT,x get static storage for driver
 ldx V$DRIV, x get driver module address
 1dd M$EXEC, x and offset of execution entries
addd 5,s offset by read/write
 leax d,x absolute entry address
 lda ,s+ restore char (for write)
 jsr 0,x execute driver read/write
 puls x,y,u,pc return (A)=char, (B)=error
 emod Module CRC
Size equ * size of sequential file manager
```

Device Driver Modules

The device driver modules are subroutine packages that perform basic, low-level I/O transfers to or from a specific type of I/O device hardware controller. These modules are re-entrant. So, one copy of the module can concurrently run several devices that use identical I/O controllers.

Device driver modules use a standard module header, in which the module type is specified as code \$Ex (device driver). The execution offset address in the module header points to a branch table that has a minimum of six 3-byte entries.

Each entry is typically an LBRA to the corresponding subroutine. The file managers call specific routines in the device driver through this table, passing a pointer to a path descriptor and passing the hardware control register address in the 6809 registers. The branch table looks like this:

Code	Meaning	
+ \$00	Device initialization routine	
+\$03	Read from device	
+\$06	Write to device	
+\$09	Get device status	
+\$0C	Set device status	
+\$0F	Device termination routine	

(For a complete description of the parameters passed to these subroutines, see the "Device Driver Subroutines" sections in Chapters 5 and 6.)

Device Driver Module Format

Relative Addres		Check Range		
\$00	Syma Byt			
\$01	— Sync Byte	es (\$87,\$CD)		
\$02	D.C. 1. 1	G: (1 +)		
\$03	Module	Size (bytes)		
\$04	N.C. 1. 1. 1	NT 0000 -4		TT1
\$05	— Module I	Name Offset		Header Parity
\$06	Type	Language		
\$07	Attributes	Revision		Module
\$08	Header F	Parity Check		CRC
\$09	E	tion Offset		
\$0A	— Execu	tion Offset		
\$0B	D	4 04 0:		
\$0C	— Permanen	t Storage Size		
\$0D	Mod			
	— Mod			
	— CRC C	heck Value		
_				

\$0D Mode Byte - (D S PE PW PR E W R)

OS-9 Interaction With Devices

Device drivers often must wait for hardware to complete a task or for a user to enter data. Such a wait situation occurs if an SCF device driver receives a Read but there is no data is available, or if it receives a Write and no buffer space is available. OS-9 drivers that encounter this situation should suspend the current process (via F\$Sleep). In this way the driver allows other processes to continue using CPU time.

The most efficient way for a driver to awaken itself and resume processing data is by using interrupt requests (IRQs). It is possible for the driver to sleep for a number of system clock ticks and then check the device or buffer for a ready signal. The drawbacks to this technique are:

- It requires the system clock to always remain active.
- It might require a large number of ticks (perhaps 20) for the device to become ready. Such a case leaves you with a dilemma. If you make the program sleep for two ticks, the system wastes CPU time while checking for device ready. If the driver sleeps 20 ticks, it does not have a good response time.

An interrupt system allows the hardware to report to the CPU and the device drivers when the device is finished with an operation. Using interrupts to its advantage, a device driver can set up interrupt handling to occur when a character is sent or received or when a disk operation is complete. There is a built-in polling facility for pausing and awakening processes. Here is a technique for handling interrupts in a device driver:

1. Use the Init routine to place the driver interrupt service call (IRQSVC) routine in the IRQ polling sequence via an F\$IRQ system call:

ldd V.Port,u get address to poll
leax IRQPOLL,pcr point to IRQ packet
leay IRQSVC,pcr point to IRQ routine
OS9 F\$IRQ add dev to poll sequence
bcs Error abnormal exit if error

2. Ensure that driver programs waiting for their hardware, call the sleep routine. The sleep routine copies V.Busy to V.Wake. Then, it goes to sleep for some period of time.

3. When the driver program wakes up, have it check to see whether it was awakened by an interrupt or by a signal sent from some other process.

Usually, the driver performs this check by reading the V.Wake storage byte. The V.Busy byte is maintained by the file manager to be used as the process ID of the process using the driver. When V.Busy is copied into V.Wake, then V.Wake becomes a flag byte and an information byte. A non-zero Wake byte indicates that there is a process awaiting an interrupt. The value in the Wake byte indicates the process to be awakened by sending a wakeup signal as shown in the following code:

```
get proc ID
        lda V.Busy,u
                             arrange for wakeup
        sta V.Wake, u
        andcc #^IntMasks
                              prep for interrupts
                              or any other tick time
Sleep50 ldx #0
                              (if signal test)
        OS9 F$Sleep
                              await an IRQ
                              get proc desc ptr if
        ldx D.Proc
                              signal test
                              is signal present?
        ldb P$Signal,x
                              (if signal test)
                              bra if so if signal
        bne SigTest
                              test
                              IRQ occur?
        tst V.Wake, u
        bne Sleep50
                              bra if not
```

Note that the code labeled "if signal test" is only necessary if the driver wishes to return to the caller if a signal is sent without waiting for the device to finish. Also note that IRQs and FIRQs must be masked between the time a command is given to the device and the moving of V.Busy and V.Wake. If they are not masked, it is possible for the device IRQ to occur and the IRQSVC routine to become confused as to whether it is sending a wakeup signal or not.

4. When the device issues an interrupt, OS-9 calls the routine at the address given in F\$IRQ with the interrupts masked. Make the routine as short as possible, and have it return with an RTS instruction. IRQSVC can verify that an interrupt has occurred for the device. It needs to clear the interrupt to retrieve any data in the device. Then the V.Wake byte communicates with the main driver module. If V.Wake is non-zero, clear it to indicate a true device interrupt and use its contents as the process ID for an F\$Send system call. The F\$Send call sends a wakeup signal to the process. Here is an example:

```
ldx V.Port,u get device address
tst ?? is it real interrupt from device?
bne IRQSVC90 bra to error if not
lda Data,x get data from device
sta 0,y
lda V.Wake,u
beq IRQSVC80 bra if none
clr V.Wake,u clear it as flag to main
routine
ldb #S$Wake,u get wakeup signal
DS9 F$Send send signal to driver
IRQSVC80 clrb clear carry bit (all is well)
rts
IRQSVC90 comb set carry bit (is an IRQ call)
rts
```

Suspend State (Level Two only)

The Suspend State allows the elimination of the F\$Send system call during interrupt handling. Because the process is already in the active queue, it need not be moved from one queue to another. The device driver IRQSVC routine can now wake up the suspended main driver by clearing the process status byte suspend bit in the process state. Following are sample routines for the Sleep and IRQSVC calls:

```
lda D.Proc get process ptr
sta V.Wake,u prep for re-awakening
enable device to IRQ, give command, etc.
bra Cmd50 enter suspend loop
Cmd30 ldx D.Proc get ptr to process desc
```

Ida P\$State,x get state flag
 ora #Suspend put proc in suspend state
 sta P\$State,x save it in proc desc
 andcc #^IntMasks unmask interrupts
 ldx #1 give up time slice
 OS9 F\$Sleep suspend (in active queue)

Cmd50 orcc #IntMasks mask interrupts while
changing state
 ldx D.Proc get proc desc addr (if signal
test)
 lda P\$Signal,x get signal (if signal test)
 beq SigProc bra if signal to be handled
 lda V.Wake,u true interrupt?
 bne Cmd30 bra if not
 andcc #^IntMasks assure interrupts unmasked

Note that D.Proc is a pointer to the process descriptor of the current process. Process descriptors are always allocated on 256-byte page boundaries. Thus, having the high order byte of the address is adequate to locate the descriptor. D.Proc is put in V.Wake as a dual value. In one instance, it is a flag byte indicating that a process is indeed suspended. In the other instance, it is a pointer to the process descriptor which enables the IRQSVC routine to clear the suspend bit. It is necessary to have the interrupts masked from the time the device is enabled until the suspend bit has been set. Making the interrupts ensure that the IRQSVC routine does not think it has cleared the suspend bit before it is even set. If this happens, when the bit is set the process might go into permanent suspension. The IRQSVC routine sample follows:

ldy V.Port,u get dev addr
tst V.Wake,u is process awaiting
IRQ?
beq IRQSVCER no exit

clear device interrupt
exit if IRQ not from this device

lda V.Wake,u get process ptr
clrb
stb V.Wake,u clear proc waiting flag
tfr d,x get process descriptor ptr
lda P\$State,x get state flag
anda # Suspend clear suspend state
sta P\$State,x save it

clrb clear carry bit rts IRQSVCER comb set carry bit rts

Device Descriptor Modules

Device descriptor modules are small, non-executable modules. Each one provides information that associates a specific I/O device with its logical name, hardware controller address(es), device driver, file manager name, and initialization parameters.

Unlike the device drivers and file managers, which operate on classes of devices, each device descriptor tailors its functions to a specific device. Each device must have a device descriptor.

Device descriptor modules use a standard module header, in which the module type is specified as code \$Fx (device descriptor). The name of the module is the name by which the system and user know the device (the device name given in pathlists).

The rest of the device descriptor header consists of the information in the following chart:

Relative Address(es)	Use			
\$09,\$0A	The relative address of the file manager name string address			
\$0B,\$0C	The relative address of the device driver name string			
\$0D	Mode/Capabilities: D S PE PW PR E W R (directory, single user, public execute, public write, public read, execute, write, read)			
\$0E,\$0F,\$10	The absolute physical (24-bit) address of the device controller			
\$11	The number of bytes $(n \text{ bytes})$ in the initialization table			
\$12,\$12+n	Initialization table			

When OS-9 opens a path to the device, the system copies the initialization table into the option section (PD.OPT) of the path descriptor. (See "Path Descriptors" in this chapter.)

The values in this table can be used to define the operating parameters that are alterable by the Get Status and Set Status system calls (I\$GetStt and I\$SetStt). For example, parameters that are used when initializing terminals define which control characters are to be used for functions such as backspace and delete.

The initialization table can be a maximum of 32 bytes long. If the table is fewer than 32 bytes long, OS-9 sets the remaining values in the path descriptor to 0.

You might wish to add devices to your system. If a similar device driver already exists, all you need to do is add the new hardware and load another device descriptor. Device descriptors can be in the boot module or they can be loaded into RAM from mass-storage files while the system is running.

The following diagram illustrates the device descriptor format:

Device Descriptor Format

Relative Address	Use	Check Range	
\$00	Sync Bytes	s (\$87,\$CD) –	
\$01			
\$02	— Module S	Size (bytes) –	
\$03		(×y ***)	
\$04	— Offset to M	Iodule Name –	header
\$05			parity
\$06	F\$ (Type)	\$l (Lang)	
\$07	Attributes	Revision	module
\$08	Header Pa	rity Check	CRC
\$09	— Offset to F		
\$0A	Name		
\$0B	— Offset to D Name		
\$0D	Mode		
\$0E \$0F	— Device C Absolute Ph		
\$10	(24	bit) –	
\$11	Initializatio		
\$12,\$12 + n	(Initializa		
	(Name String	gs, and so on)	
	CRC Che	eck Value	

Path Descriptors

Every open path is represented by a data structure called a *path* descriptor (PD). The PD contains the information the file managers and device drivers require to perform I/O functions.

PDs are 64 bytes long and are dynamically allocated and deallocated by the I/O manager as paths are opened and closed.

They are internal data structures, that are not normally referenced from user or applications programs. The description of PDs is presented here mainly for those programmers who need to write custom file managers, device drivers, or other extensions to OS-9.

PDs have three sections. The first section, which is ten bytes long, is the same for all file managers and device drivers. The information in the first section is shown in the following chart.

Path Descriptor: Standard Information

Name	Relative Address	Size (Bytes)	Use
PD.PD	\$00	1	Path number
PD.MOD	\$01	1	Access mode: 1 = read, 2 = write, 3 = update
PD.CNT	\$02	1	Number of open paths using this PD
PD.DEV	\$03	2	Address of the associated device table entry
PD.CPR	\$05	1	Current process ID
PD.RGS	\$06	2	Address of the caller's register stack
PD.BUF	\$08	2	Address of the 256-byte data buffer (if used)
PD.FST	\$0A	22	Defined by the file manager
PD.OPT	\$20	32	Reserved for the Getstat/ Setstat options

PD.FST is 22-byte storage reserved for and defined by each type of file manager for file pointers, permanent variables, and so on.

PD.OPT is a 32-byte option area used for file or device operating parameters that are dynamically alterable. When the path is opened, the I/O manager initializes these variables by copying the initialization table that is in the device descriptor module. User programs can change the values later, using the Get Status and Set Status system calls.

PD.FST and **PD.OPT** are defined for the file manager in the assembly-language equate file (SCFDefs for the SCF manager or RBFDefs for the RBF manager).

Random Block File Manager

The random block file manager (RBF manager) supports *disk* storage. It is a re-entrant subroutine package called by the I/O manager for I/O system calls to random-access devices. It maintains the logical and physical file structures.

During normal operation, the RBF manager requests allocation and deallocation of 256-byte data buffers. Usually, one buffer is required for each open file. When physical I/O functions are necessary, the RBF manager directly calls the subroutines in the associated device drivers. All data transfers are performed using 256-byte data blocks (pages).

The RBF manager does not deal directly with physical addresses such as tracks and cylinders. Instead, it passes to the device drivers address parameters, using a standard address called a *logical sector number*, or LSN. LSNs are integers from 0 to n-1, where n is the maximum number of sectors on the media. The driver translates the logical sector number to actual cylinder/track/sector values.

Because the RBF manager supports many devices that have different performance and storage capacities, it is highly parameter-driven. The physical parameters it uses are stored on the media itself.

On disk systems, the parameters are written on the first few sectors of Track 0. The device drivers also use the information, particularly the physical parameters stored on Sector 0. These parameters are written by the FORMAT program that initializes and tests the disk.

Logical and Physical Disk Organization

All disks used by OS-9 store basic identification, file structure, and storage allocation information on these first few sectors.

LSN 0 is the *identification sector*. LSN 1 is the *disk allocation map sector*. LSN 2 marks the beginning of the disk's ROOT directory. The following section tells more about LSN 0 and LSN 1.

Identification Sector (LSN 0)

LSN 0 contains a description of the physical and logical characteristics of the disk. These characteristics are set by the FOR-MAT command program when the disk is initialized.

The following table gives the OS-9 mnemonic name, byte address, size, and description of each value stored in this LSN 0.

Name	Relative Address		Use
DD.TOT	\$00	3	Number of sectors on disk
DD.TKS	\$03	1	Track size (in sectors)
DD.MAP	\$04	2	Number of bytes in the allocation bit map
DD.BIT	\$06	2	Number of sectors per cluster
DD.DIR	\$08	3	Starting sector of the ROOT directory
DD.OWN	\$0B	2	Owner's user number
DD.ATT	\$0D	1	Disk attributes
DD.DSK	\$0E	2	Disk identification (for internal use)
DD.FMT	\$10	1	Disk format, density, number of sides
DD.SPT	\$11	2	Number of sectors per track
DD.RES	\$13	2	Reserved for future use
DD.BT	\$15	3	Starting sector of the boot- strap file
DD.BSZ	\$18	2	Size of the bootstrap file (in bytes)
DD.DAT	\$1A	5	Time of creation (Y:M:D:H:M)
DD.NAM	\$1F	32	Volume name in which the last character has the most signifi- cant bit set
DD.OPT	\$3F		Path descriptor options

Disk Allocation Map Sector (LSN 1)

LSN 1 contains the *disk allocation map*, which is created by FORMAT. This map shows which sectors are allocated to the files and which are free for future use.

Each bit in the allocation map represents a sector or cluster of sectors on the disk. If the bit is set, the sector is considered to be in use, defective, or non-existent. If the bit is cleared, the corresponding cluster is available. The allocation map usually starts at LSN1. The number of sectors it requires varies according to how many bits are needed for the map. DD.MAP specifies the actual number of bytes used in the map.

Multiple sector allocation maps allow the number of sectors/cluster to be as small as possible for high volume media.

The FORMAT utility bases the size of the allocation map on the size and number of sectors per cluster.

The DD.MAP value in LSN 0 specifies the number of bytes (in LSN 1) that are used in the map.

Each bit on the disk allocation map corresponds to one sector cluster on the disk. The DD.BIT value in LSN 0 specifies the number of sectors per cluster. The number is an integral power of 2 (1, 2, 4, 8, 16, and so on).

If a cluster is available, the corresponding bit is cleared. If it is allocated, non-existent, or physically defective, the corresponding bit is set.

ROOT Directory

This file is the parent directory of all other files and directories on the disk. It is the directory accessed using the physical device name (such as /D1). Usually, it immediately follows the Allocation Map. The location of the ROOT directory file descriptor is specified in DD.DIR. The ROOT directory contains an entry for each file that resides in the directory, including other directories.

File Descriptor Sector

The first sector of every file is the *file descriptor*. It contains the logical and physical description of the file.

The following	table	describes	the	contents	of the	file	descriptor.
---------------	-------	-----------	-----	----------	--------	------	-------------

Name	Relative Address		Use
FD.ATT	\$00	1	File attributes: D S PE PW PR E W R (see next chart)
FD.OWN	\$01	2	Owner's user ID
FD.DAT	\$03	5	Date last modified: (Y M D H M)
FD.LNK	\$08	1	Link count
FD.SIZ	\$09	4	File size (number of bytes)
FD.CREAT	\$0D	3	Date created (Y M D)
FD.SEG	\$10	240	Segment list (see next chart)

FD.ATT. (The attribute byte) contains the file permission bits. When set the bits indicate the following:

Bit 7 Directory

Bit 6 Single user

Bit 5 Public execute

Bit 4 Public write

Bit 3 Public read

Bit 2 Execute

Bit 1 Write Bit 0 Read

FD.SEG (the segment list) consists of a maximum of 48 5-byte entries that have the size and address of each file block in logical order. Each entry has the block's 3-byte LSN and 2-byte size (in sectors). The entry following the last segment is zero.

After creation, a file has no data segments allocated to it until the first write. (Write operations past the current end-of-file cause sectors to be added to the file. The first write is always past the end-of-file.)

If the file has no segments, it is given an initial segment. Usually, this segment has the number of sectors specified by the minimum allocation entry in the device descriptor. If, however, the number of sectors requested is more than the minimum, the initial segment has the requested number.

Later expansions of the file usually are also made in minimum allocation increments. Whenever possible, OS-9 expands the last segment, instead of adding a segment. When the file is closed, OS-9 truncates unused sectors in the last segment.

OS-9 tries to minimize the number of storage segments used in a file. In fact, many files have only one segment. In such cases, no extra Read operations are needed to randomly access any byte in the file.

If a file is repeatedly closed, opened, and expanded, it can become fragmented so that it has many segments. You can avoid this fragmentation by writing a byte at the highest address you want to be used on a file. Do this before writing any other data.

Directories

Disk directories are files that have the D attribute set. A directory contains an integral number of entries, each of which can hold the name and LSN of a file or another directory.

Each directory entry contains 29 bytes for the filename, followed by the three bytes for the LSN of the file's descriptor sector. The filename is left-justified in the field, with the most significant bit of the last character set. Unused entries have a zero byte in the first filename character position.

Every disk has a master directory called the ROOT directory. The DD.DIR value in LSN 0 (identification sector) specifies the starting sector of the ROOT directory.

The RBF Manager Definitions of the Path Descriptor

As stated earlier in this chapter, the PD.FST section of the path descriptor is reserved for and defined by the file manager. The following table describes the use of this section by the RBF manager. For your convenience, it also includes the other sections of the PD.

Name	Relative Address		Use		
Universal Section (Same for all file managers and device drivers)					
PD.PD	\$00	1	Path number		
PD.MOD	\$01	1	Access mode $1 = \text{read},$ $2 = \text{write},$ $3 = \text{update}$		
PD.CNT	\$02	1	Number of open images (paths using this PD)		
PD.DEV	\$03	2	Address of the associated device table entry		
PD.CPR	\$05	1	Current process ID		
PD.RGS	\$06	2	Address of the caller's 6809 register stack		
PD.BUF	\$08	2	Address of the 256-byte data buffer (if used)		
Name	Relative Address	Size (Bytes)	Use		
	Address	(Bytes)	Use tor Definitions (PD.FST Section)		
	Address	(Bytes)			
The RBF m	Address anager Pat	(Bytes) th Descript	state flag: Bit 0 = current buffer is altered Bit 1 = current sector is in the buffer Bit 2 = descriptor sector is		
The RBF m	Address anager Pat \$0A	(Bytes) th Descript	State flag: Bit 0 = current buffer is altered Bit 1 = current sector is in the buffer Bit 2 = descriptor sector is in the buffer Current logical file position		
The RBF m PD.SMF PD.CP	Address anager Pat \$0A \$0B	(Bytes) th Descript 1	State flag: Bit 0 = current buffer is altered Bit 1 = current sector is in the buffer Bit 2 = descriptor sector is in the buffer Current logical file position (byte address)		

Name	Relative Address		Use		
PD.SSZ	\$19	3	Segment size		
PD.DSK	\$1C	2	Disk ID (for internal use only)		
PD.DTB	\$1E	2	Address of drive table		
Name	Relative Address		Use		
The RBF manager Option Section Definitions (PD.OPT Section)					
(Copied from the device descriptor)					
PD.DTP	\$20	1	Device class: 0 = SCF 1 = RBF 2 = PIPE 3 = SBF		
PD.DRV	\$21	1	Drive number $(0n)$		
PD.STP	\$22	1	Step rate		
PD.TYP	\$23	1	Device type		
PD.DNS	\$24	1	Density capability		
PD.CYL	\$25	2	Number of cylinders (tracks)		
PD.SID	\$27	1	Number of sides (surfaces)		
PD.VFY	\$28	1	0 = verify disk writes		
PD.SCT	\$29	2	Default number of sectors per track		
PD.T0S	\$2B	2	Default number of sectors per track (Track 0)		
PD.ILV	\$2D	1	Sector interleave factor		
PD.SAS	\$2E	1	Segment allocation size		
PD.TFM	\$2F	1	DMA transfer mode		
PD.EXTEN	\$30	2	Path extension for record locking		
PD.STOFF	\$32	1	Sector/track offsets		

Name	Relative Address		Use
(Not copied	from the de	evice descr	riptor):
PD.ATT	\$33	1	File attributes (D S PE PW PR E W R)
PD.FD	\$34	3	File descriptor PSN
PD.DFD	\$37	3	Directory file descriptor PSN
PD.DCP	\$3A	4	File's directory entry pointer
PS.DVT	\$3E	2	Address of the device table entry

Any values not determined by this table default to zero.

RBF-Type Device Descriptor Modules

This section describes the use of the initialization table contained in the device descriptor modules for RBF-type devices. The following values are those the I/O manager copies from the device descriptor to the path descriptor.

Name	Relative Address		Use
	\$0-\$11		Standard device descriptor module header
IT.DTP	\$12	1	Device type: 0 = SCF 1 = RBF 2 = PIPE 3 = SBF
IT.DRV	\$13	1	Drive number
IT.STP	\$14	1	Step rate
IT.TYP	\$15	1	Device type (see RBF path descriptor)
IT.DNS	\$16	1	Media density: Always 1 (double) (see following information)
IT.CYL	\$17	2	Number of cylinders (tracks)
IT.SID	\$19	1	Number of sides
IT.VFY	\$1A	1	0 = Verify disk writes1 = no verify
IT.SCT	\$1B	2	Default number of sectors per track
IT.T0S	\$1D	2	Default number of sectors per track (Track 0)
IT.ILV	\$1F	1	Sector interleave factor
IT.SAS	\$20	1	Minimum size of segment allo- cation (number of sectors to be allocated at one time)

IT.DRV is used to associate a 1-byte integer with each drive that a controller handles. Number the drives for each controller as 0 to n-1, where n is the maximum number of drives the controller can handle.

IT.TYP specifies the device type (all types).

Bit 0 - 0 = 5-inch floppy diskette

Bit 5 - 0 = Non-Color Computer format

1 = Color Computer format

Bit 6 - 0 = Standard OS-9 format

1 = Non-standard format

Bit 7 - 0 = Floppy diskette

1 = Hard disk

IT.DNS specifies the density capabilities (floppy diskette only).

Bit 0 — 0 = Single-bit density (FM)

1 = Double-bit density (MFM)

Bit 1 — 0 = Single-track density (5-inch, 48 tracks per inch)

1 = Double-track density (5-inch, 96 tracks per inch)

IT.SAS specifies the minimum number of sectors allowed at one time.

RBF Record Locking

Record locking is a general term that refers to methods designed to preserve the integrity of files that can be accessed by more than one user or process. The OS-9 implementation of record locking is designed to be as invisible as possible. This means that existing programs do not have to be rewritten to take advantage of record locking facilities. You can usually write new programs without special concern for multi-user activity.

Record locking involves detecting and preventing conflicts during record access. Whenever a process modifies a record, the system locks out other procedures from accessing the file. It defers access to other procedures until it is safe for them to write to the record. The system does not lock records during reads; so, multiple processes can read the record at the same time.

Record Locking and Unlocking

To detect conflicts, OS-9 must recognize when a record is being updated. The RBF manager provides true record locking on a byte basis. A typical record update sequence is:

OS9 I\$Read program reads record RECORD IS LOCKED

program updates record

program updates record

reposition to record

record is rewritten

RECORD IS RELEASED

When a file is opened in update mode, any read causes locking of the record being accessed. This happens because the RBF manager cannot determine in advance if the record is to be updated. The record stays locked out until the next read, write, or close.

However, when a file is opened in the read or execute modes, the system does not lock accessed records because the records cannot be updated in these two modes.

A subtle but important problem exists for programs that interrogate a data base and occasionally update its data. If you neglect to release a record after accessing it, the record might be locked up indefinitely. This problem is characteristic of record locking systems and you can avoid it with careful programming.

Only one portion of a file can be locked out at a time. If an application requires more than one record to be locked out, open multiple paths to the same file and lock the record accessed by each path. RBF notices that the same process owns both paths and keeps them from locking each other out.

Non-Shareable Files

Sometimes (although rarely), you must create a file that can never be accessed by more than one user at a time. To lock the file, you set the single-user (s) bit in the file's attribute byte. You can do this by using the proper option when the file is created, or later using the OS-9 ATTR command. Once the single-user bit is set, only one user can open the file at a time. If other users attempt to open the file, Error 253 is returned. Note however, that non-shareable means only one path can be opened to a file at one time. Do not allow two processes to concurrently access a non-shareable file through the same path.

More commonly, you need to declare a file as single-user only during the execution of a specific program. You can do this by opening the file with the single-user bit set. For example, suppose a process is sorting a file. With the file's single-user bit set, OS-9 treats the file exactly as though it had a single-user attribute. If another process attempts to open the file, OS-9 returns Error 253.

You can duplicate non-shareable paths by using the I\$Dup system call. This means that it can be inherited, and therefore accessible to more than one process at a time. Single-user means that the file can be opened only once.

End-of-File Lock

A special case of record locking occurs when a user reads or writes data at the end of a file, creating an *EOF Lock*. An EOF Lock keeps the end of the file locked out until a process performs a READ or WRITE that is not at the end of the file. It prevents problems that might otherwise occur when two users want to simultaneously extend a file. The EOF Lock is the only case in which a WRITE call automatically causes portions of a file to be locked out. An interesting and useful side effect of the EOF Lock function occurs if a program creates a file for sequential output. As soon as the program creates the file, EOF Lock is set and no other process can *pass* the writer in processing the file. For example, if an assembler redirects a listing to a disk file, and a spooler utility tries to print a line from the file before it is written, record locking makes the spooler wait and stay at least one step behind the assembler.

Deadlock Detection

A deadly embrace, or deadlock, typically occurs when two processes attempt to gain control of two or more disk areas at the same time. If each process gets one area (locking out the other process), both processes become permanently stuck. Each waits for a segment that can never become free. This situation is not restricted to any particular record locking scheme or operating system.

When a deadly embrace occurs, RBF returns a deadlock error (Error 254) to the process that caused OS-9 to detect the deadlock. To avoid deadlocks, make sure that processes always access records of shared files in the same sequence.

When a deadlock error occurs, it is not sufficient for a program to retry the operation that caused the error. If all processes use this strategy, none can ever succeed. For any process to proceed, at least one must cancel operation to release its control over a requesting segment.

RBF-Type Device Driver Modules

An RBF-type device driver module contains a package of subroutines that perform sector-oriented I/O to or from a specific hardware controller. Such a module is usually re-entrant. Because of this, one copy of one device driver module can simultaneously run several devices that use identical I/O controllers.

The I/O manager allocates a permanent memory area for each device driver. The size of the memory area is given in the device driver module header. The I/O manager and the RBF manager use some of this area. The device driver can use the rest in any manner. This area is used as follows:

The RBF Device Memory Area Definitions

Name	Relative Address		Use
V.PAGE	\$00	1	Port extended address bits A20-A16
V.PORT	\$01	2	Device base address (defined by the I/O manager)

Name	Relative Address		Use
V.LPRC	\$03	1	ID of the last active process (not used by RBF device drivers)
V.BUSY	\$04	1	ID of the current process using driver (defined by RBF) $0 = \text{no current process}$
V.WAKE	\$05	1	ID of the process waiting for I/O completion (defined by the device driver)
V.USER	\$06	0	Beginning of file manager specific storage
V.NDRV	\$06	1	Maximum number of drives the controller can use (defined by the device driver)
	\$07	8	Reserved
DRVBEG	\$0F	0	Beginning of the drive tables
TABLES	\$0F	DRVMEN*N	Space for number of tables reserved (n)
FREE		0	Beginning of space available for driver

These values are defined in files in the DEFS directory on the Development Package disk.

TABLES. This area contains one table for each drive that the controller handles. (The RBF manager assumes that there are as many tables as indicated by V.NDRV.) Some time after the driver Init routine is called, the RBF manager issues a request for the driver to read LSN 0 from a drive table by copying the first part of LSN 0 (up to DD.SIZ) into the table. Following is the format of each drive table:

Name	Relative Address	Size (Bytes)	Use
DD.TOT	\$00	3	Number of sectors.
DD.TKS	\$03	1	Track size (in sectors).
DD.MAP	\$04	2	Number of bytes in the allocation bit map.
DD.BIT	\$06	2	Number of sectors per bit (cluster size).
DD.DIR	\$08	3	Address (LSN) of the ROOT directory.
DD.OWN	\$0B	2	Owner's user number.
DD.ATT	\$0D	1	Disk access attributes (D S PE PW PR E W R).
DD.DSK	\$0E	2	Disk ID (a pseudo-random number used to detect diskette swaps).
DD.FMT	\$10	1	Media format.
DD.SPT	\$11	2	Number of sectors per track. (Track 0 can use a different value specified by IT.TOS in the device descriptor.)
DD.RES	\$13	2	Reserved for future use.
DD.SIZ	\$15	0	Minimum size of device descriptor.
V.TRAK	\$15	2	Number of the current track (the track that the head is on, and the track updated by the driver).
V.BMB	\$17	1	Bit-map use flag: 0 = Bit map is not in use. (Disk driver routines must not alter V.BMB.)
V.FILEHD	\$18	2	Open file list for this drive.

Name	Relative Address	Size (Bytes)	Use
V.DISKID	\$1A	2	Disk ID.
V.BMAPSZ	\$1C	1	Size of bitmap.
V.MAPSCT	\$1D	1	Lowest reasonable bitmap sector.
V.RESBIT	\$1E	1	Reserved bitmap sector.
V.SCTKOF	\$1F	1	Sector/track byte.
V.SCOFST	\$20	1	Sector offset split from V.SCTKOF.
V.TKOFST	\$21	1	Track offset split from V.SCTKOF.
RESERVED	\$22	4	Reserved for future use.
DRVMEN	\$26		Size of each drive table.

The format attributes (DD.FMT) are these:

Bit B0 = Number of sides

0 = Single-sided

1 = Double-sided

Bit B1 = Density

0 = Single-density

1 = Double-density

Bit B2 = Track density

0 = Single (48 tracks per inch)

1 = Double (96 tracks per inch)

RBF Device Driver Subroutines

Like all device driver modules, RBF device drivers use a standard executable memory module format.

The execution offset address in the module header points to a branch table that has six 3-byte entries. Each entry is typically a long branch (LBRA) to the corresponding subroutine. The branch table is defined as follows:

ENTRY	LBRA	INIT	Initialize drive
	LBRA	READ	Read sector
	LBRA	WRITE	Write sector
	LBRA	GETSTA	Get status
	LBRA	SETSTA	Set status
	LBRA	TERM	Terminate device

Ensure that each subroutine exists with the C bit of the condition code register cleared if no error occurred. If an error occurs, set the C bit and return an appropriate error code Register B.

The rest of this chapter describes the RBF device driver subroutines and their entry and exit conditions.

Initializes a device and the device's memory area.

Entry Conditions:

Y = address of the device descriptor U = address of the device memory area

Exit Conditions:

CC = carry set on error B = error code (if any)

- If you want OS-9 to verify disk writes, use the Request Memory system call (F\$SRqMem) to allocate a 256-byte buffer area in which a sector can be read back and verified after a write.
- You must initialize the device memory area. For floppy diskette controllers, initialization typically consists of:
 - 1. Initializing V.NDRV to the number of drives with which the controller works
 - 2. Initializing DD.TOT (in the drive table) to a non-zero value so that Sector 0 can be read or written
 - 3. Initializing V.TRAK to \$FF so that the first seek finds Track 0
 - 4. Placing the IRQ service routine on the IRQ polling list, using the Set IRQ system call (F\$IRQ)
 - 5. Initializing the device control registers (enabling interrupts if necessary)
- Prior to being called, the device memory area is cleared (set to zero), except for V.PAGE and V.PORT. (These areas contain the 24- bit device address.) Ensure the driver initializes each drive table appropriately for the type of diskette that the driver expects to be used on the corresponding drive.

Reads a 256-byte sector from a disk and places it in a 256-byte sector buffer.

Entry Conditions:

B = MSB of the disk's LSN

X = LSB of the disk's LSN

Y = address of the path descriptor

U = address of the device memory area

Exit Conditions:

CC = carry set on error

B = error code (if any)

- The following is a typical routine for using Read:
 - 1. Get the sector buffer address from PD.BUF in the path descriptor.
 - 2. Get the drive number from PD.DRV in the path descriptor.
 - 3. Compute the physical disk address from the logical sector number.
 - 4. Initiate the Read operation.
 - 5. Copy V.BUSY to V.WAKE. The driver goes to sleep and waits for the I/O to complete. (The IRQ service routine is responsible for sending a wakeup signal.) After awakening, the driver tests V.WAKE to see if it is clear. If it isn't clear, the driver goes back to sleep.
- Whenever you read LSN 0, you must copy the first part of this sector into the proper drive table. (Get the drive number from PD.DRV in the path descriptor.) The number of bytes to copy is in DD.SIZ. Use the drive number (PD.DRV) to compute the offset for the corresponding drive table as follows:

LDA PD.DRV,Y Get the drive number LDB #DRVMEN Get the size of a

drive table

MUL

LEAX DRVBEG,U Get the address of

the first table

LEAX D, X Compute the address

of the table

Write Writes a 256-byte sector buffer to a disk.

Entry Conditions:

B = MSB of the disk LSN

X = LSB of the disk LSN

Y = address of the path descriptor

U = address of the device memory area

Exit Conditions:

CC = carry set on error

B = error code

- Following is a typical routine for using Write:
- 1. Get the sector buffer address from PD.BUF in the path descriptor.
- 2. Get the drive number from PD.DRV in the path descriptor.
- 3. Compute the physical disk address from the logical sector number.
- 4. Initiate the Write operation.
- 5. Copy V.BUSY to V.WAKE. The driver then goes to sleep and waits for the I/O to complete. (The IRQ service routine sends the wakeup signal.) After awakening, the driver tests V.WAKE to see if it is clear. If it is not, the driver goes back to sleep. If the disk controller cannot be interrupt-driven, it is necessary to perform a programmed I/O transfer.
- 6. If PF.VFY in the path descriptor is equal to zero, read the sector back in and verify that it is written correctly. Verification usually does not involve a comparison of all of the data bytes.
- If disk writes are to be verified, the Init routine must request the buffer in which to place the sector when it is read back. Do not copy LSN 0 into the drive table when reading it back for verification.

• Use the drive number (PD.DRV) to compute the offset to the corresponding drive table as shown for the Read routine.

Getstats and Setstats

Reads or changes device's operating parameters.

Entry Conditions:

U = address of the device memory area

Y = address of the path descriptor

A = status code

Exit Conditions:

B = error code (if any) CC = carry set on error

Additional Information:

- Get/set the device's operating parameters (status) as specified for the Get Status and Set Status system calls. Getsta and Setsta are wild card calls.
- It might be necessary to examine or change the register stack that contains the values of the 6809 register at the time of the call. The address of the register stack is in PD.RGS, which is located in the path descriptor. You can use the following offsets to access any value in the register stack:

Reg.	Relative Addr.	Size	6809 Reg.
R\$CC	\$00	1	Condition Code Reg.
R\$D	\$01	2	Register D
R\$A	\$01	1	Register A
R\$B	\$02	1	Register B
R\$DP	\$03	1	Register DP
R\$X	\$04	2	Register X
R\$Y	\$06	2	Register Y
R\$U	\$08	2	Register U
R\$PC	\$0A	2	Program Counter

• Register D overlays Registers A and B.

Term Terminate a device.

Entry Conditions:

U = address of the device memory area

Exit Conditions:

CC = carry set on error B = error code (if any)

- This routine is called when a device is no longer in use in the system (when the link count of its device descriptor module becomes zero).
- Following is a typical routine for using Term:
 - 1. Wait until any pending I/O is completed.
 - 2. Disable the device interrupts.
 - 3. Remove the device from the IRQ polling list.
 - 4. If the Init routine reserved a 256-byte buffer for verifying disk writes, return the memory with the Return Sysmem system call (F\$SRtMem).

IRQ Service Routine

Services device interrupts.

- The IRQ Service routine sends a wakeup signal to the process indicated by the process ID in V.WAKE when the I/O is complete. It then clears V.WAKE as a flag to indicate to the main program that the IRQ has indeed occurred.
- When the IRQ service routine finishes servicing an interrupt it must clear the carry and exit with an RTS instruction.
- Although this routine is not included in the device driver module branch table and is not called directly by the RBF manager, it is a key routine in interrupt-driven drivers. Its function is to:
 - 1. Service the device interrupts (receive data from device or send data to it). The IRQ service routine puts its data into and get its data from buffers that are defined in the device memory area.
 - 2. Wake up a process that is waiting for I/O to be completed. To do this, the routine checks to see if there is a process ID in V.WAKE (if the bit is non-zero); if so, it sends a wakeup signal to that process.
 - 3. If the device is ready to send more data, and the output buffer is empty, disable the device's *ready to transmit* interrupts.

Boot (Bootstrap Module)

Loads the boot file into RAM.

Entry Conditions:

None

Exit Conditions:


D = size of the boot file (in bytes)

X = address at which the boot file was loaded into memory

CC = carry set on error B = error code (if any)

- The Boot module is not part of the disk driver. It is a separate module that is stored on the boot track of the system disk with OS9P1 and REL.
- The bootstrap module contains one subroutine that loads the bootstrap file and related information into memory. It uses the standard executable module format with a module type of \$C. The execution offset in the module header contains the offset to the entry point of this subroutine.
- The module gets the starting sector number and size of the OS9Boot file from LSN 0. OS-9 allocates a memory area large enough for the Boot file. Then, it loads the Boot file into this memory area.
- Following is a typical routine for using Boot:
 - 1. Read LSN 0 from the disk into a buffer area. The Boot module must pick its own buffer area. LSN 0 contains the values for DD.BT (the 24-bit LSN of the bootstrap file), and DD.BSZ (the size of the bootstrap file in bytes).
 - 2. Get the 24-bit LSN of the bootstrap file from DD.BT.
 - 3. Get the size of the bootstrap file from DD.BSZ. The Boot module is contained in one logically contiguous block beginning at the logical sector specified in DD.BT and extending for DD.BSZ/256+1 sectors.

- 4. Use the OS-9 Request Sysmem system call (F\$SRqMem) to request the memory area in which the Boot file is loaded.
- 5. Read the Boot file into this memory area.
- 6. Return the size of the Boot file and its location. Boot file is loaded.



Sequential Character File Manager

The Sequential Character File Manager (SCF) supports devices that operate on a character-by-character basis. These include terminals, printers, and modems.

SCF is a re-entrant subroutine package. The I/O manager calls the SCF manager for I/O system handling of sequential, character-oriented devices. The SCF manager includes the extensive I/O editing functions typical of line-oriented operation, such as:

- backspace
- line delete
- line repeat
- auto line feed
- screen pause
- return delay padding

The SCF-type device driver modules are CC3IO, PRINTER, and RS-232. They run the video display, printer, and serial ports respectively. See the *OS-9 Commands* manual for additional Color Computer I/O devices.

SCF Line Editing Functions

The SCF manager supports two sets of read and write functions. I\$Read and I\$Write pass data with no modification. I\$ReadLn and I\$WritLn provide full line editing of device functions.

Read and Write

The Read and Write system calls to SCF-type devices correspond to the BASIC09 GET and PUT statements. While they perform little modification to the data they pass, they do filter out keyboard interrupt, keyboard terminate, and pause character. (Editing is disabled if the corresponding character in the path descriptor contains a zero.)

Carriage returns are not followed by line feeds or nulls automatically, and the high order bits are passed as sent/received.

Read Line and Write Line

The Read Line and Write Line system calls to SCF-type devices correspond to the BASIC09 INPUT, PRINT, READ, and WRITE statements. They provide full line editing of all functions enabled for a particular device.

The system initializes I\$ReadLn and I\$WritLn functions when you first use a particular device. (OS-9 copies the option table from the device descriptor table associated with the specific device.)

Later, you can alter the calls—either from assembly-language programs (using the Get Status system call), or from the keyboard (using the TMODE command). All bytes transferred by Readln and Writln have the high order bit cleared.

SCF Definitions of the Path Descriptor

The PD.FST and PD.OPT sections of the path descriptor are reserved for and used by the SCF file manager.

The following table describes the SCF manager's use of PD.FST and PD.OPT. For your convenience, the table also includes the other sections of the PD.

The PD.OPT section contains the values that determine the line editing functions. It contains many device operating parameters that can be read or written by the Set Status or Get Status system call. Any values not set by this table default to zero.

Note: You can disable most of the editing functions by setting the corresponding control character in the path descriptor to zero. You can use the Set Status system call or the TMODE command to do this. Or, you can go a step further by setting the corresponding control character value in the device descriptor module to zero.

To determine the default settings for a specific device, you can inspect the device descriptor.

Name	Relative Address	Size (Bytes)	Use
Universal S	Section (Same	e for all f	ile managers)
PD.PD	\$00	1	Path number
PD.MOD	\$01	1	Access mode: $1 = \text{read}$ $2 = \text{write}$ $3 = \text{update}$
PD.CNT	\$02	1	Number of open images (paths using this PD)
PD.DEV	\$03	2	Address of the associated device table entry
PD.CPR	\$05	1	Current process ID
PD.RGS	\$06	2	Address of the caller's 6809 register stack
PD.BUF	\$08	2	Address of the 256-byte data buffer (if used)
Name	Relative Address	Size (Bytes)	Use
SCF Path I	Descriptor De	efinitions	(PD.FST Section)
PD.DV2	\$0A	2	Device table address of the second (echo) device
PD.RAW	\$0C	1	Edit flag: 0 = raw mode 1 = edit mode
PD.MAX	\$0D	2	Read Line maximum character count
PD.MIN	\$0F	1	Devices are mine if cleared
PD.STS	\$10	2	Status routine module address
PD.STM	\$12	2	Reserved for status routine

Name	Relative Address	Size (Bytes)	Use
SCF Option	Section Defi	inition (P	D.OPT Section)
(Copied from	the device	descripto	r)
PD.DTP	\$20	1	Device class: 0 = SCF 1 = RBF 2 = PIPE 3 = SBF
PD.UPC	\$21	1	Case: 0 = upper and lower 1 = upper only
PD.BSO	\$22	1	Backspace: 0 = backspace 1 = backspace, space and backspace
PD.DLO	\$23	1	Delete: 0 = backspace over line 1 = carriage return, line feed
PD.EKO	\$24	1	Echo: 0 = no echo
PD.ALF	\$25	1	Auto line feed: 0 = no auto line feed
PD.NUL	\$26	1	End-of-line null count: n = number of nulls (\$00) sent after each carriage return or carriage return and line feed (n = \$00-\$FF)
PD.PAU	\$27	1	End of page pause: 0 = no pause
PD.PAG	\$28	1	Number of lines per page
PD.BSP	\$29	1	Backspace character
PD.DEL	\$2A	1	Delete-line character

Name	Relative Address	Size (Bytes)	Use
SCF Option	Section Def	inition co	entinued (PD.OPT Section)
PD.EOR	\$2B	1	End-of-record character (End- of-line character) Read only. Normally set to \$0D: 0 = Terminate read-line only at the end of the file
PD.EOF	\$2C	1	End-of-file character (read only)
PD.RPR	\$2D	1	Reprint-line character
PD.DUP	\$2E	1	Duplicate-last-line character
PD.PSC	\$2F	1	Pause character
PD.INT	\$30	1	Keyboard-interrupt character
PD.QUT	\$31	1	Keyboard-terminate character
PD.BSE	\$32	1	Backspace-echo character
PD.OVF	\$33	1	$ \begin{array}{c} Line\text{-}overflow \ character \ (bell \\ \hline \texttt{CTRL} \ \texttt{G}) \end{array} $
PD.PAR	\$34	1	Device-initialization value (parity)
PD.BAU	\$35	1	Software setable baud rate
PD.D2P	\$36	2	Offset to second device name string
PP.XON	\$38	1	ACIA XON char
PD.XOFF	\$39	1	ACIA XOFF char
PD.ERR	\$3A	1	Most recent I/O error status
PD.TBL	\$3B	2	Copy of device table address
PD.PLP	\$3D	2	Path descriptor list pointer
PD.PST	\$3F	1	Current path status

PD.EOF specifies the end-of-file character. If this is the first and only character that is input to the SCF device, SCF returns an end-of-file error on Read or Readln.

PD.PSC specifies the pause character, which suspends output to the device before the next end-of-record character. The pause character also deletes any type-ahead input for Readln.

PD.INT specifies the keyboard-interrupt character. When the character is received, the system sends a keyboard terminate signal to the last user of a path. The character also terminates the current I/O request (if any) with an error identical to the keyboard interrupt signal code.

PD.QUT specifies the keyboard-terminate character. When this character is received, the system sends a keyboard terminate signal to the last user of a path. The system also cancels the current I/O request (if any) by sending error code identical to the keyboard interrupt signal code.

PD.PAR specifies the parity information for external serial devices.

PD.BAU specifies baud rate, word length and stop bit information for serial devices.

PD.XON contains either the character used to enable transmission of characters or a null character that disables the use of XON.

PD.XOFF contains either the character used to disable transmission of characters or a null character that disables the use of XOFF.

SCF-Type Device Descriptor Modules

The following chart shows how the initialization table in the device descriptors is used for SCF-type devices. The values are those the I/O manager copies from the device descriptor to the path descriptor.

An SCF editing function is turned off if its corresponding value is set to zero. For example, if IT.EOF is set to zero, there is no end-of-file character.

Name	Relative Address	Size (Bytes)	Use
(header)	\$00- 11		Standard device descriptor module header
IT.DVC	\$12	1	Device class: 0 = SCF 1 = RBF 2 = PIPE 3 = SBF
IT.UPC	\$13	1	Case: 0 = upper- and lowercase 1 = uppercase only
IT.BSO	\$14	1	Backspace: 0 = backspace 1 = backspace, then space and backspace
IT.DLO	\$15	1	Delete: 0 = backspace over line 1 = carriage return
IT.EKO	\$16	1	Echo: 0 = echo off
IT.ALF	\$17	1	Auto line feed: 0 = auto line feed disabled
IT.NUL	\$18	1	End-of-line null count
IT.PAU	\$19	1	Pause: 0 = end-of-page pause disabled
IT.PAG	\$1A	1	Number of lines per page
IT.BSP	\$1B	1	Backspace character
IT.DEL	\$1C	1	Delete-line character
IT.EOR	\$1D	1	End-of-record character
IT.EOF	\$1E	1	End-of-file character
IT.RPR	\$1F	1	Reprint-line character

Name	Relative Address	Size (Bytes)	Use
IT.DUP	\$20	1	Duplicate-last-line character
IT.PSC	\$21	1	Pause character
IT.INT	\$22	1	Interrupt character
IT.QUT	\$23	1	Quit character
IT.BSE	\$24	1	Backspace echo character
IT.OVF	\$25	1	Line-overflow character (bell)
IT.PAR	\$26	1	Initialization value—used to initialize a device control register when a path is opened to it (parity)
IT.BAU	\$27	1	Baud rate
IT.D2P	\$28	2	Attached device name string offset
IT.XON	\$2A	1	X-ON character
IT.XOFF	\$2B	1	X-OFF character
IT.COL	\$2C	1	Number of columns for display
IT.ROW	\$2D	1	Number of rows for display
IT.WND	\$2E	1	Window number
IT.VAL	\$2F	1	Data in rest of descriptor is valid
IT.STY	\$30	1	Window type
IT.CPX	\$31	1	X cursor position
IT.CPY	\$32	1	Y cursor position
IT.FGC	\$33	1	Foreground color
IT.BGC	\$34	1	Background color
IT.BDC	\$35	1	Border color

SCF-Type Device Driver Modules

An SCF-type device driver module contains a package of subroutines that perform raw (unformatted) data I/O transfers to or from a specific hardware controller. Such a module is usually reentrant so that one copy of the module can simultaneously run several devices that use identical I/O controllers. The I/O manager allocates a permanent memory area for each controller sharing the driver.

The size of the memory area is defined in the device driver module header. The I/O manager and SCF use some of the memory area. The device driver can use the rest in any way (typically as variables and buffers). Typically, the driver uses the area as follows:

Name	Relative Address	Size (Bytes)	Use
V.PAGE	\$00	1	Port extended 24 bit address
V.PORT	\$01	2	Device base address (defined by the I/O manager)
V.LPRC	\$03	1	ID of the last active process
V.BUSY	\$04	1	ID of the active process (defined by RBF): 0 = no active process
V.WAKE	\$05	1	ID of the process to reawaken after the device completes I/O (defined by the device driver): 0 = no waiting process
V.USER	\$06	0	Beginning of file manager specific storage
V.TYPE	\$06	1	Device type or parity
V.LINE	\$07	1	Lines left until the end of the page
V.PAUS	\$08	1	Pause request: 0 = no pause requested
V.DEV2	\$09	2	Attached device memory area
V.INTR	\$0B	1	Interrupt character

Name	Relative Address	Size (Bytes)	Use
V.QUIT	\$0C	1	Quit character
V.PCHR	\$0D	1	Pause character
V.ERR	\$0E	1	Error accumulator
V.XON	\$0F	1	XON character
V.XOFF	\$10	1	XOFF character
V.KANJI	\$11	1	Reserved
V.KBUF	\$12	2	Reserved
V.MODADR	\$14	2	Reserved
V.PDLHD	\$16	2	Path descriptor list header
V.RSV	\$18	5	Reserved
V.SCF	\$1D	0	End of SCF memory requirements
FREE	\$1D	0	Free for the device driver to use

V.LPRC contains the process ID of the last process to use the device. The IRQ service routine sends this process the proper signal if it receives a quit character or an interrupt character. V.LPRC is defined by SCF.

V.BUSY contains the process ID of the process that is using the device. (If the device is not being used, V.BUSY contains a zero.) The process ID is used by SCF to prevent more than one process from using the device at the same time. V.BUSY is defined by SCF.

SCF Device Driver Subroutines

Like all device drivers, SCF device drivers use a standard executable memory module format.

The execution offset address in the module header points to a branch table that has six 3-byte entries. Each entry is typically an LBRA to the corresponding subroutine. The branch table is defined as follows:

ENTRY	LBRA	INIT	Initialize driver
	LBRA	READ	Read character
	LBRA	WRITE	Write character
	LBRA	GETSTA	Get status
	LBRA	SETSTA	Set status
	LBRA	TERM	Terminate device

If no error occurs, each subroutine exits with the C bit in the Condition Code Register cleared. If an error occurred, each subroutine sets the C bit and returns an appropriate error code in Register B.

The rest of this chapter describes these subroutines and their entry and exit conditions.

Initializes device control registers, and enables interrupts if necessary.

Entry Conditions:

Y = address of the device descriptor U = address of the device memory area

Exit Conditions:

CC = carry set on error B = error code (if any)

- Prior to being called, the device memory area is cleared (set to zero), except for V.PAGE and V.PORT. (V.PAGE and V.PORT contain the device address.) There is no need to initialize the part of the memory area used by the I/O manager and SCF.
- Follow these steps to use Init:
 - 1. Initialize the device memory area.
 - 2. Place the IRQ service routine on the IRQ polling list, using the Set IRQ system call (F\$IRQ).
 - 3. Initialize the device control registers.

Reads the next character from the input buffer.

Entry Conditions:

Y = address of the path descriptor U = address of the device memory area

Exit Conditions:

 $A = character \ read$ $CC = carry \ set \ on \ error$ $B = error \ code \ (if \ any)$

- This is a step by step description of a Read operation:
 - 1. Read gets the next character from the input buffer.
 - 2. If no data is ready, Read copies its process ID from V.BUSY into V.WAKE. It then uses the Sleep system call to put itself to sleep.
 - 3. Later, when Read receives data, the IRQ service routine leaves the data in a buffer. Then, the routine checks V.WAKE to see if any process is waiting for the device to complete I/O. If so, the IRQ service routine sends a wakeup signal to the waiting process.
- Data buffers are not automatically allocated. If a buffer is used, it defines it in the device memory area.

Write Sends a character (places a data byte in an output buffer) and enables the device output interrupts.

Entry Conditions:

A = character to write

Y = address of the path descriptor

U = address of the device memory area

Exit Conditions:

CC = carry set on error B = error code (if any)

Additional Information:

• If the data buffer is full, Write copies its process ID from V.BUSY into V.WAKE. Write then puts itself to sleep.

Later, when the IRQ service routine transmits a character and makes room for more data, it checks V.WAKE to see if there is a process waiting for the device to complete I/O. If there is, the routine sends a wakeup signal to that process.

- Write must ensure that the IRQ service routine that starts it begins to place data in the buffer. After an interrupt is generated, the IRQ service routine continues to transmit data until the data buffer is empty. Then, it disables the device's ready-to-transmit interrupts.
- Data buffers are not allocated automatically. If a buffer is used, define it in the device memory area.

Getsta and Setsta

Gets/sets device operating parameters (status) as specified for the Get Status and Set Status system calls. Getsta and Setsta are wildcard calls.

Entry Conditions:

A = depends on the function code

Y = address of the path descriptor

U = address of the device memory area
Other registers depend on the function code.

Exit Conditions:

B = error code (if any)

CC = carry set on error

Other registers depend on the function code

Additional Information:

- Any codes not defined by the I/O manager or SCF are passed to the device driver.
- You might need to examine or change the register stack that contains the values of the 6809 registers at the time of the call. The address of the register stack can be found in PD.RGS, which is located in the path descriptor.
- You can use the following offsets to access any value in the register packet:

Name	Relative Address	Size (Bytes)	6809 Register
R\$CC	\$00	1	Condition Codes Register
R\$D	\$01	0	Register D
R\$A	\$01	1	Register A
R\$B	\$02	1	Register B
R\$DP	\$03	1	Register DP
R\$X	\$04	2	Register X
R\$Y	\$06	2	Register Y
R\$U	\$08	2	Register U
R\$PC	\$0A	2	Program Counter

The function code is retrieved from the R\$B on the user stack.

Term Terminates a device. Term is called when a device is no longer in use (when the link count of the device descriptor module becomes zero).

Entry Conditions:

U = pointer to the device memory area

Exit Conditions:

CC = carry set on error B = error code (if any)

- To use Term:
 - 1. Wait until the IRQ service routine empties the output buffer.
 - 2. Disable the device interrupts.
 - 3. Remove the device from the IRQ polling list.
- When Term closes the last path to a device, OS-9 returns to the memory pool the memory that the device used. If the device has been attached to the system using the I\$Attach system call, OS-9 does not return the static storage for the driver until an I\$Detach call is made to the device. Modules contained in the Boot file are never terminated, even if their link counts reach 0.

IRQ Service Routine

Receives device interrupts. When I/O is complete, the routine sends a wakeup signal to the process identified by the process ID in V.WAKE. The routine also clears V.WAKE as a flag to indicate to the main program that the IRQ has occurred.

- The IRQ Service Routine is not included in device driver branch tables, and is not called directly by SCF. However, it is a key routine in device drivers.
- When the IRQ Service routine finishes servicing an interrupt, the routine must clear the carry and exit with an RTS instruction.
- Here is a typical sequence of events that the IRQ Service Routine performs:
 - 1. Service the device interrupts (receive data from the device or send data to it). Ensure this routine puts its data into and get its data from buffers that are defined in the device memory area.
 - 2. Wake up any process that is waiting for I/O to complete. To do this, the routine checks to see if there is a process ID in V.WAKE (a value other than zero); if so, it sends a wakeup signal to that process.
 - 3. If the device is ready to send more data, and the output buffer is empty, disable the device's ready-to-transmit interrupts.
 - 4. If a pause character is received, set V.PAUS in the attached device storage area to a value other than zero. The address of the attached device memory area is in V.DEV2.
 - V.PAUS in the attached device storage area to non-zero value. The address of the attached device memory area is in V.DEV2.
 - 5. If a keyboard terminate or interrupt character is received, signal the process in V.LPRC (last known process) if any.

9:			

The Pipe File Manager (PIPEMAN)

The Pipe file manager handles control of processes that use paths to pipes. Pipes allow concurrently executing processes to send each other data by using the output of one process (the writer) as input to a second process (the reader). The reader gets input from the standard input. The exclamation point (!) operator specifies that the input or output is from or to a pipe. The Pipe file manager allocates a 256-byte block and a path descriptor for data transfer. The Pipe file manager also determines which process has control of the pipe. The Pipe file manager has the standard file manager branch table at its entry point:

PipeEnt lbra Create

lbra Open

lbra MakDir

lbra ChgDir

lbra Delete

lbra Seek

lbra PRead

lbra PWrite

lbra PRdLn

lbra PWrLn

lbra Getstat

lbra Putstat

lbra Close

You cannot use MakDir, ChgDir, Delete, and Seek with pipes. If you try to do so, the system returns E\$UNKSVC (unknown service request). Getstat and Putstat are also no-action service routines. They return without error.

Create and Open perform the same functions. They set up the 256-byte data exchange buffer, and save several addresses in the path descriptor.

The Close request checks to see if any process is reading or writing through the pipe. If not, OS-9 returns the buffer.

PRead, PWrite, PRdLn, and PWrLn read data from the buffer and write data to it.

The ! operator tells the Shell that processes wish to communicate through a pipe. For example:

```
proc1 ! proc2 ENTER
```

In this example, shell forks Proc1 with the standard output path to a pipe, and forks Proc2 with the Standard input path from a pipe.

Shell can also handle a series of processes using pipes. Example:


```
proc1 ! proc2 ! proc3 ! proc4 ENTER
```

The following outline shows how to set up pipes between processes:

Open /pipe	save path in variable x
Dup path #1	save stdout in variable y
Dup x	make path available
Fork proc1	put pipe in stdout
9 11 12 19 19 17 17 17 17 17 17 17 17 17 17 17 17 17	(Dup uses lowest available)
Close #1	make path available
Dup y	restore stdout
Close y	make path available
Dup path #0	save stdin in Y
Close #0	make path available
Dup х	put pipe in stdin
Fork 2	fork process 2
Close #0	make path available
Dup у	restore stdin
Close x	no longer needed
Close y	no longer needed

Example: The following example shows how an application can initiate another process with the stdin and stdout routed through a pipe.

```
Open /pipe1
               save path in variable a
Open /pipe2
               save path in variable b
Dup Ø
               save stdin in variable x
               save stdout in variable y
Dup 1
Close Ø
               make path available
Close 1
               make path available
               make pipe1 stdin
Dup a
Dup b
               make pipe2 stdout
Fork new process
Close Ø
               make path available
               make path available
Close 1
               restore stdin
Dup x
Dup y
               restore stdout
Return a&b
               return pipe path numbers to caller
```



System Calls

System calls are used to communicate between the OS-9 operating system and assembly-language programs. There are two major types of calls—I/O calls and function calls.

Function calls include user mode calls and system mode calls.

Each system call has a mnemonic name. Names of I/O calls start with I\$. For example, the Change Directory call is I\$ChgDir. Names of function calls start with F\$. For example, the Allocate Bits call is F\$AllBit. The names are defined in the assembler-input conditions equate file called OS9Defs.

System mode calls are privileged. You can execute them only while OS-9 is in the system state (when it is processing another system call, executing a file manager or device driver, and so on).

System mode calls are included in this manual primarily for programmers writing device drivers and other system-level applications.

Calling Procedure

To execute any system calls, you need to use an SWI2 instruction:

- 1. Load the 6809 registers with any appropriate parameters.
- 2. Execute an SWI2 instruction, followed immediately by a constant byte, which is the request code. In the references in this chapter, the first line is the system call name (for example Close Path) and the second line contains the call's mnemonic name (for example I\$Close), the software interrupt Code 2 (103F), and the call's request code (for example, 8F) in hexadecimal.
- 3. After OS-9 processes the call, it returns any parameters in the 6809 registers. If an error occurs, the C bit of the condition code register is set, and Register B contains the appropriate error code. This feature permits a BCS or BCC instruction immediately following the system call to branch either if there is an error or if no error occurs.

As an example, here is the Close system call:

LDA PATHNUM SWI2 FCB \$8F BCS ERROR

You can use the assembler's OS9 directive to simplify the call, as follows.

LDA PATHNUM
OS9 I\$Close
BCS ERROR

The ASM assembler allows any combination of upper- or lower-case letters. The RMA assembler, included in the OS-9 Level Two Development Pak, is case sensitive. The names in this manual have been spelled with upper and lower case letters, matching the defs for RMA.

I/O System Calls

OS-9's I/O calls are easier to use than many other systems' I/O calls. This is because the calling program does not have to allocate and set up *file control blocks*, *sector buffers*, and so on.

Instead, OS-9 returns a 1-byte path number whenever a process opens a path to a file or device. Until the path is closed, you can use this path number in later I/O requests to identify the file or device.

In addition, OS-9 allocates and maintains its own data structures; so, you need not deal with them.

System Call Descriptions

The rest of this chapter consists of the system call descriptions. At the top of each description is the system call name, followed by its mnemonic name, the SWI2 code and the request code. Next are the call's entry and exit conditions, followed by additional information about the code where appropriate.

In the system call descriptions, registers not specified as entry or exit conditions are not altered. Strings passed as parameters are normally terminated with a space character and end-of-line character, or with Bit 7 of the last character set.

If an error occurs on a system call, the C bit of Register CC is set, and Register B contains the *error code*. If no error occurs, the C bit is clear, and Register B contains a value of zero.

User Mode System Calls Quick Reference

Following is a summary of the User Mode System Calls referenced in this chapter:

F\$AllBit Sets bits in an allocation bit map

F\$Chain Chains a process to a new module

F\$CmpNam Compares two names

F\$CpyMem Copies external memory

F\$CRC Generates a cyclic redundancy check

F\$DelBit Deallocates bits in an allocation bit map

F\$Exit Terminates a process

F\$Fork Starts a new process

F\$GBlkMp Gets a copy of a system block map

F\$GModDr Gets a copy of a module directory

F\$GPrDsc Gets a copy of a process descriptor

F\$Icpt Sets a signal intercept trap

F\$ID Returns a process ID

F\$Link Links to a memory module

F\$Load Loads a module from mass storage

F\$Mem Changes a process's data area size

F\$NMLink Links to a module; does not map the mod-

ule into the user's address space

F\$NMLoad Loads a module but does not map it into the

user's address space

F\$Perr Prints an error message

F\$PrsNam Parses a pathlist name

F\$SchBit Searches a bit map

OS-9 Technical Reference

F\$Send Sends a signal to a process

F\$Sleep Suspends a process

F\$SPrior Sets a process's priority

F\$SSWI Sets a software interrupt vector

F\$STime Sets the system time

F\$SUser Sets the user ID number

F\$Time Returns the current time

F\$UnLink Unlinks a module

F\$UnLoad Unlinks a module by name

F\$Wait Waits for a signal

I\$Attach Attaches an I/O device

I\$Chgdir Changes a working directory

I\$Close Closes a path

I\$Create Creates a new file

I\$Delete Deletes a file

I\$DeletX Deletes a file from the execution directory

I\$Detach Detaches an I/O device

I\$Dup Duplicates a path

I\$GetStt Gets a device's status

I\$MakDir Creates a directory file

I\$Open Opens a path to an existing file

I\$Read Reads data from a device

I\$ReadLn Reads a line of data from a device

I\$Seek Positions a file pointer

I\$SetStt Sets a device's status

I\$Write Writes data to a device

I\$WritLn Writes a data line to a device

System Mode Calls Quick Reference

Following is a summary of the System Mode Calls referenced in this chapter:

F\$Alarm Sets up an alarm

F\$All64 Allocates a 64-byte memory block

F\$AllHRAM Allocates high RAM

F\$AllImg Allocates image RAM blocks

F\$AllPrc Allocates a process descriptor

F\$AllRAM Allocates RAM blocks

F\$AllTsk Allocates a process task number

F\$AProc Enters active process queue

F\$Boot Performs a system bootstrap

F\$BtMem Performs a memory request bootstrap

F\$ClrBlk Clears the specified block of memory

F\$DATLog Converts a DAT block offset to a logical

address

F\$DelImg Deallocates image RAM blocks

F\$DelPrc Deallocates a process descriptor

F\$DelRAM Deallocates RAM blocks

F\$DelTsk Deallocates a process task number

F\$ELink Links modules using a module directory

entry

F\$FModul Finds a module directory entry

F\$Find64 Finds a 64-byte memory block

F\$FreeHB Gets a free high block

F\$FreeLB Gets a free low block

F\$GCMDir Compacts module directory entries

F\$GProcP Gets a process's pointer

OS-9 Technical Reference

F\$IODel Deletes an I/O module

F\$IOQu Puts an entry into an I/O queue

F\$IRQ Makes an entry into IRQ polling table

F\$LDABX Loads Register A from 0,X in Task B

F\$LDAXY Loads A[X,[Y]]

F\$LDDDXY Loads D[D+X,[Y]]

F\$MapBlk Maps the specified block

F\$Move Moves data to a different address space

F\$NProc Starts the next process

F\$RelTsk Releases a task number

F\$ResTsk Reserves a task number

F\$Ret64 Returns a 64-byte memory block

F\$SetImg Sets a process DAT image

F\$SetTsk Sets a process's task DAT registers

F\$SLink Performs a system link

F\$SRqMem Performs a system memory request

F\$SRtMem Performs a system memory return

F\$SSvc Installs a function request

F\$STABX Stores Register A at 0,x in Task B

F\$VIRQ Makes an entry in a virtual IRQ polling

table

F\$VModul Validates a module

User System Calls

Allocate Bits

OS9 F\$AllBit 103F 13

Sets bits in an allocation bit map

Entry Conditions:

D = number of the first bit to set

X = starting address of the allocation bit map

Y = number of bits to set

Error Output:

CC = carry set on error B = error code (if any)

- Bit numbers range from 0 to n-1, where n is the number of bits in the allocation bit map.
- Warning: Do not issue the Allocate Bits call with Register Y set to 0 (a bit count of 0).

Chain

OS9 F\$Chain 103F 05

Loads and executes a new primary module without creating a new process

Entry Conditions:

A = language/type code

B = size of the data area (in pages); must be at least one page

X = address of the module name or filename

Y = parameter area size (in bytes); defaults to zero if not specified

U = starting address of the parameter area


Error Output:

CC = carry set on error B = error code (if any)

- Chain loads and executes a new primary module, but does not create a new process. A Chain system call is similar to a Fork followed by an Exit, but it has less processing overhead. Chain resets the calling process program and data memory areas and begins executing a new primary module. It does not affect open paths. This is a user mode system call.
- Warning: Make sure that the hardware stack pointer (Register SP) is located in the direct page before Chain executes. Otherwise the system might crash or return a suicide attempt error. This precaution also prevents a suicide in the event that the new module requires a smaller data area than that in use. Allow approximately 200 bytes of stack space for execution of the Chain system call.
- Chain performs the following steps:
 - 1. It causes OS-9 to unlink the process's old primary module.

- 2. OS-9 parses the name string of the new process's primary module (the program that is to be executed first). Then, it causes OS-9 to search the system module directory to see if a module with the same name, type, and language is already in memory.
- 3. If the module is in memory, it links to it. If the module is not in memory, it uses the name string as the pathlist of a file to load into memory. Then, it links to the first module in this file. (Several modules can be loaded from a single file.)
- 4. It reconfigures the data memory area to the size specified in the new primary module's header.
- 5. It intercepts and erases any pending signals.

The following diagram shows how Chain sets up the data memory area and registers for the new module.

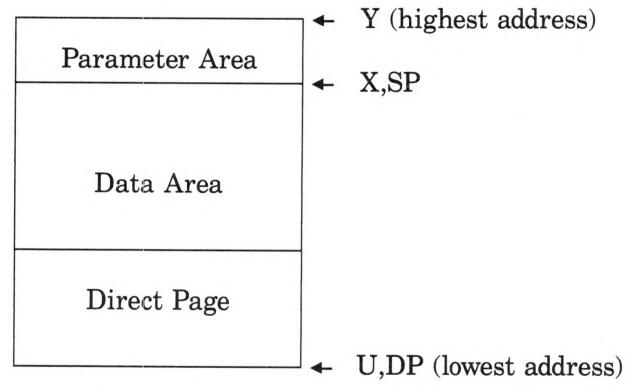

D = parameter area size

PC = module entry point absolute address

CC = F = 0, I = 0; others are undefined

Registers Y and U (the top-of-memory and bottom-of-memory pointers, respectively) always have values at page boundaries. If the parent process does not specify a size for the parameter area, the size (Register D) defaults to zero. The data area must be at least one page long.

(For more information, see the Fork system call.)

Compare Names OS9 F\$CmpNam 103F 11

Compares two strings for a match

Entry Conditions:

B = length of string1
 X = address of string1
 Y = address of string2

Exit Conditions:

CC = carry clear if the strings match

Additional Information:

• The Compare Names call compares two strings and indicates whether they match. Use this call with the Parse Name system call. The second string must have the most significant bit (Bit 7) of the last character set.

Copy External Memory

OS9 F\$CpyMem 103F 1B Reads external memory into the user's buffer for inspection

Entry Conditions:

D = DAT image pointer

X = offset in block to begin copy

Y = byte count

U = caller's destination buffer

Error Output:

CC = C bit set on error

B = appropriate error code

- You can view any system memory through the use of the Copy External Memory call. The call assumes X is the address of the 64K space described by the DAT image given.
- If you pass the entire DAT image of a process, place a value in the X Register that equals the address in the process space. If you pass a partial DAT image (the upper half), then place a value in Register X that equals the offset from the beginning of the DAT image (\$8000).
- The support module for this call is OS9p2.

CRC

Calculates the CRC of a module

OS9 F\$CRC 103F 17

Entry Conditions:

X = starting byte address

Y = number of bytes

U = address of the 3-byte CRC accumulator

Exit Conditions:

Updates the CRC accumulator.

- The CRC call calculates the CRC (cyclic redundancy count) for use by compilers, assemblers, or other module generators.
- The calculation begins at the *starting byte address* and continues over the specified *number of bytes*.
- You need not cover an entire module in one call, since the CRC can be accumulated over several calls. The CRC accumulator can be any 3-byte memory area. You must initialize it to \$FFFFFF before the first CRC call.
- When checking an existing module CRC, the calculation should be performed on the entire module (including the module CRC). The CRC accumulator will contain the CRC constant bytes if the module CRC is correct.
- If the CRC of a new module is to be generated, the CRC is accumulated over the module (excluding CRC). The accumulated CRC is complemented then stored in the correct position in the module.
- Be sure to initialize the CRC accumulator only once for each module checked by CRC.

Deallocate Bits

OS9 F\$DelBit 103F 14

Clears allocation map bits

Entry Conditions:

D = number of the first bit to set

X = starting address of the allocation bit map

Y = number of bits to set

Exit Conditions: None

- The Deallocate Bits call clears bits in the allocation bit map pointed to by Register X. Bit numbers are in the range 0 to n-1, where n is the number of bits in the allocation bit map.
- Warning: Do not call Deallocate Bits with Register Y set to 0 (a bit count of 0).

Exit

OS9 F\$Exit 103F 06

Terminates the calling process

Entry Conditions:

B = status code to return to the parent

Exit Conditions:

The process is terminated.

- The Exit system call is the only way a process can terminate itself. Exit deallocates the process's data memory area, and unlinks the process's primary module. It also closes all open paths automatically.
- The Wait system call always returns to the parent the status code passed by the child in its Exit call. Therefore, if the parent executes a Wait and receives the status code, it knows the child has died. This is a user mode system call.
- Exit unlinks only the primary module. Unlink any module that is loaded or linked to by the process before calling Exit.

Fork

Creates a child process

OS9 F\$Fork 103F 03

Entry Conditions:

= language/type code A

= size of the optional data area (in pages) В

X = address of the module name or filename (See the following example.)

Y = size of the parameter area (in pages); defaults to zero if not specified

= starting address of the parameter area; must be at U least one page

Exit Conditions:

X = address of the last byte of the name + 1 (See the following example.)

= new process IO number A


Error Output:

= error code (if any)

CC= carry set on error

Additional Information:

- Fork creates a new process, a child of the calling process. Fork also sets up the child process's memory and 6809 registers and standard I/O paths.
- Before the Fork call:






X

• After the Fork call:

D	\$0I	T	S	E	T
		♦ V			
		X			

- This is the sequence of Fork's operations:
 - 1. OS-9 parses the name string of the new process's primary module (the program that OS-9 executes first). Then, it searches the system module directory to see if the program already is in memory.
 - 2a. The next step depends on whether or not the program is already in memory. If the program is in memory, OS-9 links the module to the process and executes it.
 - b. If the program is not in memory, OS-9 uses the name as the pathlist of the file that is to be loaded into memory. Then, the first module in this file is linked to and executed. (Several modules can be loaded from one file.)
 - 3. OS-9 uses the primary module's header to determine the initial size of the process's data area. It then tries to allocate a contiguous RAM area of that size. (This area includes the parameter passing area, which is copied from the parent process's data area.)
 - 4. The new process's data memory area and registers are set up as shown in the following diagram. OS-9 uses the execution offset given in the module header to set the program counter to the module's entry point.

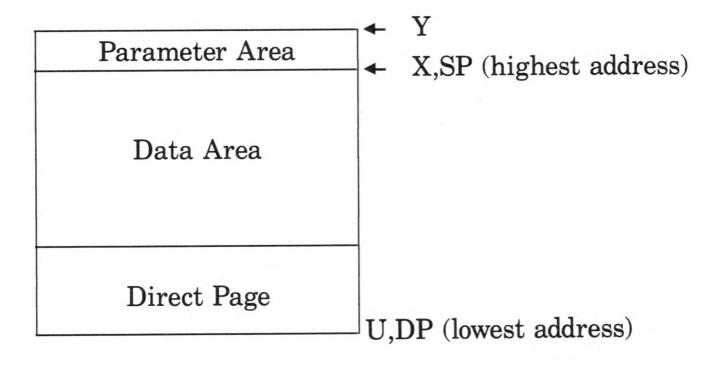

D = size of the parameter area

PC = module entry point absolute address

CC = F = 0, I = 0, other condition code flags are undefined

Registers Y and U (the top-of-memory pointer and bottom-of-memory pointer, respectively) always have values at page boundaries.

As stated earlier, if the parent does not specify the size of the parameter area, the size defaults to zero. The minimum overall data area size is one page.

When the shell processes a command line, it passes a string in the parameter area. This string is a copy of the parameter part of the command line. To simplify string-oriented processing, the shell also inserts an end-of-line character at the end of the parameter string.

Register X points to the start byte of the parameter string. If the command line includes the optional memory size specification (#n or #nK), the shell passes that size as the requested memory size when executing the Fork.

- If any of the preceding operations is unsuccessful, the Fork is terminated and OS-9 returns an error to the caller.
- The child and parent processes execute at the same time unless the parent executes a Wait system call immediately after the Fork. In this case, the parent waits until the child dies before it resumes execution.
- Be careful when recursively calling a program that uses the Fork system call. Another child can be created with each new execution. This continues until the process table becomes full.
- Do not fork a process with a memory size of 0.

Get System Block Map

Gets a copy of the system block map

OS9 F\$GBlkMp 103F 19

Entry Conditions:

X = pointer to the 1024-byte buffer

Exit Conditions:

D = number of bytes per block (\$2000) (MMU block size dependent)

Y = system memory block map size

Error Output:

CC = carry set on error B = error code (if any)

- The Get System Block Map call copies the system's memory block map into the user's buffer for inspection. The OS-9 MFREE command uses this call to find out how much free memory exists.
- The support module for this call is OS9p2.

Get Module Directory

F\$GModDr 103F 1A

Gets a copy of the system module directory

Entry Conditions:

X = pointer to the 2048-byte buffer Y = end of copied module directory

U = start address of system module directory

Error Output:

CC = carry set on error B = error code (if any)

- The Get Module Directory call copies the system's module directory into the user's buffer for inspection. The OS-9 MDIR command uses this call to read the module directory.
- The support module for this call is OS9p2.

Get Process Descriptor

F\$GPrDsc 103F 18

Gets a copy of the process's process descriptor

Entry Conditions:

A = requested process ID

X = pointer to a 512-byte buffer

Error Output:

CC = carry set on error

B = error code (if any)

- The Get Process Descriptor call copies a process descriptor into the calling process's buffer for inspection. The data in the process descriptor cannot be changed. The OS-9 PROCS command uses this call to get information about each existing process.
- The support module for this call is OS9p2.

Intercept

OS9 F\$Icpt 103F 09

Sets a signal intercept trap

Entry Conditions:

X = address of the intercept routine

U = starting address of the routine's memory area

Exit Conditions:

Signals sent to the process cause the intercept routine to be called instead of the process being killed.

Additional Information:

- Intercept tells OS-9 to set a signal intercept trap. Then, whenever the process receives a signal, OS-9 executes the process's intercept routine.
- Store the address of the signal handler routine in Register X and the base address of the routine's storage area in Register U.
- Once the signal trap is set, OS-9 can execute the intercept routine at any time because a signal can occur at any time.
- Terminate the intercept routine with an RTI instruction.
- If a process has not used the Intercept system call to set a signal trap, the process terminates if it receives a signal.
- This is the order in which F\$Icpt operates:
 - 1. When the process receives a signal, OS-9 sets Registers U and B as follows:

U = starting address of the intercept routine's memory area

 $B = signal \ code \ (process's \ termination \ status)$

Note: The value of Register DP cannot be the same as it was when the Intercept call was made.

2. After setting the registers, OS-9 transfers execution to the intercept routine.

Get ID OS9 F\$ID 103F 0C

Return's a caller's process ID and user ID

Entry Conditions:

None

Exit Conditions:

A = process IDY = user ID

- The *process ID* is a byte value in the range 1 to 255. OS-9 assigns each process a unique process ID.
- The *user ID* is an integer from 0 to 65535. It is defined in the system password file, and is used by the file security system and a few other functions. Several processes can have the same user ID.
- On a single user system (such as the Color Computer 3), the user ID is inherited from CC3go, which forks the initial shell.

Link

OS9 F\$Link 103F 00

Links to a memory module that has the specified name, language, and type

Entry Conditions:

A = type/language byte

X = address of the module name (See the following example.)

Exit Conditions:

A = type/language code

B = attributes / revision level (if no error)

X = address of the last byte of the module name + 1 (See the following example.)

Y = module entry point absolute address

U = module header absolute address

Error Output:


CC = C bit set if error encountered

Additional Information:

- The module's link count increases by one whenever Link references its name. Incrementing in this manner keeps track of how many processes are using the module.
- If the module requested is not shareable (not re-entrant), only one process can link to it at a time.
- Before the Link call:

T E S T \$0D • X

• After the Link call:





- This is the order in which the Link call operates:
 - 1. OS-9 searches the module directory for a module that has the specified name, language, and type.
 - 2. If OS-9 finds the module, the address of the module's header is returned in Register U, and the absolute address of the module's execution entry point is returned in Register Y. (This, and other information is contained in the module header.)
- If OS-9 doesn't find the module—or if the type/language codes in the entry and exit conditions don't match—OS-9 returns one of the following errors:
 - · Module not found
 - Module busy (not shareable and in use)
 - Incorrect or defective module header

Load

OS9 F\$Load 103F 01

Loads a module or modules from a file

Entry Conditions:

A = $language/type \ code$; 0 = any language/type

X = address of the pathlist (filename) (See the following example.)

Exit Conditions:

A = language/type code

B = attributes / revision level (if no error)

X = address of the last byte of the pathlist (filename) + 1 (See the following example.)

Y = primary module entry point address

U = address of the module header

Error Output:


CC = carry set if error encountered

- The Load call loads one or more modules from the file specified by a complete pathlist or from the working execution directory (if an incomplete pathlist is given).
- The file must have the execute access mode bit set. It also must contain one or more with proper module headers.
- OS-9 adds all modules loaded to the system module directory. It links the first module read. The exit conditions apply only to the first module loaded.
- Before the Load call:

/	D	0	/	A	C	C	T	S	R	C	V	\$0D
---	---	---	---	---	---	---	---	---	---	---	---	------



After the Load call:



• Possible errors:

- Module directory full
- Memory full
- Errors that occur on the Open, Read, Close, and Link system calls

Memory

OS9 F\$Mem 103F 07

Changes process's data area size

Entry Conditions:

D = size of the new memory area (in bytes); 0 = return current size and upper bound

Exit Conditions:

Y = address of the new memory area upper bound D = actual size of the new memory (in bytes)

Error Output:

CC = carry set on error B = error code (if any)

- The memory call expands or contracts the process's data memory area to the specified size. Or, if you specify zero as the new size, the call returns the current size and upper boundaries of data memory.
- OS-9 rounds off the size to the next page boundary. In allocating additional memory, OS-9 continues upward from the previous highest address. In deallocating unneeded memory, it continues downward from that address.

Link to a module Links to a module;

OS9 F\$NMLink 103F 21

Links to a module; does not map the module into the user's address space

Entry Conditions:

A = type/language byte

X = address of the module name

Exit Conditions:

A = type/language code

 $B = module \ revision$

X = address of the last byte of the module name + 1; any

trailing blanks are skipped

Y = storage requirement for the module

Error Output:

CC = carry set on error

B = error code if any

Additional Information:

• Although this call is similar to F\$Link, it does not map the specified module into the user's address space but does return the memory requirement for the module. A calling process can use this memory requirement information to fork a program with a maximum amount of space. F\$NMLink can therefore fork larger programs than can be forked by F\$Link.

Load a module

OS9 F\$NMLoad 103F 22 Loads one or more modules from a file but does not map the module into the user's address space

Entry Conditions:

A = type/language byte X = address of the pathlist

Exit Conditions:

A = type/language code B = module revision

X = address of the last byte of the pathlist + 1

Y = storage requirement for the module

Error Output:

CC = carry set on error B = error code if any

- If you do not provide a full pathlist for this call, it attempts to load from a file in the current execution directory.
- Although this call is similar to F\$Load, it does not map the specified module into the user's address space but does return the memory requirement for the module. A calling process can use this memory requirement information to fork a program with a maximum amount of space. F\$NMLoad can therefore fork larger programs than can be forked by F\$Load.

Print Error

OS9 F\$Perr 103F 0F

Writes an error message to a specified path

Entry Conditions:

B = error code

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• Print Error writes an error message to the standard error path for the specified process. By default, OS-9 shows:

ERROR #decimal number

• The error reporting routine is vectored. Using the Set SVC system call, you can replace it with a more elaborate reporting module.

Parse Name

OS9 F\$PrsNam 103F 10

Scans an input string for a valid OS-9 name

Entry Conditions:

X = address of the pathlist (See the following example.)

Exit Conditions:

X = address of the optional slash + 1

Y = address of the last character of the name + 1

A = trailing byte (delimiter character)

B = length of the name

Error Output:


CC = carry set

B = error code

Y = address of the first non-delimiter character in the string

- Parses, or scans, the input text string for a legal OS-9 name. It terminates the name with any character that is not a legal name character.
- Parse Name is useful for processing pathlist arguments passed to new processes.
- Because Parse Name processes only one name, you might need several calls to process a pathlist that has more than one name. As you can see from the following example, Parse Name finishes with Register Y in position for the next parse.
- If Register Y was at the end of a pathlist, Parse Name returns a bad name error. It then moves the pointer in Register Y past any space characters so that it can parse the next pathlist in a command line.

• Before the Parse Name call:



After the Parse Name call:

/	D	0	/	P	A	Y	R	О	L	L	В	16	р
A A			B = 2										
	X		Y										

Search Bits OS9 F\$SchBit 103F 12

Searches a specified memory allocation bit map for a free memory block of a specified size

Entry Conditions:

 $D = starting \ bit \ number$

X = starting address of the map Y = bit count (free bit block size)

U = ending address of the map

Error Output:

CC = C bit set

Exit Conditions:

D = starting bit number

Y = bit count

Additional Information:

• The Search Bit call searches the specified allocation bit map for a free block (cleared bits) of the required length. The search starts at the *starting bit number*. If no block of the specified size exists, the call returns with the carry set, starting bit number, and size of the largest block.

Send

OS9 F\$Send 103F 08

Sends a signal to a specified process

Entry Conditions:

A = destination's process ID

 $B = signal \ code$

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

- The *signal code* is a single byte value in the range 0 through 255.
- If the destination process is sleeping or waiting, OS-9 activates the process so that the process can process the signal.
- If a signal trap is set up, F\$Send executes the signal processing routine (Intercept). If none was set up, the signal terminates the destination process, and the signal code becomes the exit status. (See the Wait system call.) An exception is the wakeup signal; that signal does not cause the signal intercept routine to be executed.
- Signal codes are defined as follows:

0 = System terminate

(cannot be intercepted)

1 = Wake up the process

2 = Keyboard terminate

3 = Keyboard interrupt

128-255 = User defined

- If you try to send a signal to a process that has a signal pending, OS-9 cancels the current Send call, and returns an error. Issue a Sleep call for a few ticks; then, try again.
- The Sleep call saves CPU time. See the Intercept, Wait, and Sleep system calls for more information.

Sleep OS9 F\$Sleep 103F 0A

Temporarily turns off the calling process

Entry Conditions:

X = One of the following:

sleep time (in ticks)

0 (sleep indefinitely)

1 (sleep for the remainder of the current time slice)

Exit Conditions:

X = sleep time minus the number of ticks that the process was asleep

Error Output:

CC = carry set on error B = error code (if any)

- If Register X contains 0, OS-9 turns the process off until it receives a signal. Putting a process to sleep is a good way to wait for a signal or interrupt without wasting CPU time.
- If Register X contains 1, OS-9 turns the process off for the remainder of the process's current time slice. It inserts the process into the active process queue immediately. The process resumes execution when it reaches the front of the queue.
- If Register X contains an integer in the range 2-255, OS-9 turns off the process for the specified number of ticks, n. It inserts the process into the active process queue after n-1 ticks. The process resumes execution when it reaches the front of the queue. If the process receives a signal, it awakens before the time has elapsed.
- When you select processes among multiple windows, you might need to set sleep for two ticks.

Set Priority

OS9 F\$SPrior 103F 0D

Changes the priority of a process

Entry Conditions:

$$A = process ID$$

$$B = priority$$

$$0 = lowest$$

$$255 = highest$$

Error Output:

```
CC = carry set on error
B = error code (if any)
```

Additional Information:

• Set Priority changes the process's priority to the priority specified. A process can change another process's priority only if it has the same user ID.

Set SWI

OS9 F\$SSWI 103F 0E

Sets the SWI2 and SWI3 vectors

Entry Conditions:

A = SWI type code

X = address of the user software interrupt routine

Exit Conditions:

CC = carry set on error

B = error code (if any)

Additional Information:

- Sets the interrupt vectors for SWI, SWI2 and SWI3 instructions.
- Each process has its own local vectors. Each Set SWI call sets one type of vector according to the code number passed in Register A:

1 = SWI

2 = SWI2

3 = SWI3

- When OS-9 creates a process, it initializes all three vectors with the address of the OS-9 service call processor.
- Warning: Microware-supplied software uses SWI2 to call OS-9. If you reset this vector, these programs cannot work. If you change all three vectors, you cannot call OS-9 at all.

Set Time

OS9 F\$STime 103F 16

Sets the system time and date

Entry Conditions:

X = relative address of the time packet

Error Output:

CC = C bit set B = error code

Additional Information:

• Set Time sets the current system date and time and starts the system real-time clock. The date and time are passed in a time packet as follows.

Relative Address	Value
0	year
1	month
2	day
3	hours
4	minutes
5	seconds

Then, the call makes a link system call to find the clock. If the link is successful, OS-9 calls the clock initialization. The clock initialization:

- 1. Sets up hardware dependent functions
- 2. Sets up the F\$Time system call via F\$SSvc

Set User ID Number

F\$SUser 103F 1C

Changes the current user ID without checking for errors or checking the ID number of the caller

Entry Conditions:

Y = desired user ID number

Error Output:

CC = carry set on errorB = error code (if any)

Additional Information:

• The support module for this call is OS9p1.

Time

OS9 F\$Time 103F 15

Gets the system date and time

Entry Conditions:

X = address of the area in which to store the date and time packet

Exit Conditions:

 $X = date \ and \ time$

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

- The Time call returns the current system date and time in the form of a 6-byte packet (in binary). OS-9 copies the packet to the address passed in Register X.
- The packet looks like this:

Relative Address	Value
0	year
1	month
2	day
3	hours
4	minutes
5	seconds

• Time is a part of the clock module and it does not exist if no previous call to F\$Time has been made.

Unlink

OS9 F\$UnLink 103F 02

Unlinks (removes from memory) a module that is not in use and that has a link count of 0

Entry Conditions:

U = address of the module header

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

- Unlink unlinks a module from the current process's address space, decreases its link count by one and, if the link count becomes zero, returns the memory where the module was located to the system for use by other processes.
- You cannot unlink system modules or device drivers that are in use.
- Unlink operates in the following order:
 - 1. Unlink tells OS-9 that the calling process no longer needs the module.
 - 2. OS-9 decreases the module's link count by one.
 - 3. When the resulting link count is zero, OS-9 destroys the module.

If any other process is using the module, the module's link count cannot fall to zero. Therefore, OS-9 does not destroy the module.

• If you pass a bad address, Unlink cannot find a module in the module directory and does not return an error.

Unlink A Module By Name

F\$UnLoad 103F 1D

Decrements a specified module's link count, and removes the module from memory if the resulting link count is zero

Entry Conditions:

A = module type

X = pointer to module name

Error Output:

CC = carry set on error B = error code (if any)

- This system call differs from Unlink in that it uses a pointer to the module name, instead of the address of the module header.
- The support module for this call is OS9p2.

Wait

Temporarily turns off a calling process

OS9 F\$Wait 103F 04

Entry Conditions: None

Exit Conditions:

A = deceased child process's ID

B = deceased child process's exit status code (if no error)

Error Output:

CC = carry set on error

 $B = error \ code \ if \ any$

- The Wait call turns off the calling process until a child process *dies*, either by executing an Exit system call, or by receiving a signal. The Wait call helps you save system time.
- OS-9 returns the child's process's ID and exit status to the parent. If the child died because of a signal, the exit status byte (Register B) contains the signal code.
- If the caller has several children, OS-9 activates the caller when the first one dies. Therefore, you need to use one Wait system call to detect the termination of each child.
- OS-9 immediately reactivates the caller if a child dies before the Wait call. If the caller has no children, Wait returns an error. (See the Exit system call for more information.)
- If the Wait call returns with the carry bit set, the Wait function was not successful. If the carry bit is cleared, Wait functioned normally and any error that occurred in the child process is returned in Register B.

I/O User System Calls

Attach

OS9 I\$Attach 103F 80

Attaches a device to the system or verifies device attachment

Entry Conditions:

A = access mode

X = address of the device name string

Exit Conditions:

X = updated past device name

U = address of the device table entry

Error Output:

B = error code (if any)

CC = carry set on error

Additional Information:

- Attach does not reserve the device. It only prepares the device for later use by any process.
- OS-9 installs most devices automatically on startup. Therefore, you need to use Attach only when installing a device dynamically or when verifying the existence of a device. You need not use the Attach system call to perform routine I/O.
- The access mode parameter specifies the read and/or write operations to be allowed. These are:

0 = Use any special device capabilities

1 = Read only

2 = Write only

3 = Update (read and write)

- Attach operates in this sequence:
 - 1. OS-9 searches the system module to see if memory contains a device descriptor that has the same name as the device.
 - 2a. OS-9's next operation depends on whether or not the device is already attached. If OS-9 finds the descriptor and if the device is not already attached, OS-9 links the device's file manager and device driver. It then places the address of the manager and the driver in a new device table entry. OS-9 then allocates any memory needed by the device driver, and calls the driver's initialization routine which initializes the hardware.
 - b. If OS-9 finds the descriptor, and if the device is already attached, OS-9 verifies the attachment.

Change Directory Changes the working directory of a process

OS9 I\$Chgdir 103F 86

Changes the working directory of a process to a directory specified by a pathlist

Entry Conditions:

A = access mode

X = address of the pathlist

Exit Conditions:

X = updated past pathlist

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

- If the access mode is read, write, or update, OS-9 changes the current data directory. If the access mode is execute, OS-9 changes the current execution directory.
- The calling process must have read access to the directory specified (public read if the directory is not owned by the calling process).
- The access modes are:

1 = Read

2 = Write

3 = Update (read and write)

4 = Execute

Close Path

Terminates an I/O path

OS9 I\$Close 103F 8F

Entry Conditions:

A = path number

Error Output:

CC = carry set on errorB = error code (if any)

- Close Path terminates the I/O path to the file or device specified by *path number*. Until you use another Open, Dup, or Create system call for that path, you can no longer perform I/O to the file or device.
- If you close a path to a single-user device, the device becomes available to other requesting processes. OS-9 deallocates internally managed buffers and descriptors.
- The Exit system call automatically closes all open paths. Therefore, you might not need to use the Close Path system call to close some paths.
- Do not close a standard I/O path unless you want to change the file or device to which it corresponds.
- Close Path performs an implied I\$Detach call. If it causes the device link count to become 0, the device termination routine is executed. See I\$Detach for additional information.

Create File

Creates and opens a disk file

OS9 I\$Create 103F 83

Entry Conditions:

A = access mode (write or update)

 $B = file \ attributes$

X = address of the pathlist; (See the following example.)

Exit Conditions:

A = path number

X = address of the last byte of the pathlist + 1; skips any trailing blanks (See the following example.)

Error Output:

CC = carry set on error B = error code (if any)


Additional Information:

- OS-9 parses the pathlist and enters the new filename in the specified directory. If you do not specify a directory, OS-9 enters the new filename in the the working directory.
- OS-9 gives the file the attributes passed in Register B, which has bits defined as follows:


Bit	Definition	
0	Read	
1	Write	
2	Execute	
3	Public read	
4	Public write	
5	Public execute	
6	Shareable file	

• The access mode parameter passed in Register A must have the write bit set if any data is to be written. These access codes are defined as follows: 2 = write; 3 = update. The mode affects the file only until the file is closed.

- You can reopen the file in any access mode allowed by the file attributes. (See the Open system call.)
- Files opened for write can allow faster data transfer than those opened for update because update sometimes needs to pre-read sectors.
- If the execute bit (Bit 2) is set, the file is created in the working execution directory instead of the working data directory.
- Create File causes an implicit I\$Attach call. If the device has not previously been attached, the device's initialization routine is called.
- Later I/O calls use the path number to identify the file, until the file is closed.
- OS-9 does not allocate data storage for a file at creation. Instead, it allocates the storage either automatically when you first issue a write or explicitly by the Setstat subroutine.
- If the filename already exists in the directory, an error occurs. If the call specifies a non-multiple file device (such as a printer or terminal), Create behaves the same as Open.
- You cannot use Create to make directories. (See the Make Directory system call for instructions on how to do make directories.)
- Before the Create File call:



After the Create File call:



Delete File

Deletes a specified disk file

OS9 I\$Delete 103F 87

Entry Conditions:

X = address of the pathlist (See the following example.)

Exit Conditions:

X = address of the last byte of the pathlist + 1; any trailing blanks are skipped (See the following example.)

Error Output:


B = error code (if any) CC = carry set on error

Additional Information:

• The Delete File call deletes the disk file specified by the pathlist. The file must have write permission attributes (public write, if the calling process is not the owner). An attempt to delete a device results in an error. The caller must have non-shareable write access to the file or an error results.

Example:

Before the Delete File call:



After the Delete File call:

/	D	0	/	W	0	R	K	В	P	P	M	E	M	0	\$0D	
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	------	--

Delete A File OS9 I\$DeletX 103F 90

Deletes a file from the current data or current execution directory

Entry Conditions:

= access mode

X = address of the pathlist

Exit Conditions:

X = address of the last byte of the pathlist+1; any trailing blanks are skipped

Error Output:

CC= carry set on error = *error code* (if any)

- The Delete A File call removes the disk file specified by the selected pathlist. This function is similar to I\$Delete except that it accepts an access mode byte. If the access mode is execute, the call selects the current execution directory. Otherwise, it selects the current data directory.
- If a complete pathlist is provided (the pathlist begins with a slash (/), the access mode the call ignores the access mode.
- Only use this call to delete a file. If you attempt to use I\$DeletX to delete a device, the system returns an error.

Detach Device

OS9 I\$Detach 103F 81

Removes a device from the system device table

Entry Conditions:

U = address of the device table entry

Exit Conditions:

CC = carry set on error B = error code (if any)

- The Detach Device call removes a device from both the system and the system device table, assuming the device is not being used by another process. You must use this call to detach devices attached using the Attach system call. Attach and Detach are both used mainly by the IO manager. SCF also uses Attach and Detach to set up its second device (echo device).
- This is the sequence of the operation of Detach Device:
 - 1. Detach Device calls the device driver's termination routine. Then, OS-9 deallocates any memory assigned to the driver.
 - 2. OS-9 unlinks the associated device driver and file manager modules.
 - 3. OS-9 then removes the driver, as long as no other module is using that driver.

Duplicate Path OS9 I\$Dup 103F 82

Returns a synonymous path number

Entry Conditions:

A = old path number (number of path to duplicate)

Exit Conditions:

 $A = new \ path \ number \ (if no error)$

Error Output:

B = error code (if error encountered)

CC = carry set on error

- The Duplicate Path returns another, synonymous path number for the file or device specified by the *old path* number.
- The shell uses the Duplicate Path call when it redirects I/O.
- System calls can use either path number (old or new) to operate on the same file or device.
- Make sure that no more than one process is performing I/O on any one path at the same time. Concurrent I/O on the same path can cause unpredictable results with RBF files.
- The I\$Dup call always uses the lowest available path number. This lets you manipulate standard I/O paths to contain any desired paths.

Get Status OS9 I\$GetStt 103F 8D

Returns the status of a file or device

Entry Conditions:

A = path numberB = function code

Error Output:

CC = carry set on error B = error code (if any)

- The Status is a *wildcard* call. Use it to handle device parameters that:
 - · Are not the same for all devices
 - · Are highly hardware-dependent
 - Must be user-changeable
- The exact operation of the Get Status system call depends on the device driver and file manager associated with the path. A typical use is to determine a terminal's parameters for such functions as backspace character and echo on/off. The Get Status call is commonly used with the Set Status call.
- The Get Status function codes that are currently defined are listed in the "Get Status System Calls" section.

Make Directory

OS9 I\$MakDir 103F 85

Creates and initializes a directory

Entry Conditions:

= directory attributesX = address of the pathlist

Exit Conditions:

X = address of the last byte of the pathlist +1; Make Directory skips trailing blanks.

Error Output:

 $= error \ code \ (if \ any)$ CC = carry set on error

- The Make Directory call creates and initializes a directory as specified by the pathlist. The directory contains only two entries, one for itself (.) and one for its parent directory (..)
- OS-9 makes the calling process the owner of the directory.
- Because the Make Directory call does not open the directory, it does not return a path number.
- The new directory automatically has its directory bit set in the access permission attributes. The remaining attributes are specified by the byte passed in Register B. The bits are defined as follows:

Bit	Definition	
0	Read	
1	Write	
2	Execute	
3	Public read	
4	Public write	
5	Public execute	
6	Single-user	
7	Don't care	

• Before the Make Directory call:

/	D	0	/	N	E	W	D	I	R	\$0D
∳ Y										

After the Make Directory call:

/	D	0	/	N	E	W	D	I	R	\$0D
/	D	0		1						

X

Open Path OS9 I\$Open 103F 84

Opens a path to an existing file or device as specified by the pathlist

Entry Conditions:

A = access mode (D S PE PW PR E W R)

X = address of the pathlist (See the following example.)

Exit Conditions:

A = path number


X = address of the last byte of the pathlist + 1

Error Output:


B = error code (if any) CC = carry set on error

- OS-9 searches for the file in one of the following:
 - The directory specified by the pathlist if the pathlist begins with a slash.
 - The working data directory, if the pathlist does not begin with a slash.
 - The working execution directory, if the pathlist does not begin with a slash and if the execution bit is set in the access mode.
- OS-9 returns a path number for later system calls to use to identify the file.
- The access mode parameter lets you specify which read and/or write operations are to be permitted. When set, each access mode bit enables one of the following: Write, Read, Read and Write, Update, Directory I/O.
- The access mode must conform to the access permission attributes associated with the file or device. (See the Create system call.) Only the owner can access a file unless the appropriate public permission bits are set.

- The update mode might be slightly slower than the others because it might require pre-reading of sectors for random access of bytes within sectors.
- Several processes (users) can open files at the same time. Each device has an attribute that specifies whether or not it is shareable.
- Before the Open Path call:



After the Open Path call:



- If the single-user bit is set, the file is opened for single-user access regardless of the settings of the file's permission bits.
- You must open directory files for read or write if the directory bit (Bit 7) is set in the access mode.
- Open Path always uses the lowest path number available for the process.

Read

OS9 I\$Read 103F 89

Reads *n* bytes from a specified path

Entry Conditions:

A = path number

Y = number of bytes to read

X = address in which to store the data

Exit Conditions:

Y = number of bytes read

Error Output:

 $B = error \ code \ (if \ any)$ $CC = carry \ set \ on \ error$

- The Read call reads the specified number of bytes from the specified path. It returns the data exactly as read from the file/device, without additional processing or editing. The path must be opened in the read or update mode.
- If there is not enough data in the specified file to satisfy the read request, the call reads fewer bytes than requested but an end-of-file error is **not** returned. After all data in a file is read, the next I\$Read call returns an end-of-file error.
- If the specified file is open for update, the record read is locked out on RBF-type devices.
- The keyboard terminate, keyboard interrupt, and end-of-file characters are filtered out of the Entry Conditions data on SCF-type devices unless the corresponding entries in the path descriptor have been set to zero. You might want to modify the device descriptor so that these values are initialized to zero when the path is opened.

- The call reads the number of bytes requested unless Read encounters any of the following:
 - An end-of-file character
 - An end-of-record character (SCF only)
 - An error

Read Line With Editing

Reads a text line with editing

OS9 I\$ReadLn 103F 8B

Entry Conditions:

A = path number

X = address at which to store data

Y = maximum number of bytes to read

Exit Conditions:

Y = number of bytes read

Error Output:

B = error code (if any) CC = carry set on error

- Read Line is similar to Read. The difference is that Read Line reads the input file or device until it encounters a carriage return character or until it reaches the maximum byte count specified, whichever comes first. The Read Line also automatically activates line editing on character oriented devices, such as terminals and printers. The line editing refers to auto line feed, null padding at the end of the line, backspacing, line deleting, and so on.
- SCF requires that the last byte entered be an end-of-record character (usually a carriage return). If more data is entered than the maximum specified, Read Line does not accept it and a PD.OVF character (usually a bell) is echoed.
- After one Read Line call reads all data in a file, the next Read Line call generates an end-of-file error.
- (For more information about line editing, see "SCF Line Editing Functions" in Chapter 6.)

Seek

OS9 I\$Seek 103F 88

Repositions a file pointer

Entry Conditions:

A = path number

X = MS 16 bits of the desired file position

U = LS 16 bits of the desired file position

Error Output:

CC = carry set on error

B = error code (if any)

- The Seek Call repositions the path's logical file pointer, the 32-bit address of the next byte in the file to be read from or written to.
- You can perform a seek to any value, regardless of the file's size. Later writes automatically expand the file to the required size (if possible). Later reads, however, return an end-of-file condition. Note that a seek to Address 0 is the same as a rewind operation.
- OS-9 usually ignores seeks to non-random access devices, and returns without error.
- On RBF devices, seeking to a new disk sector causes the internal disk buffer to be rewritten to disk if it has been modified. Seek does not change the state of record locking.

Set Status

OS9 I\$SetStt 103F 8E

Sets the status of a file or device

Entry Conditions:

 $A = path \ number$

 $B = function \ code$

Other registers depend on the function code.

Error Output:

B = error code (if any)

CC = carry set on error

Other registers depend on the function code.

- Set Status is a wildcard call. Use it to handle device parameters that:
 - Are not the same for all devices
 - · Are highly hardware-dependent
 - Must be user-changeable
- The exact operation of the Set Status system call depends on the device driver and file manager associated with the path. A typical use is to set a terminal's parameters for such functions as backspace character and echo on/off. The Set Status call is commonly used with the Get Status call.
- The Set Status function codes that are currently defined are listed in the "Set Status System Calls" section.

Write

Writes to a file or device

OS9 I\$Write 103F 8A

Entry Conditions:

A = path number

X = starting address of data to write

Y = number of bytes to write

Exit Conditions:

Y = number of bytes written

Error Output:

B = error code (if any) CC = carry set on error

- The Write system call writes to the file or device associated with the path number specified.
- Before using Write, be sure the path is opened or created in the Write or Update access mode. OS-9 writes data to the file or device without processing or editing the data. OS-9 automatically expands the file if you write data past the present end-of-file.

Write Line

OS9 I\$WritLn 103F 8C

Writes to a file or device until it encounters a carriage return

Entry Conditions:

A = path number

X = address of the data to write

Y = maximum number of bytes to write

Exit Conditions:

Y = number of bytes written

Error Output:

 $B = error \ code \ (if \ any)$ $CC = carry \ set \ on \ error$

- Writes to the file or device that is associated with the path number specified.
- Write Line is similar to Write. The difference is that Write Line writes data until it encounters a carriage return character. It also activates line editing for character-oriented devices, such as terminals and printers. The line editing refers to auto line feed, null padding at the end of the line, backspacing, line deleting, and so on.
- Before using Write Line, be sure the path is opened or created in the write or update access mode.
- (For more information about line editing, see "SCF Line Editing Functions" in Chapter 6.)

Privileged System Mode Calls

Set an alarm OS9 F\$Alarm 103F 1E

Sets an alarm to ring the bell at a specified time

Entry Conditions:

X = relative address of time packet

Error Output:

CC = carry set on error

 $B = appropriate\ error\ code$

- When the system reaches the specified alarm time, it rings the bell for 15 seconds.
- The time packet is identical to the packet used in the F\$STime call. See F\$STime for additional information on the format of the packet.
- All alarms begin at the start of a minute and any seconds in the packet are ignored.
- The system is limited to one alarm at a time.

Allocate 64 OS9 F\$All64 103F 30

Dynamically allocates 64-byte blocks of memory

Entry Conditions:

X = base address of the page table; 0 = the page table has not been allocated

Exit Conditions:

A = block number

X = base address of the page table

Y = address of the block

Error Output:

CC = carry set on errorB = error code (if any)

- The Allocate 64 system call allocates the 64-byte blocks of memory by splitting pages (256-byte sections) into four sections.
- OS-9 uses the first 64 bytes of the base page as a page table. This table contains the page number (most significant byte of the address) of all pages in the memory structure. If Register X passes a value of zero, the call allocates a new base page and the first 64-byte memory block.
- Whenever a new page is needed, a Request System Memory system call (F\$SRqMem) executes automatically.
- The first byte of each block contains the block number. Routines that use the Allocate 64 call should not alter this byte.

• The following diagram shows how seven blocks might be allocated:

Base Page →

Any Memory Page

Page Table

(64 bytes)

X Block 1 (64 bytes)

X Block 2 (64 bytes)

X Block 3 (64 bytes) **Any Memory Page**

X
Block 4
(64 bytes)

X Block 5 (64 bytes)

X Block 6 (64 bytes)

X Block 7 (64 bytes)

Allocate High RAM

OS9 F\$AlHRam 103F 53

Allocate system memory from high physical memory

Entry Conditions:

B = number of blocks

Error Output:

CC = carry set on error

 $B = appropriate\ error\ code$

- This call searches for the desired number of contiguous free RAM blocks, starting its search at the top of memory. F\$AllHRam is similar to F\$AllRAM except F\$AllRAM begins its search at the bottom of memory.
- Screen allocation routines use this call to provide a better chance of finding the necessary memory for a screen.

Allocate Image OS9 F\$AllImg 103F 3A

Allocates RAM blocks for process DAT image

Entry Conditions:

 $A = starting \ block \ number$

B = number of blocks

X = process descriptor pointer

Exit Conditions:

CC = carry set on error B = error code (if any)

- Use the Allocate Image system call to allocate a data area for a process. The blocks that Allocate Image defines might not be contiguous.
- The support module for this system call is OS9p1.

Allocate Process Descriptor

Allocates and initializes a 512-byte process descriptor

OS9 F\$AllPrc 103F 4B

Entry Conditions: None

Exit Conditions:

U = process descriptor pointer

Error Output:

CC = C bit set on error

B = appropriate error code

- The process descriptor table houses the address of the descriptor. Initialization of the process descriptor consists of clearing the first 256 bytes of the descriptor, setting up the state as a system state, and marking as unallocated as much of the DAT image as the system allows—typically, 60-64 kilobytes.
- The support module for this system call is OS9p2. The call also branches to the F\$SRqMem call.

Allocate RAM OS9 F\$AllRAM 103F 39

Searches the memory block map for the desired number of contiguous free RAM blocks

Entry Conditions:

B = number of blocks

Exit Conditions:

CC = C bit set on error

 $B = appropriate\ error\ code$

Additional Information:

• The support module for this system call is OS9p1.

Allocate Process Task Number

OS9 F\$AllTsk 103F 3F

Determines whether OS-9 has assigned a task number to the specified process

Entry Conditions:

X = process descriptor pointer

Error Output:

CC = C bit set

 $B = appropriate\ error\ code$

- If the process does not have a task number, OS-9 allocates a task number and copies the DAT image into the DAT hardware.
- The support module for this call is OS9p1. Allocate Process Task number also branches to F\$ResTsk and F\$SetTsk.

Insert Process

OS9 F\$AProc 103F 2C

Inserts a process into the queue for execution

Entry Conditions:

X = address of the process descriptor

Error Output:

CC = carry set on errorB = error code (if any)

Additional Information:

- The Insert Process system call inserts a process into the active process queue so that OS-9 can schedule the process for execution.
- OS-9 sorts all processes in the queue by process age (the count of how many process switches have occurred since the process's last time slice). When a process is moved to the active process queue, OS-9 sets its age according to its priority—the higher the priority, the higher the age.

An exception is a newly active process that was deactivated while in the system state. OS-9 gives such a process higher priority because the process usually is executing critical routines that affect shared system resources.

Bootstrap System

OS9 F\$Boot 103F 35

Links either the module named Boot or the module specified in the INIT module

Entry Conditions: None

Error Output:

 $CC = C \ bit \ set \ on \ error$

 $B = appropriate\ error\ code$

- When it calls the linked module, Boot expects to receive a pointer giving it the location and size of an area in which to search for the new module.
- The support module for this call is OS9p1. Bootstrap System also branches to the F\$Link and F\$VModul system calls.

Bootstrap Memory Request

OS9 F\$BtMem 103F 36

Allocates the requested memory (rounded to the nearest block) as contiguous memory in the system's address space

Entry Conditions:

D = byte count requested

Exit Conditions:

D = byte count granted

U = pointer to memory allocated

Error Output:

CC = C bit set on error

 $B = appropriate\ error\ code$

- This call is identical to F\$SRqMem.
- The Bootstrap Memory Request support module is OS9p1.

Clear Specified Block

Marks blocks in the process DAT image as unallocated

OS9 F\$ClrBlk 103F 50

Entry Conditions:

B = number of blocks U = address of first block

Exit Conditions: None

- After Clear Specified Block deallocates blocks, the blocks are free for the process to use for other data or program areas. If the block address passed to Clear Specified Block is invalid or if the call attempts to clear the stack area, it returns E\$IBA.
- The support module for the call is OS9p2.

DAT to Logical Address

OS9 F\$DATLog 103F 44

Converts a DAT image clock number and block offset to its equivalent logical address

Entry Conditions:

B = DAT image offset

X = block offset

Exit Conditions:

 $X = logical \ address$

Error Output:

CC = C bit set on error

 $B = appropriate\ error\ code$

Additional Information:

• Following is a sample conversion:

	Input
2000 - 2FFF	
1000 - 1FFF	Outp
0 - FFF	

Input: B = 2X = \$0329

Output: X = \$2329

• The support module for this call is OS9p1.

Deallocate Image Deallocates image RAM Blocks

RAM blocks

OS9 F\$DelImg 103F 3B

Entry Conditions:

= number of starting block

В = block count

X = process descriptor pointer

Error Output:

CC = C bit set on error

= appropriate error code

- This system call deallocates memory from a process's address space. It frees the RAM for system use and frees the DAT image for the process. Its main use is to let the system clean up after a process death.
- The support module for this call is OS9p2.

Deallocate Process Descriptor

Returns a process descriptor's memory to a free memory pool

OS9 F\$DelPrc 103F 4C

Entry Conditions:

A = process ID

Error Output:

CC = C bit set on error

B = appropriate error code

- Use this call to clear the system scratch memory and stack area associated with the process.
- The support module for this call is OS9p2.

Deallocate RAM blocks

OS9 F\$DelRAM 103F 51

Clears a block's RAM In Use flag in the system memory block map

Entry Conditions:

B = number of blocks

X = starting block number

Exit Conditions: None

- The Deallocate RAM Blocks call assumes the blocks being deallocated are not associated with any DAT image.
- The support module for this call is OS9p2.

Deallocate Task Number

OS9 F\$DelTsk 103F 40

Releases the task number that the process specified by the passed descriptor pointer

Entry Conditions:

X = process descriptor pointer

Error Output:

CC = C bit set on error B = appropriate error code

Additional Information:

• The support module for this call is OS9p1.

Link Using Module Directory pointer to a module Entry

Performs a link using a directory entry

OS9 F\$ELink 103F 4D

Entry Conditions:

= module type

= pointer to module directory entry

Exit Conditions:

= module header address

= module entry point

Error Output:

CC = C bit set on error

= appropriate error code

- This call differs from Link in that you supply a pointer to the module directory entry rather than a pointer to a module name.
- The support module for this call is OS9p1.

Find Module Directory Entry

Returns a pointer to the module directory entry

OS9 F\$FModul 103F 4E

Entry Conditions:

A = module type

X = pointer to the name string

Y = DAT image pointer (for name)

Exit Conditions:

A = module type

B = module revision number

X = updated name string; (if Register A contains 0 on

entry)

U = module directory entry pointer

Error Output:

CC = C bit set on error

 $B = appropriate\ error\ code$

- The Find Module Directory Entry call returns a pointer to the module directory entry for the first module that has a name and type matching the specified name and type. If you pass a module type of zero, the system call finds any module.
- The support module for this call is OS9p1.

Find 64

OS9 F\$Find64 103F 2F

Returns the address of a 64-byte memory block

Entry Conditions:

A = block number

X = address of the block

Exit Conditions:

Y = address of the block

CC = carry set if block not allowed or not in use

Additional Information:

• OS-9 uses Find 64 to find path descriptors when given their block number. The block number can be any positive integer.

Get Free High Block

OS9 F\$FreeHB 103F 3E

Searches the DAT image for the highest set of contiguous free blocks of the specified size

Entry Conditions:

B = block count

Y = DAT image pointer

Exit Conditions:

A = starting block number

Error Output:

CC = C bit set on error

 $B = appropriate\ error\ code$

- The Get Free High Block call returns the block number of the beginning memory address of the free blocks.
- The support module for this system call is OS9p1.

Get Free Low Block

OS9 F\$FreeLB 103F 3D

Searches the DAT image for the lowest set of contiguous free blocks of the specified size

Entry Conditions:

B = block count

Y = DAT image pointer

Exit Conditions:

 $A = starting \ block \ number$

Error Output:

CC = C bit set on error

 $B = appropriate\ error\ code$

- The Get Free Low Block call returns the block number of the beginning memory address of the free blocks.
- The support module for this system call is OS9p1.

Compact Module Directory

Compacts the entries in the module directory

OS9 F\$GCMDir 103F 52

Entry Conditions: None

Exit Conditions: None

Additional Information:

• This function is only for internal OS-9 system use. You should never call it from a program.

Get Process Pointer

Gets a pointer to a process

F\$GProcP 103F 37

Entry Conditions:

A = process ID

Exit Conditions:

B = pointer to process descriptor (if no error)

Error Output:

CC = carry set on error

 $B = error \ code \ (If an error occurs \ (E\$BPrcID))$

- The Get Process Pointer call translates a process ID number to the address of its process descriptor in the system address space. Process descriptors exist only in the system task address space. Because of this, the address returned only refers to system address space.
- The support module for this call is OS9p2.

I/O Delete

OS9 F\$IODel 103F 33

Deletes an I/O module that is not being used

Entry Conditions:

X = address of an I/O module

Error Output:

CC = carry set on error B = error code (if any)

- The I/O Delete deletes the specified I/O module from the system, if the module is not in use. This system call is used mainly by the I/O MANAGER, and can be of limited or no use for other applications.
- This is the order in which I/O Delete operates:
 - 1. Register X passes the address of a device descriptor module, device driver module, or file manager module.
 - 2. OS-9 searches the device table for the address.
 - 3. If OS-9 finds the address, it checks the module's use count. If the count is zero, the module is not being used; OS-9 deletes it. If the count is not zero, the module is being used; OS-9 returns an error.
- I/O Delete returns information to the Unlink system call after determining whether a device is busy.

I/O Queue OS9 F\$IOQu 103F 2B

Inserts the calling process into another process's I/O queue, and puts the calling process to sleep

Entry Conditions:

A = process number

Error Output:

CC = carry set on error B = error code (if any)

- The I/O Queue call links the calling process into the I/O queue of the specified process and performs an untimed sleep. The IO Manager and the file managers are primary and extensive users of I/O Queue.
- Routines associated with the specified process send a wakeup signal to the calling process.

Set IRQ OS9 F\$IRQ 103F 2A

Adds a device to or removes it from the polling table

Entry Conditions:

- D = address of the device status register
- X = 0 (to remove a device) or *the address of a packet* (to add a device)
 - the address at X is the flip byte
 - the address at X + 1 is the mask byte
 - the address at X + 2 is the priority byte
- Y = address of the device IRQ service routine
- U = address of the service routine's memory area

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

- Set IRQ is used mainly by device driver routines. (See "Interrupt Processing" in Chapter 2 for a complete discussion of the interrupt polling system.)
- Packet Definitions:

The Flip Byte. Determines whether the bits in the device status register indicate active when set or active when cleared. If a bit in the flip byte is set, it indicates that the task is active whenever the corresponding bit in the status register is clear (and vice versa).

The Mask Byte. Selects one or more bits within the device status register that are interrupt request flag(s). One or more set bits identify which task or device is active.

The Priority Byte. Contains the device priority number (0 = lowest priority, 255 = highest priority).

Load A From Task B

Loads A from 0,X in task B

F\$LDABX 103F 49

Entry Conditions:

 $egin{array}{ll} B &= task \ number \ X &= pointer \ to \ data \end{array}$

Exit Conditions:

A = byte at 0,X in task address space

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• The value in Register X is an offset value from the beginning address of the Task module. The Load A From Task B call returns one byte from this logical address. Use this system call to get one byte from the current process's memory in a system state routine.

Get One Byte

Loads A from [X, [Y]]

F\$LDAXY 103F 46

Entry Conditions:

X = block offset

Y = DAT image pointer

Exit Conditions:

A = contents of byte at DAT image (Y) offset by X

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

• The Get One Byte system call gets the contents of one byte in the specified memory block. The block is specified by the DAT image in (Y), offset by (X). The call assumes that the DAT image pointer is to the actual block desired, and that X is only an offset within the DAT block. The value in Register X must be less than the size of the DAT block. OS-9 does not check to see if X is out of range.

Get Two Bytes F\$LDDDXY 103F 48

Loads D from [D+X],[Y]

Entry Conditions:

D = Offset to the offset within the DAT image

X = Offset within the DAT image

Y = DAT image pointer

Exit Conditions:

D = contents of two bytes at [D+X,Y]

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• Get Two Bytes loads two bytes from the address space described by the DAT image pointer. If the DAT image pointer is to the entire DAT, then make D+X equal to the process address for data. If the DAT image is not the entire image (64K), then you must adjust D+X relative to the beginning of the DAT image. Using D+X lets you keep a local pointer within a block, and also lets you point to an offset within the DAT image that points to a specified block number.

Map Specific Block

F\$MapBlk 103F 4F

Maps the specified block(s) into unallocated blocks of process space

Entry Conditions:

X = starting block number B = number of blocks

Exit Conditions:

U = address of first block

Error Output:

B = error code (if any) CC = carry set on error

Additional Information:

• The system maps blocks from the top down. It maps new blocks into the highest available addresses in the address space. See Clear Specified Block for information on unmapping.

Move Data

F\$Move 103F 38

Moves data bytes from one address space to another

Entry Conditions:

 $A = source \ task \ number$

B = destination task number

X = source pointer

Y = byte count

U = destination pointer

Error Output:

CC = carry set on error

B = error code (if any)

- You can use the Move Data system call to move data bytes from one address space to another, usually from system to user, or vice versa.
- The support module for this call is OS9p1.

Next Process

OS9 F\$NProc 103F 2D

Executes the next process in the active process queue

Entry Conditions: None

Exit Conditions:

Control does not return to caller.

- The Next Process system call takes the next process out of the active process queue and initiates its execution. If the queue contains no process, OS-9 waits for an interrupt, and then checks the queue again.
- The process calling Next Process must already be in one of the three process queues. If it is not, it becomes unknown to the system even though the process descriptor still exists and can be displayed by a PROCS command.

Release A Task

F\$RelTsk 103F 43

Releases a specified DAT task number from use by a process, making the task's DAT hardware available for use by another task

Entry Conditions:

= task number

Error Output:

CC= carry set on error = *error code* (if any)

Additional Information:

• The support module for this call OS9p1.

Reserve Task Number

Reserves a DAT task number

F\$ResTsk 103F 42

Entry Conditions: none

Exit Conditions:

 $B = task \ number (if no error)$

Error Output:

CC = carry set on error

 $B = error \ code \ if \ an \ error \ occurs$

- The Reserve Task Number call finds a free DAT task number, reserves it, and returns the task number to the caller. The caller often then assigns the task number to a process.
- The support module for this call is OS9p1.

Return 64

OS9 F\$Ret64 103F 31

Deallocates a 64-byte block of memory

Entry Conditions:

A = block number

X = address of the base page

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• See the Allocate 64 system call for more information.

Set Process DAT Image

Copies all or part of the DAT image into a process descriptor

F\$SetImg 103F 3C

Entry Condition:

A = starting image block number

B = block count

X = process descriptor pointer

U = new image pointer

Error Output:

CC = carry set on error B = error code (if any)

- While copying part or all of the DAT image, this system call also sets an image change flag in the process descriptor. This flag guarantees that as a process returns from the system call. The call updates the hardware to match the new process DAT image.
- The support module for this call is OS9p1.

Set Process Task DAT Registers

Writes to the hardware DAT registers

F\$SetTsk 103F 41

Entry Conditions:

X = pointer to process descriptor

Error Output:

CC = carry set on error B = error code (if any)

- This system call sets the process task hardware DAT registers, and clears the image change flag in the process descriptor. It also writes to DAT RAM the process's segment address information.
- The support module for this call is OS9p1.

System Link

F\$SLink 103F 34

Adds a module from outside the current address space into the current address space

Entry Conditions:

A = module type

X = module name string pointer

Y = name string DAT image pointer

Exit Conditions:

A = module type

 $B = module \ revision \ (if \ no \ error)$

X = updated name string pointer

 $Y = module \ entry \ point$

U = module pointer

Error Output:

CC = carry set on error

B = error code (If an error occurs)

- The I/O System uses the System Link call to link into the current process's address space those modules specified by a device name in a user call. User calls such as Create File and Open Path use this System Link.
- The support module for this call is OS9p1.

Request System Memory

OS9 F\$SRqMem 103F 28

Allocates a block of memory of the specified size from the top of available RAM

Entry Conditions:

D = byte count

Exit Conditions:

U = starting address of the memory area

D = new memory size

Error Output:

CC = carry set on error

B = error code (if any)

- The Request System Memory call rounds the size request to the next page boundary.
- This call allocates memory only for system address space.

Return System Memory

Deallocates a block of contiguous pages

OS9 F\$SRtMem 103F 29

Entry Conditions:

U = starting address of memory to return; must point to an even page boundary

D = number of bytes to return

Error Output:

CC = carry set on error B = error code (if any)

- Register U must point to an even page boundary.
- This call deallocates memory for system address space only.

Set SVC

OS9 F\$SSvc 103F 32

Adds or replaces a system call

Entry Conditions:

Y = address of the system call initialization table

Error Output:

CC = C bit set B = error code

Additional Information:

- Set SVC adds or replaces a system call, which you have written, to OS-9's user and system mode system call tables.
- Register Y passes the address of a table, which contains the function codes and offsets, to the corresponding system call handler routines. This table has the following format:

Use Relative Address \$00 **Function Code** ← First entry Offset From Byte 3 \$01 To Function Handler \$02 Function Code ← Second entry \$03 Offset From Byte 6 \$04 To Function Handler \$05 More Entries ← More entries \$80 ← End-of-table mark

- If the most significant bit of the function code is set, OS-9 updates the system table.
 - If the most significant bit of the function code is not set, OS-9 updates the system and user tables.
- The function request codes are in the range \$29-\$34. IO calls are in the range \$80-\$90
- To use a privileged system call, you must be executing a program that resides in the system map and that executes in the system state.
- The system call handler routine must process the system call and return from the subroutine with an RTS instruction.
- The handler routine might alter all CPU registers (except Register SP).
- Register U passes the address of the register stack to the system call handler as shown in the following diagram:

			Relative Address	Name
U → CC A			\$00 \$01 \$01	R\$CC R\$D R\$A
	В		\$02	R\$B
	DP		\$03	R\$DP
	Y U PC		\$04	R\$X
			\$06	R\$Y
			\$08	R\$U
			\$0A	R\$PC

Codes \$70-\$7F are reserved for user definition.

Store A Byte In A Task

Stores A at 0,X in Task B

F\$STABX 103F 4A

Entry Conditions:

A = byte to store

B = destination task number

X = logical destination address

Error Output:

CC = carry set on error

B = error code (if any)

- This system call is similar to the assembly language instruction "STA 0,X". The difference is that in the system call, X refers to an address in the given task's address space, instead of the current address space.
- The support module for this system call is OS9p1.

Install virtual interrupt

OS9 F\$VIRQ 103F 27

Installs a virtual interrupt handler routine

Entry Conditions:

D = initial count value

X = 0 to delete entry

1 to install entry

Y = address of 5-byte packet

Error Output:

CC = carry set on error

 $B = appropriate\ error\ code$

Additional Information:

• Install VIRQ for use with devices in the Multi-Pak Expansion Interface. This call is explained in detail in Chapter 2.

Validate Module OS9 F\$VModul 103F 2E

Checks the module header parity and CRC bytes of a module

Entry Conditions:

D = DAT image pointer
 X = new module block offset

Exit Conditions:

U = address of the module directory entry

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• If the values of the specified module are valid, OS-9 searches the module directory for a module with the same name. If one exists, OS-9 keeps in memory the module that has the higher revision level. If both modules have the save revision level, OS-9 retains the module in memory.

Get Status System Calls

You use the Get Status system calls with the RBF manager subroutine GETSTA. The OS-9 Level Two system reserves function Codes 7-127 for use by Microware. You can define Codes 128-255 and their parameter-passing conventions for your own use. (See the sections on device drivers in Chapters 4, 5, and 6.)

The Get Status routine passes the register stack and the specified function code to the device driver.

Following are the Get Status functions and their codes.

SS.OPT

(Function code \$00). Reads the option section of the path descriptor, and copies it into the 32-byte area pointed to by Register X

Entry Conditions:

A = path number

B = \$00

X = address to receive status packet

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• Use SS.OPT to determine the current settings for editing functions, such as echo and auto line feed.

SS.RDY

(Function code \$01). Tests for data available on SCF-supported devices

Entry Conditions:

A = path numberB = \$01

Exit Conditions:

If the device is ready: CC = carry clear

B = \$00

If the device is not ready:

CC = carry set

B = F6 (E\$SRNDY)

Error Output:

CC = carry setB = error code

SS.SIZ

(Function code \$02). Gets the current file size on a RBF-supported devices only

Entry Conditions:

A = path numberB = \$02

Exit Conditions:

X = most significant 16 bits of the current file size U = least significant 16 bits of the current file size

Error Output:

CC = carry set on error B = error code (if any)

SS.POS

(Function code \$05). Gets the current file position (RBF-supported devices only)

Entry Conditions:

 $A = path \ number$

B = \$05

Exit Conditions:

X = most significant 16 bits of the current file position

U = least significant 16 bits of the current file position

Error Output:

CC = carry set on error

B = error code (if any)

SS.EOF

(Function code \$06). Tests for the end of the file (EOF)

Entry Conditions:

A = path number

B = \$06

Exit Conditions:

If there is no EOF:

CC = carry clear

B = \$00

If there is an EOF:

CC = carry set

B = D3(E\$EOF)

Error Output:

CC = carry set

B = error code

SS.DevNm

(Function Code \$0E). Returns a device name

Entry Conditions:

A = path number

B = \$0E

X = address of 32-byte buffer for name

Exit Conditions:

X = address of buffer, name moved to buffer

SS.DSTAT

(Function code \$12). Returns the display status

Entry Conditions:

A = path number

B = \$12

Exit Conditions:

 $A = color \ code \ of \ the \ pixel \ at \ the \ cursor \ address$

X = address of the graphics display memory

 $Y = graphics \ cursor \ address; \ X = MSB, \ Y = LSB$

Additional Information:

• This function is supported only with the VDGINT module and deals with VDG-compatible graphics screens. See SS.AAGBf for information regarding Level Two operation.

SS.JOY

(Function code \$13). Returns the joystick values

\$00 =fire button is off

Entry Conditions:

A = path number
B = \$13
X = joystick number
0 = (right joystick)
1 = (left joystick)

Exit Conditions:

A = fire button down

0 = none

1 = Button 1

2 = Button 2

3 = Button 1 and Button 2

X = selected joystick x value (0-63)

Y = selected joystick y value (0-63)

Note: Under Level 1, the following values are returned by this call:

A = fire button status

\$FF = fire button is on

SS.AlfaS

(Function code \$1C). Returns VDG alpha screen memory information

Entry Conditions:

A = path numberB = \$1C

Exit Conditions:

 $A = caps \ lock \ status \\ \$00 = lower \ case \\ \$FF = upper \ case \\ X = memory \ address \ of \ the \ buffer \\ Y = memory \ address \ of \ the \ cursor$

- SS.AlfaS maps the screen into the user address space. The call requires a full block of memory for screen mapping. This call is only for use with VDG text screens handled by VDGINT.
- The support module for this call is VDGINT.
- **Warning:** Use extreme care when poking the screen, since other system variables reside in screen memory. Do not change any addresses outside of the screen.

SS.Cursr

(Function code \$25). Returns VDG alpha screen cursor information

Entry Conditions:

A = path number

B = \$25

Exit Conditions:

A = character code of the character at the current cursor address

X = cursor X position (column)

 $Y = cursor \ Y \ position \ (row)$

- SS.Cursr returns the character at the current cursor position. It also returns the X-Y address of the cursor relative to the current device's window or screen. SS.Cursr works only with text screens.
- The support module for this call is VDGINT.

SS.ScSiz

(Function code \$26). Returns the window or screen size

Entry Conditions:

A = path number

B = \$26

Exit Conditions:

X = number of columns on screen/window

Y = number of rows on screen/window

Additional Information:

• Use this call to determine the size of an output screen. The values returned depend on the device in use:

For non-CCIO devices, the call returns the values following the XON/XOFF bytes in the device descriptor.

For CCIO devices, the call returns the size of the window or screen in use by the specified device.

For window devices, the call returns the size of the current working area of the window.

• The support modules for this call are VDGINT, GrfInt, and WindInt.

SS.KySns

(Function code \$27). Returns key down status

Entry Conditions:

A = path numberB = \$27

Exit Conditions:

A = keyboard scan information

Additional Information:

• Accumulator A returns with a bit pattern representing eight keys. With each keyboard scan, OS9 updates this bit pattern. A set bit (1) indicates that a key was pressed since the last scan. A clear bit (0) indicates that a key was not pressed. Definitions for the bits are as follows:

Bit	Key
0	SHIFT
1	CTRL or CLEAR
2	ALT or @
3	(up arrow)
4	(down arrow)
5	(left arrow)
6	(right arrow)
7	Space Bar

The bits can be masked with the following equates:

SHIFTBIT	equ	%00000001
CNTRLBIT	equ	%0000010
ALTERBIT	_	%00000100
UPBIT	equ	%00001000
DOWNBIT	equ	%00010000
LEFTBIT	equ	%00100000
RIGHTBIT	equ	%01000000
SPACEBIT	equ	%10000000
ALTERBIT UPBIT DOWNBIT LEFTBIT RIGHTBIT	equ equ equ equ	%00000100 %00001000 %00010000 %00100000 %01000000

• The support module for this call is CC3IO.

SS.ComSt

(Function code \$28). Return serial port configuration information

Entry Conditions:

A = path numberB = \$28

Exit Conditions:

Y = high byte: parity low byte: baud rate (See the Setstat call SS.ComSt for values)

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• The SCF manager uses this call when performing an SS.Opt Getstat on an SCF-type device. User calls to SS.ComSt do not update the path descriptor. Use the SS.OPT Getstat call for most applications, because it automatically updates the path descriptor.

SS.MnSel

(Function code \$87). Requests that the high-level menu handler take control of menu selection

Entry Conditions:

A = path number

B = \$87

Exit Conditions:

A = menu ID (if valid selection)

0 (if invalid selection)

B = item number of menu (if valid selection)

Error Output:

CC = carry set on error

B = error code (if invalid selection)

- After detecting a valid mouse click (when the mouse is pointing to a control area on a window), a process needs to call SS.MnSel. This call tells the enhanced window interface to handle any menu selection being made. If accumulator A returns with 0, then no selection has been made. The calling process needs to test and handle other returned values.
- A condition where Register A returns a valid menu ID number and Register B returns 0 signals the selection of a menu with no items. The application can now take over and do a special graphics pull down of its own. The menu title remains highlighted until the application calls the SS.UMBar SetStat to update the menu bar.
- The support module for this call is WindInt.

SS.Mouse

(Function code \$89). Gets mouse status

Entry Conditions:

A = path number

B = \$89

X = data storage area address

Y = mouse port select:

0 = automatic selection

1 = right side 2 = left side

Exit Conditions:

 $X = data \ storage \ area \ address$

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

• SS.Mouse returns information on the current mouse and its fire button. The following list defines the 32-byte data packet that SS.Mouse creates:

Pt.Valid	rmb 1	Is returned info valid? $(0 = no,$
Pt.Actv	rmb 1	1 = yes) Active side (0 = off, 1 = right, 2 =
1 0.71000	11110 1	left)
Pt.ToTm	rmb 1	Timeout initial value
Pt.TTTo	rmb 1	Time until timeout
	rmb 2	RESERVED
Pt.TSSt	rmb 2	Time since counter start
Pt.CBSA	rmb 1	Current button state (Button A)
Pt.CBSB	rmb 1	Current button state (Button B)
Pt.CCtA	rmb 1	Click count (Button A)
Pt.CCtB	rmb 1	Click count (Button B)
Pt.TTSA	rmb 1	Time this state counter (Button A)
Pt.TTSB	rmb 1	Time this state counter (Button B)
Pt.TLSA	rmb 1	Time last state counter (Button A)
Pt.TLSB	rmb 1	Time last state counter (Button B)
	rmb 2	RESERVED
Pt.BDX	rmb 2	Button down frozen Actual X
Pt.BDY	rmb 2	Button down frozen Actual Y
Pt.Stat	rmb 1	Window pointer type location
Pt.Res	rmb 1	Resolution (0-640 by $0 = 10/1 = 1$)
Pt.AcX	rmb 2	Actual X value
Pt.AcY	rmb 2	Actual Y value
Pt.WRX	rmb 2	Window relative X
Pt.WRY	rmb 2	Window relative Y
Pt.Siz	equ.	Packet size 32 bytes
SPt.SRX	rmb 2	System use, screen relative X
SPt.SRY	rmb 2	System use, screen relative Y
SPt.Siz	equ.	Size of packet for system use
	4 4 4 4	

• Button Information:

Pt.Valid. The valid byte gives the caller an indication of whether the information contained in the returned packet is accurate. The information returned by this call is only valid if the process is running on the current interactive window. If the process is on a non-interactive window, the byte is zero and the process can ignore the information returned.

Pt.Actv. This byte shows which port is selected for use by all mouse functions. The default value is Right (1). You can change this value with the SS.GIP Setstat call.

Pt.ToTm. This is the initial value used by Pt.TTTo.

Pt.TTTo. This is the count down value (as of the instant the Getstat call is made). This value starts at the value contained in the Pt.ToTm and counts down to zero at a rate of 60 counts per second. The system maintains all counters until this value reaches 0, at which point it sets all counters and states to 0. The mouse scan routine changes into a quiet mode which requires less overhead than when the mouse is active. The timeout begins when both buttons are in the up (open) state. The timer is reinitialized to the value in Pt.ToTm when either button goes down (closed).

Pt.TSSt. This counter is constantly increasing, beginning when either button is pressed while the mouse is in the quiet state. All counts are a number of ticks (60 per second). The timer counts to \$FFFF, then stays at that value if additional ticks occur.

Pt.CBSA. These flag bytes indicate the state of the button Pt.CBSB. at the last system clock tick. A value of 0 indicates that the button is up (open). A value other than zero indicates that the button is down (closed). Button A is available on all Tandy joysticks and mice. Button B is only available for products that have two buttons.

The system scans the mouse buttons each time it scans the keyboard.

Pt.CCtA. This is the number of clicks that have occurred **Pt.CCtB.** since the mouse went into an active state. A click is defined as pressing (closing) the button, then releasing (opening) the button. The system counts the clicks as the button is released.

Pt.TTSA. This counter is the number of ticks that have **Pt.TTSB.** occurred during the current state, as defined by Pt.CBSx. This counter starts at one (counts the tick when the state changes) and increases by one for each tick that occurs while the button remains in the same state (open or closed).

Pt.TLSA. This counter is the number of ticks that have Pt.TLSB. occurred during the time that a button is in a state opposite of the current state. Using this count and the TTSA/TTSB count, you can determine how a button was in the previous state, even if the system returns the packet after the state has changed. Use these counters, along with the state and click count values, to define any type of click, drag, or hold convention you want.

Reserved. Two packet bytes are reserved for future expansion of the returned data.

• Position Information:

Pt.BDX. These values are copies of the Pt.AcX and Pt.AcY **Pt.BDY.** values when either of the buttons change from an open state to a closed state.

Pt.Stat. This byte contains information about the area of the screen on which the mouse is positioned. Pt. Valid must be a value other than 0 for this information to be accurate. If Pt. Valid is 0, this value is also 0 and not accurate. Three types of areas are currently defined:

- 0 = content region or current working area of the window
- 1 = control region (for use by Multi-View)
- 2 = off window, or on an area of the screen that is not part of the window

Pt.Res. This value is the current resolution for the mouse. The mouse must always return coordinates in the range of 0-639 for the X axis and 0-191 for the Y axis. If the system is so configured, you can use the high-resolution mouse adapter which provides a 1 to 1 ratio with these values plus 1. If the adapter is not in use, the resolution is a ratio of 1 to 10 on the X axis and 1 to 3 on the Y axis. The keyboard mouse provides a resolution of 1 to 1. The values in Pt.Res are:

- 0 = low res (x:10, y:3)
- 1 = high res (x,y:1)

Pt.AcX. The values read from the mouse returned in the **Pt.AcY.** resolution as described under Pt.Res.

Pt.WRX. The values read from the mouse minus the **Pt.WRY.** starting coordinates of the current window's working area. These values return the coordinates in numbers relative to the type of screen. For example, the X axis is in the range 0-639 for high-resolution screens and 0-319 for low resolution screens. You can divide the window relative values by 8 to obtain absolute character positions. These values are most helpful when working in non-scaled modes.

• The support modules for this call are CC3IO, GrfInt, and WindInt.

SS.Palet

(Function code \$91). Gets palette information

Entry Conditions:

A = path number

B = \$91

X = pointer to the 16-byte palette information buffer

Exit Conditions:

X = pointer to the 16-byte palette information buffer

- SS.Palet reads the contents of the 16 screen palette registers, and stores them in a 16-byte buffer. When you make the call, be sure the X register points to the desired buffer location. The pointer is retained on exit. The palette values returned are specific to the screen on which the call is made.
- The support modules for this call are VDGINT, GrfInt, and WindInt.

SS.ScTyp

(Function code \$93). Returns the type of a screen to a calling program.

Entry Conditions:

A = pathB = \$93

Exit Conditions:

A = screen type code 1 - 40 = 24 + 40

 $1 = 40 \times 24 \text{ text screen}$

 $2 = 80 \times 24 \text{ text screen}$

3 = not used

4 = not used

 $5 = 640 \times 192$, 2-color graphics screen

 $6 = 320 \times 192$, 4-color graphics screen

 $7 = 640 \times 192$, 4-color graphics screen

 $8 = 320 \times 192$, 16-color graphics screen

Additional Information:

 Support modules for this system call are GrfInt and WindInt.

SS.FBRgs

(Function code \$96). Returns the foreground, background and border palette registers for a window.

Entry Conditions:

A = path number

B = \$96

Exit Conditions:

A = foreground palette register number

B = background palette register number (if carry clear)

X = least significant byte of border palette register number

Error Output:

B = error code if any

CC = carry set on error

Additional Information:

Support modules for SS.FBRgs are GrfInt and WindInt.

SS.DFPal

(Function code \$97). Returns the default palette register settings.

Entry Conditions:

A = path number

B = \$97

X = pointer to 16-byte data space

Exit Conditions:

X = default palette data moved to user space

Error Output:

B = error code, if any

CC = carry set on error

Additional Information:

• You can use SS.DFPal to find the values of the default palette registers that are used when a new screen is allocated by GrfInt or WindInt. The corresponding SetStat can alter the default registers. This GetStat/SetStat pair is for system configuration utilities and should not be used by general applications.

Set Status System Calls

Use the Set Status system calls with the RBF manager subroutine SETSTA. The OS-9 Level Two system reserves function Codes 7-127 for use by Microware. You can define Codes 200-255 and their parameter-passing conventions for your own use. (See the sections on device drivers in Chapters 4, 5, and 6.)

Following are the Set Status functions and their codes.

SS.OPT

(Function code \$00). Writes the option section of the path descriptor

Entry Conditions:

A = path number

B = \$00

X = address of the status packet

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

• SS.OPT writes the option section of the path descriptor from the 32-byte status packet pointed to by Register X. Use this system call to set the device operating parameters, such as echo and line feed.

SS.SIZ

(Function code \$02). Changes the size of a file for RBF-type devices

Entry Conditions:

A = path number

B = \$02

X = most significant 16 bits of the desired file size

U = least significant 16 bits of the desired file size

Error Output:

CC = carry set on error

B = error code (if any)

SS.RESET

(Function code \$03). Restores the disk drive head to Track 0 in preparation for formatting and error recovery (use only with RBF-type devices)

Entry Conditions:

A = path number

B = \$03

Error Output:

CC = carry set on error

B = error code (if any)

SS.WTRK

(Function code \$04). Formats (writes) a track on a disk (RBF-type devices only)

Entry Conditions:

```
\begin{array}{ll} A &= path \ number \\ B &= \$04 \\ U &= track \ number \ (least \ significant \ 8 \ bits) \\ X &= address \ of \ the \ track \ buffer \\ Y &= side/density \\ Bit \ B0 &= side \\ 0 &= Side \ 0 \\ 1 &= Side \ 1 \\ Bit \ B1 &= density \\ 0 &= single \\ 1 &= double \end{array}
```

Error Output:

Additional Information:

• For hard disks or floppy disks that have a "format entire diskette command," SS.WTRK formats the entire disk only when the *track number* is zero.

SS.SQD

(**Function code \$0C**). Starts the shutdown procedure for a hard disk that has sequence-down requirements prior to removal of power. (Use only with RBF-type devices.)

Entry Conditions:

A = path numberB = \$0C

Exit Conditions: None

SS.KySns

(Function code \$27). Turns the key sense function on and off

Entry Conditions:

A = path numberB = \$27

 $X = key \ sense \ switch \ value$

0 = normal key operation1 = key sense operation

Error Output:

CC = carry set on error B = error code (if any)

- When SS.KySns switches the keyboard to key sense mode, the CC3IO module suspends transmission of keyboard characters to the SCF manager and the user. While the computer is in key sense mode, the only way to detect key press is with SS.KySns.
- The support module for this call is CC3IO.

SS.ComSt

(Function code \$28). Used by the SCF manager to configure a serial port

Entry Conditions:

A = path number

B = \$28


Y = high byte: parity low byte: baud rate

Error Output:

CC = carry set on error B = error code (if any)

Additional Information:

Baud Configuration. The high order byte of Y determines the baud rate, the word length, and number of stop bits. The byte is configured as follows:

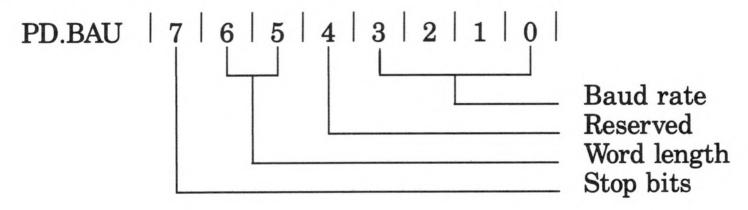

Stop bits:

$$0 = 1$$

1 = 2

Word length:

00 = 8 bit

01 = 7 bit

Baud rate:

0000 = 110

0001 = 300

0010 = 600

0011 = 1200


0100 = 2400

0101 = 4800 0110 = 9600

0111 = 19200

1xxx = undefined

• Parity Configuration. The low order byte of Y determines parity. The byte is configured as follows:

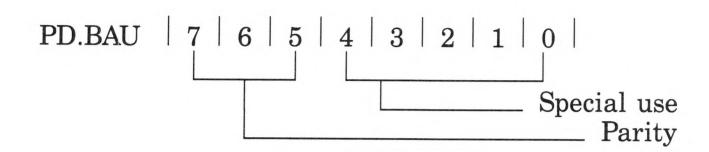

Parity:

xx0 = none

001 = odd (ACIAPAK and MODPAK only)

011 = even (ACIAPAK and MODPAK only)

101 = transmit: mark

receive: ignore

111 = transmit: space

receive: ignore

- The SCF manager uses SS.ComSt to inform a driver that serial port configuration information has been changed in the path descriptor. After calling SS.ComSt, a user routine must call the SS.OPT SetStat to correctly update the path descriptor.
- This call is for the use of the SCF manager. Use SS.OPT for changing baud, stop bit, and parity values.

SS.Close

(Function code \$2A). Informs a device driver that a path is closed.

Additional Information:

This call is used internally by OS-9's SCF file manager and is not available for user programs. It can be used only by device drivers and file managers.

SS.AAGBf

(Function code \$80). Reserves an additional graphics buffer

Entry Conditions:

A = path number

B = \$80

Exit Conditions:

X = buffer address

Y = buffer number (1-2)

Error Output:

CC = carry set on error

B = error code (if any)

- SS.AAGBf allocates an additional 8K graphics buffer. The first buffer (Buffer 0) must be allocated by using the DIS-PLAY GRAPHICS command. To use the DISPLAY GRAPHICS command, send control code \$0F to the standard terminal driver. SS.AAGBf can allocate up to two additional buffers (Buffers 1 and 2), one at a time.
- After calling SS.AAGBf, Register X contains the address of the new buffer. Register Y contains the buffer number.
- To deallocate all graphics buffers, use the END GRAPHICS control code.
- When SS.AAGBf allocates a buffer, it also maps the buffer into the application's address space. Each buffer uses 8K of the available memory in the application's address space. Also, if SS.DStat is called, Buffer 0 is also mapped into the application's address space. Allocation of all three buffers reduces the application's free memory by 24K.
- The support module for this call is VDGINT.

SS.SLGBf

(Function code \$81). Selects a graphics buffer

Entry Conditions:

A = path number

B = \$81

X = \$00 select buffer for use

\$01-\$FF select buffer for use and display

Y = buffer number (0-2)

Exit Conditions:

X = unchanged from entry

Y = unchanged from entry

Error Output:

CC = carry set on error

B = error code (if any)

- Use DISPLAY GRAPHICS to allocate the first graphics buffer. Use SS.AAGBf to allocate the second and third graphics buffers.
- Save each return address when writing directly to a screen. It is not necessary to save return addresses when using operating system graphics commands.
- SS.SLGBf does not update hardware information until the next vertical retrace (60Hz rate). Programs that use SS.AAGBf to change current draw buffers need to wait long enough to ensure that OS-9 has moved the current buffer to the screen.
- The screen shows the buffer only if the buffer is selected as the interactive device. If the device does not possess the keyboard, OS-9 stores the information until the device is selected as the interactive device. When the device is selected as the interactive device, the display shows the selected device's screen.
- The support module for this call is VDGINT.

SS.MpGPB

(Function code \$84). Maps the Get/Put buffer into a user address space

Entry Conditions:

A = path number

B = \$84

X = high byte: buffer group number

low byte: buffer number

Y = action to take

1 = map buffer

0 = unmap buffer

Exit Conditions:

X = address of the mapped buffer

Y = number of bytes in buffer

Error Output:

CC = carry set on error

B = error code (if any)

- The support modules for this call are GrfInt and WindInt.
- SS.MpGPB maps a Get/Put buffer into the user address space. You can then save the buffer to disk or directly modify the pixel data contained in the buffer. Use extreme care when modifying the buffer so that you do not write outside of the buffer data area.

SS.WnSet

(Function code \$86). Set up a high level window handler

Entry Conditions:

A = path number

B = \$86

X = window data pointer (if Y = WT.FSWin or WT.Win)

Y = window type code

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

- The C language data structures for windowing are defined in the wind.h file in the DEFS directory of the system disk.
- The support module for this call is WindInt.

SS.SBar

(Function code \$88). Puts a scroll block at a specified position

Entry Conditions:

 $A = path \ number$

B = \$88

X = horizontal position of scroll block

Y = vertical position of scroll block

Error Output:

CC = carry set on error

B = error code (if any)

Additional Information:

• WT.FSWin-type windows have areas at the bottom and right sides to indicate their relative positions within a larger area. These areas are called scroll bars. SS.SBar gives an application the ability to maintain relative position markers within the scroll bars. The markers indicate

the location of the current screen within a larger screen. Calling SS.SBar, updates both scroll markers.

• The support module for this call is WindInt.

SS.Mouse

(Function code \$89). Sets the sample rate and button timeout for a mouse

Entry Conditions:

A = path number

B = \$89

X = mouse sample rate and timeout most significant byte = mouse sample rate least significant byte = mouse timeout

Error Output:

CC = carry set on error B = error code (if any)

- SS. Mouse allows the application to define the mouse parameters. The sample rate is the number of clock ticks between the actual readings of the mouse status.
- The support module for the call is CC3IO.

SS.MsSig

(Function code \$8A). Sends a signal to a process when the mouse button is pressed

Entry Conditions:

A = path number

B = \$8A

X = user defined signal code (low byte only)

Error Output:

CC = carry set on error B = error code (if any)

- SS.MsSig sends the process a signal the next time a mouse button changes state (from open to closed). Once SS.MsSig sends the signal, the process must repeat the Setstat each time that it needs to set up the signal.
- Processes using SS.MsSig should have an intercept routine to trap the signal. By intercepting the signal, other processes can be notified when the change occurs. Therefore, the other processes do not need to continually poll the mouse.
- The SS.Relea Setstat clears the pending signal request, if desired. It also clears any pending signal from SS.SSig. Because of this, if you want to clear only one signal, you must reset the other signal after calling SS.MsSig.
- The support module for this call is CC3IO.

SS.AScrn

(Function code \$8B). Allocates and maps a high-resolution screen into an application address space

Entry Conditions:

```
A = path number

B = $8B

X = screen type

0 = 640 x 192 x 2 colors (16K)

1 = 320 x 192 x 4 colors (16K)

2 = 160 x 192 x 16 colors (16K)

3 = 640 x 192 x 4 colors (32K)

4 = 320 x 192 x 16 colors (32K)
```

Exit Conditions:

```
    X = application address space of screen
    Y = screen number (1-3)
```

Error Output:

```
CC = carry set on error
B = error code (if any)
```

- SS.AScrn is particularly useful in systems with minimal memory when you want to allocate a high resolution graphics screen with all screen updating handled by a process.
- This call uses VDGInt (GRFINT is not required).
- All screens are allocated in multiples of 8K blocks. You can allocate a maximum of three buffers at one time. To select between buffers, use the SS.DScrn Setstat call.
- Screen memory is allocated but not cleared. The application using the screen must do this.
- Screens must be allocated from a VDG-type device—a standard 32-column text screen must be available for the device.
- The support module for this call is VDGINT.

SS.DScrn

(Function code \$8C). Causes VDGINT to display a screen that was allocated by SS.AScrn

Entry Conditions:

A = path number

B = \$8C

Y = screen number (1-3)

Error Output:

CC = carry set on error B = error code (if any)

- SS.DScrn shows the requested screen if the requested screen is the current interactive device.
- The support module for this call is VDGINT.

SS.FScrn

(Function code \$8D). Frees the memory of a screen allocated by SS.AScrn

Entry Conditions:

A = path number

B = \$8D

Y = screen number (1-3)

Error Output:

CC = carry set on error

 $B = error \ code \ (if \ any)$

- Do not attempt to free a screen that is currently on the display.
- SS.FScrn returns the screen memory to the system and removes it from an application's address space.
- The support module for this call is VDGINT.

SS.PScrn

(Function code \$8E). Converts a screen to a different type

Entry Conditions:

```
A = path number
B = $8E
X = new screen type
0 = 640 x 192 x 2 colors (16K)
1 = 320 x 192 x 4 colors (16K)
2 = 160 x 192 x 16 colors (16K)
3 = 640 x 192 x 4 colors (32K)
4 = 320 x 192 x 16 colors (32K)
Y = screen number
```

Error Output:

CC = carry set on error B = error code (if any)

- SS.PScrn changes a screen allocated by SS.AScrn to a new screen type. You can change a 32K screen to either a 32K screen, or a 16K screen. You can change a 16K screen only to another 16K screen type. SS.PScrn updates the current display screen at the next clock interrupt.
- However, if you change a 32K screen to a 16K screen, OS-9 does not reclaim the extra 16K of memory. This means that you can later change the 16K screen back to a 32K screen.
- The support module for this call is VDGINT.

SS.Montr

(Function code \$92). Sets the monitor type

Entry Conditions:

A = path number

B = \$92

X = monitor type

0 = color composite

1 = analog RGB

2 = monochrome composite

Error Output:

CC = carry set on error

B = error code (if any)

- SS.Montr loads the hardware palette registers with the codes for the default color set for three types of monitors. The system default initializes the palette for a composite color monitor.
- The monochrome mode removes color information from the signals sent to a monitor.
- When a composite monitor is in use, a conversion table maps colors from RGB color numbers. In RGB and monochrome modes, the system uses the RGB color numbers directly.
- The support modules for this call are VDGINT and GrfDrv.

SS.GIP

(Function code \$94). Sets the system wide mouse and key repeat parameters

Entry Conditions:

A = path number

B = \$94

X = mouse resolution; in the most significant byte

0 = low resolution mouse

1 = optional high resolution adapter

= mouse port location; in the least significant byte

1 = right port

2 = left port

Y = key repeat start constant; in the most significant byte

= key repeat delay; in the least significant byte

00XX = no repeat FFFF = unchanged

Error Output:

CC = carry set if error

 $B = error \ code$, if any

- Because this function affects system-wide settings, it is best to use it from system configuration utilities and not from general application program.
- The support module for this call is CC3IO.

SS.UMBAR

(Function code \$95). Requests the high level menu manager to update the menu bar.

Entry Conditions:

A = path number

B = \$95

Exit Conditions:

CC = carry set on error

B = error code (if any)

- An application can call SS.UMBar when it needs to redraw menu bar information, such as when it enables or disables menus, or when it completes a window *pull down* and needs to restore the menu.
- The support module for this call is WindInt.

SS.DFPal

(Function code \$97). Sets the default palette register values

Entry Conditions:

A = path number

B = \$97

X = pointer to 16 bytes of palette data

Exit Conditions:

X = unchanged, bytes moved to system defaults

CC = carry set on error

B = error code (if any)

- Use SS.DFPal to alter the system-wide palette register defaults. The system uses these defaults when it allocates a new screen using the DWSet command.
- Because this function affects system wide settings, it is best to use it from system configuration utilities, not general application programs.

SS.Tone

(Function code \$98). Creates a sound through the terminal output device.

Entry Conditions:

A = path number

B = \$98

X = duration and amplitude of the tone

LSB = duration in ticks (60-sec) in the range 0-255

MSB = amplitude of tone in the range 0-63

Y = relative frequency counter (0 = low, 4095 = high)

Exit Conditions:

These are the same as the entry conditions. There are no error conditions.

- This call produces a programmed IO tone through the speaker of the monitor used by the terminal device. You can make the call on any valid path open to term or to a window device.
- The system does not mask interrupts during the time the tone is being produced.
- The frequency of the tone is a relative number ranging from 0 for a low frequency to 4095 for a high frequency. The widest variation of tones occurs at the high range of the scale.

Memory Module Diagrams

Executable Memory Module Format


Relative Address		Use		Check Range
\$00	— Sync Byt	es (\$87,\$CD)		
\$01				
\$02	3.6 1 1	G: (1)		
\$03	Module	Size (bytes)		
\$04				
\$05	— Module 1	Name Offset		header parity
\$06	Type	Language		
\$07	Attributes	Revision		1 1
\$08	Header F	Parity Check		module CRC
\$09	— Execut	tion Offset		
\$0A				
\$0B	— Permanent Storage Size			
\$0C				
\$0D	(Additional optional header extensions located here)			
	Module Body object code, constants, and so on			
	CRC C	heck Value		

Device Descriptor Format

Relative Address	U	se	Check Range
\$00	— Sync Bytes	(\$87,\$CD) —	
\$01			
\$02	— Module Si	ze (bytes) —	
\$03	Modulo	20 (2) (2)	
\$04	— Offset to Mo	ndule Name —	header
\$05	— Offset to Mi	Jaule Halle	parity
\$06	\$F (Type)	\$1 (Lang)	
\$07	Attributes	Revision	Module
\$08	Header Par	rity Check	CRC
\$09	Offset to Fi	le Manager —	
\$0A	Name	_	
\$0B		evice Driver — String	
\$0D	Mode Byte		
\$0E	Davies (lon-twollon	
\$0F	— Device Controller — Absolute Physical Addr. — (24 bit) —		
\$10			
\$11	Initialization Table Size		
12,12+n	(Initializa	tion Table)	
	(Name Strin	gs, and so on)	
	CRC Ch	eck Value	

INIT Module Format

Relativ Addres		Use		Check Range
\$00	— Svnc Bvt	es (\$87,\$CD)		
\$01				
\$02	Module	Size (bytes)		
\$03				
\$04	— Module 1	Name Offset		header
\$05				parity
\$06	\$F (Type)	\$1 (Lang)		
\$07	Attributes	Revision		Module
\$08	Header P	Parity Check		CRC
\$09	— Forced I	Limit of Top		
\$0A		ee RAM		
\$0B				
\$0C	#IRQ Pollin	#IRQ Polling Table Entries		
\$0D	#Device Table Entries			
\$0E	— Offset	to Startup		
\$0F		Name String		
\$10	— Offset to 1	Default Mass		
\$11	Storage Device Name String			
\$12	— Offset to	Rootstran		
\$13	— Offset to Bootstrap Module Name String			
\$14-n	Name	Strings		
	CRC Cl	neck Value		




Standard Floppy Disk Format

Color Computer 3

Physical Track Format Pattern

Format	Bytes (Dec)	Value (Hex)
Header pattern	32	4E
(once per track)	12	00
7	3	F5
	1	FC
	32	4E
Sector pattern	12	00
(repeated 18 times)	3	F5
- 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1	track number (0-34)
	1	side number (0-1)
	1	sector number (1-18)
	1	sector length code (1)
	2	CRC
	22	4E
	12	00
	3	F5
	1	FB
	256	data area
	2	CRC
	24	4E
Trailer pattern (once per track)	N	4E (fill to index mark)



System Error Codes

The error codes are shown in both hexadecimal and decimal. The error codes listed include OS-9 system error codes, BASIC error codes, and standard windowing system error codes.

HEX	ode DEC	Code Meaning
\$01	001	UNCONDITIONAL ABORT — An error occurred from which OS-9 cannot recover. All processes are terminated.
\$02	002	KEYBOARD ABORT — You pressed BREAK to terminate the current operation.
\$03	003	KEYBOARD INTERRUPT — You pressed SHIFT BREAK either to cause the current operation to function as a background task with no video display or to cause the current task to terminate.
\$B7	183	ILLEGAL WINDOW TYPE — You tried to define a text type window for graphics or used illegal parameters.
\$B8	184	WINDOW ALREADY DEFINED — You tried to create a window that is already established.
\$B9	185	FONT NOT FOUND — You tried to use a window font that does not exist.
\$BA	186	STACK OVERFLOW — Your process (or processes) requires more stack space than is available on the system.
\$BB	187	ILLEGAL ARGUMENT — You have used an argument with a command that is inappropriate.
\$BD	189	ILLEGAL COORDINATES — You have given coordinates to a graphics command which are outside the screen boundaries.
\$BE	190	INTERNAL INTEGRITY CHECK — System modules or data are changed and no longer reliable.
\$BF	191	BUFFER SIZE IS TOO SMALL — The data you assigned to a buffer is larger than the buffer.

HEX	ode DEC	Code Meaning
\$C0	192	ILLEGAL COMMAND — You have issued a command in a form unacceptable to OS-9.
\$C1	193	SCREEN OR WINDOW TABLE IS FULL — You do not have enough room in the system window table to keep track of any more windows or screens.
\$C2	194	BAD/UNDEFINED BUFFER NUMBER — You have specified an illegal or undefined buffer number.
\$C3	195	ILLEGAL WINDOW DEFINITION — You have tried to give a window illegal parameters.
\$C4	196	WINDOW UNDEFINED — You have tried to access a window that you have not yet defined.
\$C8	200	PATH TABLE FULL — OS-9 cannot open the file, because the system path table is full.
\$C9	201	ILLEGAL PATH NUMBER — The path number is too large, or you specified a non-existent path.
\$CA	202	INTERRUPT POLLING TABLE FULL — Your system cannot handle an interrupt request, because the polling table does not have room for more entries.
\$CB	203	ILLEGAL MODE — The specified device cannot perform the indicated input or output function.
\$CC	204	DEVICE TABLE FULL — The device table does not have enough room for another device.
\$CD	205	ILLEGAL MODULE HEADER — OS-9 cannot load the specified module because its sync code, header parity, or Cyclic Redundancy Code is incorrect.
\$CE	206	MODULE DIRECTORY FULL — The module directory does not have enough room for another module entry.

HEX	ode DEC	Code Meaning
\$CF	207	MEMORY FULL — Process address space is full or your computer does not have sufficient memory to perform the specified task.
\$D0	208	ILLEGAL SERVICE REQUEST — The current program has issued a system call containing an illegal code number.
\$D1	209	MODULE BUSY — Another process is already using a non-shareable module.
\$D2	210	BOUNDARY ERROR — OS-9 has received a memory allocation or deallocation request that is not on a page boundary.
\$D3	211	END OF FILE — A read operation has encountered an end-of-file character and has terminated.
\$D4	212	RETURNING NON-ALLOCATED MEMORY — The current operation has attempted to deallocate memory not previously assigned.
\$D5	213	NON-EXISTING SEGMENT — The file structure of the specified device is damaged.
\$D6	214	NO PERMISSION — The attributes of the specified file or device do not permit the requested access.
\$D7	215	BAD PATH NAME — The specified pathlist contains a syntax error, for instance an illegal character.
\$D8	216	PATH NAME NOT FOUND — The system cannot find the specified pathlist.
\$D9	217	SEGMENT LIST FULL — The specified file is too fragmented for further expansion.
\$DA	218	FILE ALREADY EXISTS — The specified filename already exists in the specified directory.
\$DB	219	ILLEGAL BLOCK ADDRESS — The file structure of the specified device is damaged.

HEX C	ode DEC	Code Meaning
\$DC	220	PHONE HANGUP-DATA CARRIER DETECT LOST — The data carrier detect is lost on the RS-232 port.
\$DD	221	MODULE NOT FOUND — The system received a request to link a module that is not in the specified directory.
\$DF	223	SUICIDE ATTEMPT — The current operation has attempted to return to the memory location of the stack.
\$E0	224	ILLEGAL PROCESS NUMBER — The specified process does not exist.
\$E2	226	NO CHILDREN — The system has issued a <i>wait</i> service request but the current process has no dependent process to execute.
\$E3	227	ILLEGAL SWI CODE — The system received a software interrupt code that is less than 1 or greater than 3.
\$E4	228	PROCESS ABORTED — The system received a signal Code 2 to terminate the current process.
\$E5	229	PROCESS TABLE FULL — A fork request cannot execute because the process table has no room for more entries.
\$E6	230	ILLEGAL PARAMETER AREA — A fork call has passed incorrect high and low bounds.
\$E7	231	KNOWN MODULE — The specified module is for internal use only.
\$E8	232	INCORRECT MODULE CRC — The CRC for the module being accessed is bad.
\$E9	233	SIGNAL ERROR — The receiving process has a previous, unprocessed signal pending.
\$EA	234	NON-EXISTENT MODULE — The system cannot locate the specified module.

C HEX	ode DEC	Code Meaning
\$EB	235	BAD NAME — The specified device, file, or module name is illegal.
\$EC	236	BAD MODULE HEADER — The specified module header parity is incorrect.
\$ED	237	RAM FULL — No free system random access memory is available: the system address space is full, or there is no physical memory available when requested by the operating system in the system state.
\$EE	238	UNKNOWN PROCESS ID — The specified process ID number is incorrect.
\$EF	239	NO TASK NUMBER AVAILABLE — All available task numbers are in use.

Device Driver Errors

I/O device drivers generate the following error codes. In most cases, the codes are hardware-dependent. Consult your device manual for more details.

	ode DEC	Code Meaning
\$F0	240	UNIT ERROR — The specified device unit doesn't exist.
\$F1	241	SECTOR ERROR — The specified sector number is out of range.
\$F2	242	WRITE PROTECT — The specified device is write-protected.
\$F3	243	CRC ERROR — A Cyclic Redundancy Code error occurred on a read or write verify.
\$F4	244	READ ERROR — A data transfer error occurred during a disk read operation, or there is a SCF (terminal) input buffer overrun.

HEX	ode DEC	Code Meaning
\$F5	245	WRITE ERROR — An error occurred during a write operation.
\$F6	246	NOT READY — The device specified has a <i>not ready</i> status.
\$F7	247	SEEK ERROR — The system attempted a seek operation on a non-existent sector.
\$F8	248	MEDIA FULL — The specified media has insufficient free space for the operation.
\$F9	249	WRONG TYPE — An attempt is made to read incompatible media (for instance an attempt to read double-side disk on single-side drive).
\$FA	250	DEVICE BUSY — A non-shareable device is in use.
\$FB	251	DISK ID CHANGE — You changed diskettes when one or more files are open.
\$FC	252	RECORD IS LOCKED-OUT — Another process is accessing the requested record.
\$FD	253	NON-SHAREABLE FILE BUSY — Another process is accessing the requested file.
\$FE	254	I/O DEADLOCK ERROR — Two processes have attempted to gain control of the same disk area at the same time.

Index

ACIAPAK 8-135	bit map (cont'd.)
active process 2-12 - 2-13	search memory
queue 2-14, 8-98	allocation 8-33
state 2-13 - 2-14	block
address	allocate system
find 64K block 8-85	memory 8-105
lines 2-7	deallocate system
polling 2-17	memory 8-106
space, add module 8-104	map into process
age, process 2-14	space 8-96
alarm, set 8-66	number 2-7
allocate	scroll 8-139
high RAM 8-69	block map, system 8-18
image 8-70	boot
memory 8-76	file, load 5-26
memory blocks 8-67 -	module, link 8-75
8-68	booting OS-9 1-3
process descriptor 8-71	bootstrap
process task number	memory request 8-76
8-73	system 8-75
RAM 8-72	border color, get 8-129
allocation	buffer
bit map 8-7	map (Get/Put) 8-138
map sector 5-1	reserve graphics 8-136
of memory 2-5 - 2-7	button
polling $\tilde{2}$ -17	state, mouse 8-124 -
allocation map	8-125, 8-126
•	timeout, mouse 8-140
clear 8-13	byte
disk 5-3	attribute 5-5
alpha screen	deallocate 64-byte
cursor 8-118	block 8-101
memory 8-117	get from memory
ASM assembler 8-2	block 8-94
assembler, RMA 8-2	get two bytes 8-95
attach a device 8-44 - 8-45	read from path 8-59 -
attribute	8-60
byte 5-5,	store in task 8-109
file 5-12	
	calling process
background color, get 8-129	calling process insert in I/O queue 8-91
	0 -
	insert in I/O queue 8-91
	insert in I/O queue 8-91 terminate 8-14

CC3GO module 2-19	create (cont'd.)
CC3IO 1-2, 6-1	file 8-48 - 8-49
chain 8-8 - 8-9	current
change	data directory 8-51
device operating	execution directory 8-51
parameters 5-23	cursor positioning 4-5
directory 8-46	cyclic redundancy check 3-1 -
character	3-3
read SCF input 6-13	
write, SCF 6-14	DAT
ChgDir 4-4	hardware 8-99
child process 2-13	registers 8-103
create 8-15 - 8-17	to logical address 8-78
clear specified block 8-77	data
click 8-126	available, SCF test
CLOCK 1-2	8-113
clock	directory 8-51
module 1-2, 2-19	stream 4-3
real-time 2-12, 2-17	transfer, pipes 7-1 - 7-3
close	move in memory 8-97
file 4-7	DAT image 8-70
path 8-47, 8-135	conversion 8-78
codes	copy into process
signal 2-15	descriptor 8-102
system error C-1	deallocate block 8-77
command interpreter 1-4	high block 8-86
communication,	low block 8-87
interprocess 2-15	pointer 8-95
compact module directory	DAT task number
8-88	release 8-99
compare strings 8-10	reserve 8-100
compatibility with Level	date
One 2-1	get system 8-40
concurrent execution 7-1 - 7-3	set 8-38
copy external memory 8-11	deadlock 5-13
count, link 2-5	deadly embrace 5-13
counter start, mouse 8-124	deallocate
CPU 2-7	image RAM blocks 8-79
time 4-11	map bits 8-13
CRC	process descriptor 8-80
calculate 8-12	RAM blocks 8-81
validate module 8-111	task number 8-82
value 3-1 - 3-3	default palette registers
create	8-129, 8-149
directory 8-55 - 8-56	delete file 8-50 - 8-51

descriptions, system call 8-2	device driver modules,
descriptor	RBF 5-13 - 5-17
get process 8-20	device interrupt 5-25
path 4-18	SCF 6-17
pointer 8-82	directory
process 2-13	attribute byte 5-5
detach device 8-52	change 8-46
device	disk 5-5
add or remove from	entry, module 8-83
polling table 8-92	get module 8-19
attach 8-44 - 8-45	make 8-55 - 8-56
attachment, verify 8-44	module 2-12, 8-88
- 8-45	disk
controller 5-15	directories 5-5
control registers,	sector read 5-19, 5-21
initialize 6-12	disk allocation map 5-3
control registers, SCF	sector 5-1
6-12	diskette format B-1
descriptor 1-4, 4-2, 4-17,	display
A-2	screen 8-143
detach 8-52	status, get 8-115
modules 5-15	drag 8-126
modules, RBF 5-8 - 5-10	drive head, restore 8-131
modules, SCF 6-6 - 6-8	duplicate path 8-53
name, get 8-115	
open path to 8-57 - 8-58	editing, line 6-1, 8-61
operating parameters,	end-of-file, test for 8-114
RBF 5-23	equate file 2-4
operating parameters,	equivalent logical address
SCF 6-15	8-78
status 2-17 - 2-18, 8-63	error
status, get 8-54	codes, system C-1 - C-6
table 4-2, 8-52	message, write 8-30
terminate, RBF 5-24	print 8-30
terminate, SCF 6-16	exclamation point, pipes 7-1
write to 8-64 - 8-65	7-3
device driver 1-3, 4-11	execute
close path 8-135	mode 5-11
modules 4-8	system calls 8-1 - 8-2
name 5-15	execution
SCF 6-9 - 6-17	directory 8-51
SCF subroutines 6-10 -	offset, module 3-7
6-17	exit calling process 8-14
subroutines, RBF 5-16 - 5-27	external memory, read 8-11

fatal signal 2-13	FORMAT 5-2
file	format
attribute byte 5-12 closing 4-7	device descriptor 4-17, A-2
create 4-4, 5-12, 8-48 -	INIT module A-3
8-49	memory module 3-6 -
deadlock 5-13	3-7, A-1
delete 4-5, 8-50 - 8-51	of device driver
descriptor 5-3 - 5-4	modules 4-10
execute mode 5-11	track 8-132
get pointer position	function
8-114	calls 2-4 - 2-5, 8-1
line reading/writing 4-6	key sense 8-133
load module 8-29	ney belief 0 100
locking 5-12	get
non-shareable 5-12	a byte 8-94
opening 4-4	free high block 8-86
open path 8-57 - 8-58	free low block 8-87
permission bits 5-4	ID 8-22
pipe 7-1 - 7-3	process pointer 8-89
pointer 4-5, 8-62	status 8-54
position, RBF 8-114	Status system calls
read 5-1, 4-5	8-112 - 8-130
sharing 5-12	system time 8-40
size, get 8-114	Get/Put buffer, map 8-138
status, get 8-54, 8-114	GETSTA 8-112
update mode 5-11	SCF 6-15
write line to 8-64 - 8-65	
writing 4-6	Getstats 5-23
file manager 1-3	graphics buffer
modules 4-3	reserve 8-136
name 5-15	select 8-137
find	graphics interface 1-2
64-byte block 8-85	GRFINT 1-2
module directory	
entry 8-84	handler routine, virtual
fire button 8-123 - 8-127	interrupt 8-110
FIRQ 4-12	hard disk shutdown 8-133
interrupt 2-17	hardware
flag, RAM In Use 8-81	controller, SCF 6-9
flip byte 2-17	DAT registers 8-103
floppy diskette format B-1	vector 2-16
foreground color, get 8-129	header
FORK 2-8	module 3-1 - 3-2
fork, child process 8-15 - 8-17	parity 8-111

header (cont'd.)	interface
pattern, floppy	graphics 1-2
diskette B-1	VDG 4-2
high block, memory search	Windint 4-2
8-86	interprocess
high-level	communication 2-15
menu handler 8-122	interrupt
menu manager 8-148	device 5-25
window handler 8-139	enable, SCF 6-12
high-resolution	FIRQ 2-17
mouse adapter 8-126	processing 2-1
screen, allocate 8-142	IOMAN 1-2
hold, button 8-126	IRQ 4-12
I/O	add/remove device from
calls 2-4 - 2-5, 8-1	polling table 8-92
device accessing 2-11	interrupt 2-17
module, delete 8-90	polling 2-17
path, close 8-47	polling table 2-18 service routine 5-25
queue, insert calling	IRQSVC routine 4-13
process 8-91	IRQSV 4-11
I/O system 1-3 - 1-4	11160 A-11
calls 2-1, 8-2	joystick value, get 8-116
system modules 1-1 - 1-4, 4-1	joystick value, get 0-110
transfers 4-8	kernel 1-2
ID	key
return caller's	repeat parameters,
process 8-22	set 8-147
set user 8-39	sense function 8-133
identification sector 5-1	status, get 8-120
image, allocate 8-70	keyboard scan 2-17
INIT 1-2, 5-18	
INIT module 2-17	language byte 3-4
format A-3	line
link 8-75	editing 6-1, 8-61
Init, SFC 6-12	reads 4-6, 8-61
initialization table, SCF	writes 4-6, 8-65
device 6-6 - 6-8	link
initialize device memory 5-18	to memory module 8-23
input buffer, read SCF	- 8-24, 8-28
character 6-13	using module directory
insert process 8-74	entry 8-83
install virtual interrupt	link count 2-5
8-110	decrease 8-42
intercept, set signal 8-21	

load	memory (cont'd.)
boot file 5-26	segment 2-8
byte from memory	memory allocation 2-5 - 2-7
block 8-94	memory block 2-7
from task offset 8-93	find 64K 8-85
module 8-25 - 8-26, 8-29	get byte 8-94
two bytes 8-95	get high 8-86
lock, end-of-lock 5-12	map 8-81
locking	map, search 8-72
files 5-12	memory management 2-1, 2-5
record 5-10 - 5-11	- 2-12
logical	unit 2-7 - 2-8
address space 2-6, 2-8	menu
sector number 5-1	manager, update
LSN 5-2, 5-5	request 8-148
	selection 8-122
macro 2-4	message, write error 8-30
MAKDIR 4-4	MMU registers 2-8
make directory 8-55 - 8-56	mnemonic name, LSN 5-2
manager	MODPAK 8-135
file 1-3	module
random block 1-3	add into address
sequential file 1-3	space 8-104
map	body 3-1 - 3-2
block 8-96	clock 2-19
search allocation 8-33	CRC calculate 8-12
mask byte 2-18	decrease link count 8-42
memory	delete I/O module 8-90
allocate 8-76	device descriptor 5-15
allocate blocks 8-67 -	device driver 4-8
8-68	file manager 4-3
allocate high RAM 8-69	finding 2-12
change process data	format 3-1 - 3-3
size 8-27	link 8-28
deallocate 2-5	link count, decrease
find low block 8-87	8-42
free screen 8-144	linking 1-2
map 2-6	load 8-25 - 8-26, 8-29
module format 3-6 - 3-7,	load and execute
A-1	primary 8-8 - 8-9
module, link 8-23 - 8-24	name 3-3
move data 8-97	RBF-type device
page 2-5	drivers 5-13 - 5-17
pool 8-80	SCF device descriptor
request, bootstrap 8-76	6-6 - 6-8

module (cont'd.)	open
types 3-1, 3-5	file 8-48 - 8-49
unlink 8-41	path 8-57 - 8-58
validate 8-111	operation of memory
module directory 2-5, 2-12	management 2-8 - 2-12
compact 8-88	OS-9
entry, link using 8-83	Level One
find 8-84	compatibility 2-1
get 8-19	modules 1-2
pointer 8-84	scheduler 2-14 - 2-15
module header 3-1 - 3-3, 5-15	OS9P3 2-1
SCF device driver 6-9	module 2-2
monitor, set type 8-146	
mouse	packet size 8-124
button state 8-125	palette, get information 8-127
button timeout 8-140	palette register 8-129
click 8-122	set default 8-149
coordinates 8-127	settings 8-129
countdown 8-125	parameters, mouse and key
countup 8-125	repeat 8-147
parameters, set 8-147	parent
port 8-125	directory 5-3
resolution 8-126	process 2-13
screen position 8-126	parity 8-135
send signal to process 8-	parse name 8-31 - 8-32
141	path
status, get 8-123	close 8-47, 8-135
timeout 8-124	duplicate 8-53
window working area	open 8-57 - 8-58
8-127	read bytes 8-59 - 8-60
move data 8-97	table 4-2
multiplexer 2-8	path descriptor 4-18, 5-5 -
multiprogramming 2-12 -	5-8
2-16	read option section
management 2-1	8-112
multitasking 1-2	SCF 6-2 - 6-6
	write option section
name parse 8-31 - 8-32	8-130
names, compare 8-10	permanent storage size,
next process 8-98	module 3-7
NMI interrupt 2-17	physical address space 2-7
non-shareable file 5-12	pipe file manager 4-3
number, path 8-53	PIPEMAN 1-2 - 1-3, 4-3
	pipes 4-3, 7-1 - 7-3

process descriptor 2-13 -	reference
2-14, 8-102	System Mode calls 8-5 -
deallocate 8-80	8-6
descriptor, allocate 8-71	User Mode system
get 8-20	calls 8-3 - 8-4
pointer 8-82	registers
processes	DAT 8-103
active 2-12	MMU 2-8
data size, change 8-27	release a task 8-99
process ID 2-13	request system memory
return caller's 8-22	8-105
pseudo vector 2-16	reserved memory 2-5 - 2-7
PutStat 4-6	reserve task number 8-100
	return
RAM 2-5 - 2-7	64 bytes 8-101
allocate 8-69, 8-72	system memory 8-106
allocate blocks 8-70	RMA assembler 8-2
allocation 2-13	ROOT directory 5-3, 5-5
blocks, deallocate 8-81	RTS instruction 2-18
blocks, deallocate	SCF
image 8-79	
interrupt vector 2-18	configure serial port 8-134 - 8-135
random	data available test
access 5-1 block file manager 1-3,	8-113
4-3	device control
RBF	registers 6-12
change file size 8-131	Getsta 6-15
format track 8-132	manager 4-3
get file size 8-114	path descriptor 6-2 - 6-6
manager 4-3	terminate device 6-16
tables 5-14 - 5-17	scheduler, OS-9 2-14 - 2-15
read	screen
bytes 8-59 - 8-60	allocate high-
device operating	resolution 8-142
parameters 5-23	convert type 8-145
disk sector 5-19	display 8-143
external memory 8-11	free memory 8-144
input character, SCF	mouse position 8-126
6-13	palette 8-127
line 6-2, 8-61	size, get 8-119
mode 5-11	type 8-128, 8-142, 8-145
system call 6-1	scroll block, install 8-139
real-time clock 2-12, 2-17	search bits 8-33
record locking 5-10	

sector 5-3	single-user
pattern, floppy	attribute 5-12
diskette B-1	bit, files 5-12
seek, file pointer 8-62	size
segment, memory 2-8	of screen 8-119
select graphics buffer 8-137	of window 8-119
send signal 8-34	sleep
sequential character	calling process 8-35
file manager 1-3, 4-3	sleeping process 2-14, 2-16
I/O 6-1	slices, time 2-12
serial port configuration	sound, create 8-150
8-121	speaker, create sound 8-150
service	state
request processing 2-1	active 2-13
routine, IRQ 5-25	of button 8-126
set	sleeping 2-14
alarm 8-66	suspend 4-13
date 8-38	waiting 2-13
IRQ 8-92	static storage address 2-18
priority 8-36	status
process DAT image	display 8-115
8-102	get, SCF 6-15
process task DAT	get mouse 8-123 - 8-127
registers 8-103	of key 8-120
status 8-63	register 2-17
SVC 8-107 - 8-108	set, SCF 6-15
SWI 8-37	status, get 8-54
time 8-38	status, set 8-63
user ID 8-39	store byte in a task 8-109
Setstats 5-23	string, scan input 8-31 - 8-32
Set Status system calls 8-130	strings, compare 8-10
- 8-150	subroutines
shareable bit 3-5 sharing, file 5-12	RBF device driver 5-16 - 5-27
shell 1-4	SCF device drivers 6-10
shutdown hard disk 8-133	- 6-17
signal 2-15 - 2-16	suspend
codes 2-15	bit 4-13 - 4-14
fatal 2-13	state 4-13
from mouse to	SWI, set 8-37
process 8-141	SWI2 instruction 2-4
intercept trap 2-15 - 2-16	symbolic names 2-4 sync byte 3-3
intercept, set 8-21	synonymous path number, return 8-53
send to process 8-34	1614111 0-99

system	terminal, create sound 8-150
block map, get 8-18	terminate
boot 1-3	a device 5-24
bootstrap 8-75	calling process 8-14
date, get 8-40	SCF device 6-16
device, attach 8-44	ticks 4-11
error codes C-1 - C-6	time
initialization 2-1	CPU 4-11
link 8-104	get system 8-40
mode call reference 8-5 -	set 8-38
8-6	sharing 2-11
time, get 8-40	slice 2-16, 2-12
system call	timeout, mouse 8-124
add 8-107 - 8-108	track
descriptions 8-2, 2-4	format 8-132
execution 8-1 - 8-2	restore drive head 8-131
get status 8-112 - 8-130	trailer pattern, floppy
mnemonics names 8-1	diskette B-1
User Mode reference 8-3	trap, signal intercept 2-15 -
- 8-4	2-16
system memory	type
allocate high RAM 8-69	convert screen 8-145
block map 8-81	of screen 8-128
deallocate 8-106	set monitor 8-146
module directory, get	window screen 8-142
8-19	
request 8-105	unlink module 8-41 - 8-42
system modules 1-1 - 1-4	update mode 5-11
. 11	user calls 2-5
table	user ID 2-13
device 8-52	set 8-39
IRQ polling 2-18	User Mode system calls
RBF 5-14 - 5-17	reference 8-3 - 8-4
SCF device descriptor	1.1 1 0 111
6-6 - 6-8	validate module 8-111
VIRQ 2-20	VDG 1-2
task	alpha screen cursor
map 2-12	8-118
offset, load from 8-93	alpha screen memory
register 2-8	8-117
release 8-99	interface 4-2
store byte 8-109 task number 8-73	vector
DAT 8-100	pseudo 2-16
deallocate 8-82	set SWI 8-37 vectoring 2-16
ueanocate 0-04	VECLORING Z-ID

working directory, change verify device attachment 8-44 - 8-45 8-46 video display generator 1-2 write VIRQ 2-19 - 2-20 character to SCF polling table 2-19 - 2-20 output 6-14 virtual interrupt, install disk sector 5-21 path descriptor 8-130 -8-110 8-131 to file or device 8-64 wait write line 8-65 calling process 8-43 state 2-13 - 2-14 line system call 6-2 waiting process 2-13 wildcard 4-6 WINDINT 1-2 Windint interface 4-2 window descriptors 1-2 high-level handler 8-139 pointer location 8-124 screen, type 8-142 size, get 8-119 type 8-145 working area, mouse 8-127